



**MD100**  
**Atoll**  
**Electronics**  
**CD Player**



 
# ATOLL ELECTRONIQUE MD100 Atoll Electronics CD Player Owner's Manual

[Home](#) » [ATOLL ELECTRONIQUE](#) » ATOLL ELECTRONIQUE MD100 Atoll Electronics CD Player Owner's Manual



## Contents

- [1 ATOLL ELECTRONIQUE MD100 Atoll Electronics CD Player](#)
- [2 Product Usage Instructions](#)
- [3 Safety Instruction](#)
- [4 CONNECTING AND DETAILS OF FUNCTIONS](#)
- [5 REMOTE CONTROL](#)
- [6 COMPATIBILITY](#)
- [7 CLEANING](#)
- [8 TECHNICAL DATA](#)
- [9 WARRANTY CONDITIONS](#)
- [10 Documents / Resources](#)
  - [10.1 References](#)
- [11 Related Posts](#)

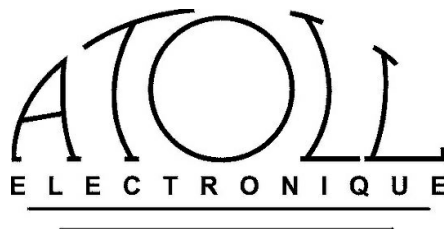

**ATOLL ELECTRONIQUE MD100 Atoll Electronics CD Player**



## Product Usage Instructions

### Connecting:

1. Outputs left (L) and right (R) channels.
2. Coaxial output (to a converter D/A).
3. Optical output (to a converter D/A).
4. Power input.
5. ON/SLEEP power switch.

### Details of Functions:

1. Disc tray.
2. Open/close button.
3. Play & Pause.
4. **Stop**: stop functions Play & Repeat.
5. Display.
6. Previous track.
7. Next track.
8. **SLEEP**: cancels all functions.

### Remote Control:

Keys 8, 9, 11, 12 & 13 have the same functions as on the front panel.

### Additional Functions:

- Rear fast search key.
- Forward fast search key.
- **TIME**: displays the running time of each track.
- **REPEAT mode**: repeat a single track or the entire disc.
- **SHUFFLE**: play tracks in random order.

### FAQ:

- **Compatibility:**

This player can play CD and CD-R discs. Compatible formats: MP3, WMA, AAC.

- **Warranty Conditions:**

The warranty period is two years from the date of purchase. Ensure correct usage to avail of warranty.

- **Cleaning:**

Switch off the device before cleaning. Use a soft, dry rag. Avoid harsh cleaning agents or cleaning inside the appliance.

- **Advice:**

- Allow the device to warm up for optimal performance.
- Avoid switching off and on frequently for ideal temperature maintenance.
- Use high-quality connection cords for best results.

You have just bought a CD player with exceptional audiophile performance. We really thank you for your confidence in our products. To get the best part of your CD player, please read carefully this manual.

## **ATOLL ELECTRONIQUE®**

is a French Company that designs, manufactures, and commercializes all its products.

## **Safety Instruction**

### **CAUTIONS**

- Do not make any connections when your device is powered on.
- Put your CD player in a dry and well ventilated place, far from a source of heat.
- Avoid putting anything on your CD player.
- Avoid any shortcuts.
- Strictly respect polarity + & – and switch left & right.
- In the event of a problem, never attempt to repair, disassemble, or rebuild the device, as this may cause severe electric shock.
- Do not put your CD player too close from a Tuner because of disagreement in HF reception.

### **ADVISES**

- To optimize the performance of your device, you should switch it on at least half an hour before any listening, the time for the output stage to reach its ideal working temperature.
- Your device will give you optimal listening quality after this time-lapse.
- Between two uses, it is, therefore, preferable to let the device in the standby position so that it remains at its optimum temperature.
- At night or when you leave your home, it is best to use the main switch to turn off the device.
- To optimize the sound quality of your system, we recommend that you choose good-quality connection cords.  
Do not hesitate to ask your specialist dealer for advice.

## **CONNECTING AND DETAILS OF FUNCTIONS**



1. Outputs left (L) and right (R) channels.
2. Coaxial output (to a converter D/A).
3. Optical output (to a converter D/A).
4. Power input.
5. ON/SLEEP power switch.

### DETAILS OF FUNCTIONS



6. Disc tray.
7. Open/close button.
8. Play & Pause.
9. Stop: stop functions Play & Repeat.
10. Display.
11. Previous track.
12. Next track.
13. SLEEP: this key cancels all functions.

### REMOTE CONTROL

 
Keys 8, 9, 11, 12 & 13 have the same functions as on the front panel.

- **14)** Rear fast search key.
- **15)** Forward fast search key.
- **16) TIME:** displays the running time of each track. With one press, display the remaining time of the track.
- **17) REPEAT mode:** (This function is also available while reading the disc).


Press on REP to choose the repeat mode:

- **LOOP ONE:** makes a repetition of the same track. Select the track then press PLAY to valid. Press REP to confirm the repetition of the track.

- **LOOP ALL:** makes a repetition of the complete disc. While reading the disc, press 2 times REP to activate the repetition of the disc.

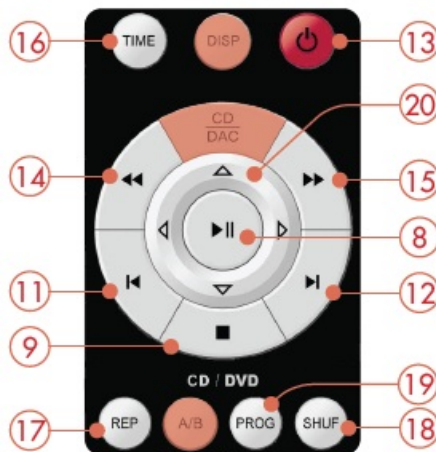

 - STOP key cancels REPEAT modes. Displays LOOP OFF.



- **18) SHUFFLE:** press on SHUF. The display shows SHUFFLE for 1 second and Disc goes on the play. All tracks will be played once in random mode. Press STOP to cancel the random play and displays show SHUF OFF.

#### • 19) PROGRAM:

- Press on PROG. Display shows on the Left the number of selected tracks and on the Right the choice of tracks.
- Choose the first track of the program with the selection key 20. Confirm by pressing on PROG. Select all tracks needed for the program, using the same procedure.
- The display shows some tracks (on the Left) and the total time of the program. Press PLAY to start playing the program.
- Press STOP 2 times to cancel the program.

**Combination:** it is possible to combine a program with the REPEAT function (display shows LOOP) or SHUFFLE functions (display shows SHUF).

- **20) Arrows, Left & Right keys:** allows selection of tracks in the program.

## COMPATIBILITY

This player can play CD and CD-R discs. Type of formats played: MP3-WMA-AAC.

## E.C. MARKING

E.C. marking certified the conformity with low tension directive 73/23/CEE, directive CEM 89/336/CEE, and national transpositions.

## CLEANING

Before any cleaning, switch off your device. Use a soft and dry rag to clean up the appliance. Never use acetone, white-spirit, ammoniac, or any kind of product containing an abrasive agent. Never try to clean up inside the appliance.

## TECHNICAL DATA

- Power supply: 30 VA
- Total of capacitors: 10 411  $\mu$ F
- Dynamic: 112 dB
- Output Level: 2,0 Vrms
- Switch OFF consumption: 0 W
- SLEEP power consumption (preheating): 2 W
- ON consumption: 5 W
- Signal/Noise ratio: 112 dB
- Distortion at 1 kHz: 0,002%
- Bandwidth: 5 Hz – 20 kHz
- Rising time: 2,0  $\mu$ s
- Digital/analog converter: PCM5102
- Dimensions: 320×210×83 mm
- Weight: 3 Kg

Data subject to change

## WARRANTY CONDITIONS

The guarantee is two years period from the date of purchase. We recommend you ask your dealer to fill the guarantee and to conserve it. The guarantee is only available for appliances that have been used correctly.

## WARRANTY FORM

**WARRANTY FORM ~ CD PLAYER - MD100**

*To present to your dealer with the invoice when returning back the appliance:*

ATOLL ELECTRONIQUE®  
Bd des Merisiers  
50370 BRECEY  
FRANCE

*Date of purchase:*

*Place of purchase:*

*Buyer signature:*

Dealer Stamp

[www.atoll-electronique.com](http://www.atoll-electronique.com).

## Documents / Resources



**[ATOLL ELECTRONIQUE MD100 Atoll Electronics CD Player](#)** [pdf] Owner's Manual  
MD100 Atoll Electronics CD Player, MD100, Atoll Electronics CD Player, Electronics CD Player, CD Player, Player

## References

- [User Manual](#)

[Manuals+](#), [Privacy Policy](#)

This website is an independent publication and is neither affiliated with nor endorsed by any of the trademark owners. The "Bluetooth®" word mark and logos are registered trademarks owned by Bluetooth SIG, Inc. The "Wi-Fi®" word mark and logos are registered trademarks owned by the Wi-Fi Alliance. Any use of these marks on this website does not imply any affiliation with or endorsement.