



ATOLL ELECTRONIQUE MD100 CD Player Owner's Manual

[Home](#) » [ATOLL ELECTRONIQUE](#) » ATOLL ELECTRONIQUE MD100 CD Player Owner's Manual 

Contents

- [1 ATOLL ELECTRONIQUE MD100 CD Player](#)
- [2 CONNECTING](#)
- [3 REMOTE CONTROL](#)
- [4 COMPATIBILITY](#)
- [5 CLEANING](#)
- [6 TECHNICAL DATA](#)
- [7 CAUTIONS](#)
- [8 ADVISES](#)
- [9 Documents / Resources](#)
- [10 Related Posts](#)



ATOLL ELECTRONIQUE MD100 CD Player



CONNECTING

1. Outputs left (L) and right (R) channel.



2. Coaxial output (to a converter D/A).
3. Optical output (to a converter D/A).
4. Power input.
5. Power switch ON/OFF.



6. Disc tray.
7. Open/close button.
8. Play & Pause.
9. Stop: stop functions Play & Repeat.
10. Display.
11. Previous track.
12. Next track.
13. Stand-by: stand-by cancels all functions.

REMOTE CONTROL

- Keys 8, 9, 11, 12 & 13 have the same functions as on the front panel.
- Rear fast search key.
- Forward fast search key.
- TIME: displays running time of each track. With one press, display the remaining time of the track.
- REPEAT mode: (This function is also available while reading the disc).

Press on REP to choose the repeat mode:

- LOOP ONE: makes a repetition of the same track. Select the track then press PLAY to valid. Press REP to confirm repetition of the track.
- LOOP ALL: makes a repetition of the complete disc. While reading the disc, press 2 times REP to activate repetition of the disc.
- STOP key cancels REPEAT modes. Displays LOOP OFF.

- **SHUFFLE:** press on SHUF. Display shows SHUFFLE during 1 second and Disc goes on play. All tracks will be played once in random mode. Press STOP to cancel the random play and displays shows SHF OFF.
- **PROGRAM:**
 - Press on PROG. Display shows on the Left the number of selected tracks and on the Right the choice of tracks.
 - Choose the first track of the program with the selection keys 20. Confirm by pressing on PROG. Select all track needed for the program, using the same procedure.
 - Display shows number of tracks (on the Left) and the total time of the program. Press PLAY to start playing the program.
 - Press STOP 2 times to cancel the program.
 - Combination: it is possible to combine a program with the REPEAT function (display shows LOOP) or SHUFFLE functions (display shows SHUF).
- Arrows, Left & Right keys: allows selection of tracks in the program.

COMPATIBILITY

This player can play CD and CD-R discs. Type of formats played: MP3-WMA-AAC.

E.C. MARKING

E.C. marking certified the conformity with low tension directive 73/23/CEE, directive CEM 89/336/CEE and national transpositions.

GUARANTEE

The guarantee is two years long from date of purchase. We recommend you to ask your dealer to fill the guarantee and to conserve it. The guarantee is only available for appliance which have been use correctly.

CLEANING

Before any cleaning, switch off your device. Use a soft and dry rag to clean up the appliance. Never use acetone, white-spirit, ammoniac, or any kind of product containing an abrasive agent. Never try to clean up inside the appliance.

TECHNICAL DATA

- **power Supply:** 15 VA
- **Total of capacitors:** 0 411 μ F
- **Dynamic:** 112 dB
- **Output Level:** 1 kHz:
- **Signal/Noise Ratio:** 112 dB
- **Distortion at 1 kHz:** 0,002%
- **Bandwidth:** 5 Hz – 20 kHz
- **Rising Time:** 2,0 μ s
- **Digital/analog Converter:** PCM5102
- **Dimensions:** 0,002%
- **Weight:** 3,0 Kg

CAUTIONS

- Do not make any connections when your device is powered on.
- Put your CD player in a dry and well-ventilated place, far from a source of heat.
- Avoid putting anything on your CD player.
- avoid any short-cut.
- Strictly respect polarity + & and switch left & right.
- In the event of a problem, never attempt to repair, disassemble, or rebuild the device, as this may cause severe electric shock.
- Do not put your CD player too close to a Tuner because of disagreement in HF reception.

ADVISES

- To optimize the performance of your device, you should switch it on at least half an hour before any listening, the time for the output stage to reach its ideal working temperature.
- Your device will give you optimal listening quality after this time-lapse.
- Between two uses, it is, therefore, preferable to let the device in the standby position so that it remains at its optimum temperature.
- At night or when you leave your home, it is best to use the main switch to turn off the device.
- To optimize the sound quality of your system, we recommend that you choose good-quality connection cords.
Do not hesitate to ask your specialist dealer for advice.

You have just bought a CD player with exceptional audiophile performance. We really thank you for your confidence in our products. To get the best part of your CD player, please read carefully this manual.

YOU WILL FIND ENCLOSED

- A CD player.
- A remote control (with 2 batteries Lithium CR2025).
- A power lead.
- A modulation interconnect.
- This manual with the certificate of guarantee.

GUARANTEE ~ CD PLAYER – MD100

To present to your dealer with the invoice when returning back the appliance:

ATOLL ELECTRONIQUE®

Bd des Merisiers

50370 BRECEY

FRANCE

Documents / Resources



[ATOLL ELECTRONIQUE MD100 CD Player](#) [pdf] Owner's Manual
MD100, CD Player, MD100 CD Player

