




ATRIX GSCTR01 Bluetooth Gaming Controller User Guide

[Home](#) » [ATRIX](#) » ATRIX GSCTR01 Bluetooth Gaming Controller User Guide

atrix

GSCTR01 Bluetooth Gaming Controller User Guide

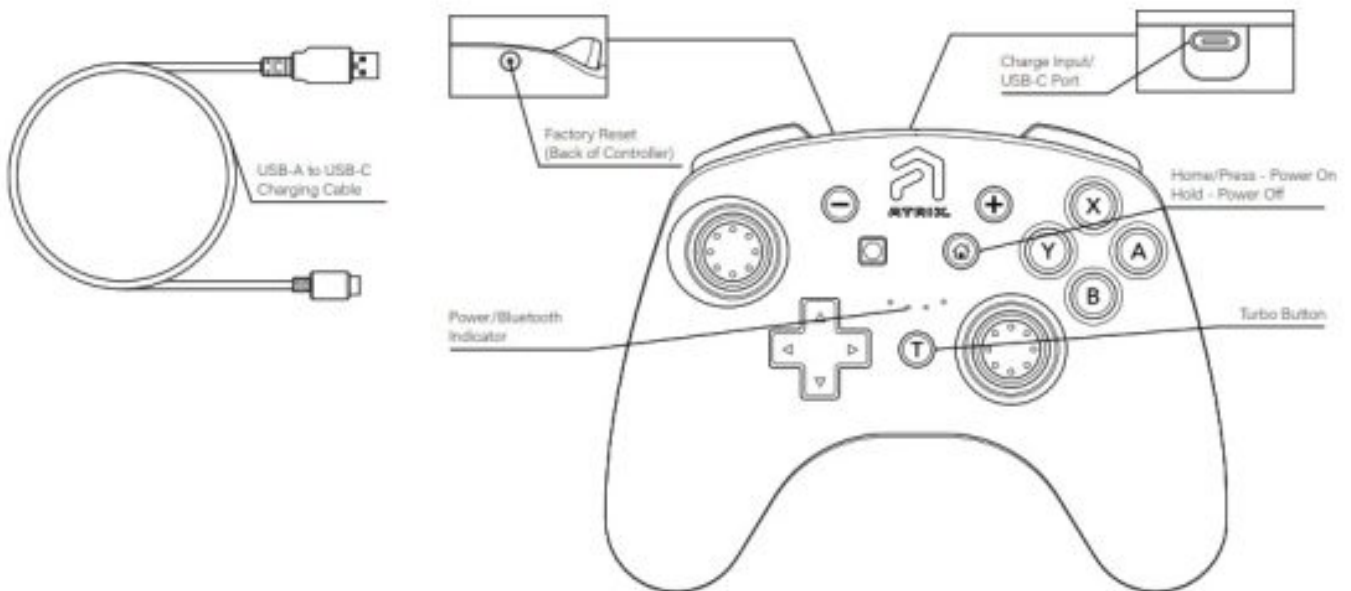

Contents [[hide](#)

- [1 Need Help?](#)
- [2 What's Included](#)
- [3 LED Indicators](#)
- [4 Pairing to Switch](#)
- [5 Bluetooth Pairing](#)
- [6 Using the Controller Wired](#)
- [7 Charging the Controller](#)
- [8 Recalibrating the Motion Sensor](#)
- [9 Troubleshooting](#)
- [10 Using the Turbo Function](#)
- [11 Factory Reset the Controller](#)
- [12 SAVE THESE INSTRUCTIONS](#)
- [13 Documents / Resources](#)
- [14 Related Posts](#)

Need Help?

Have any questions or comments? Need help getting set up?

Contact us at <http://slicare.gamestopicom>

What's Included

- Bluetooth Gaming Controller
- USB-A to USB-C Charging Cable

LED Indicators

- Lights Flashing – Powered On
- Single Light Flashes Rapidly – Battery Needs to Charge
- Lights Flashing Slowly – Charging

Pairing to Switch

- On your Switch, from the home page, enter the System Settings > Controllers and Sensors > Select Pro Controller Wired Communication.
- On the controller, Hold then" and press the "home' button at the same time to enter pairing. The LEDs will race from right to left when it is ready to pair.
- The Switch will auto-detect the controller and connect after about 5 seconds. The controller is connected when the indicator light turns solid.

Bluetooth Pairing

- On the controller, Hold the button and press *home' button at the same time to enter pairing. The first two Bluetooth indicator lights will flash.
- Pair with "Mix Controller or on your device.
- When pairing is successful the two Bluetooth indicator lights will turn solid.

- When PC gaming is sure to use the in-game settings for controller set up. This can typically be found in the settings section of the software.

Note: This controller is compatible with Android 4.0 or newer and just for HID (Human Interface Device) gaming, it is not compatible with iPhone.

Using the Controller Wired

- To use the Controller wired for PC gaming, plug the USB-C end of the cable into the controller and plug the USB-A end into your computer.

Charging the Controller

- When the controller needs to charge all of the power indicator lights will flash twice for one second.
- Plug the charging cable into the charge input on the controller, the power indicator will flash slowly when it is charging.
- When the battery is fully charged the indicator light will turn off. Note: The controller will enter rest mode after it has not been used for more than 5 minutes.

Recalibrating the Motion Sensor

- To recalibrate the motion sensor, turn the controller off and press the “-” button and “Er button at the same time.
- All four LEDs will start to flash alternatively, when this happens place the controller on a sturdy flat surface and press the “+” button.
- The calibration will automatically complete after 3 seconds

Troubleshooting

- If the controller will not turn on, it may be out of battery. Re-charge it and try again.
- If the controller is disconnecting make sure you are not too far away and there is nothing blocking the controller from the device it is connected to.
- If the controller joysticks are drifting turn the controller on and off to reset it.
- The controller is not capable of hot-swapping, when switching function modes start with the controller turned off.
- If you are having issues where the controller connection drops intermittently you may be experiencing interference. The controller is designed to use the 2.4GHz wireless range. Many other devices such as wifi routers, smart thermostats, and wireless speakers may also be using this frequency in your home and causing interference. Here are some options to reduce the chance of interference:
 - A.Reduce the number of nearby wireless devices in your gaming area.
 - B.Try temporarily disconnecting your wifi or unplugging it and then play a game offline to see if the issue still persists.
 - C.Try and maintain at least a 5ft distance of a will router or satellite router from the gaming area.

Using the Turbo Function

- To use the turbo function hold the button you would like to enter rapidly and at the same time press the “turbo” button.
- hold the button and press the “turbo” button at the same time again to turn the function off.

Factory Reset the Controller

- If you're having issues disconnecting the controller from a device, it can be a factory reset.
- On the back right side of the controller there is a small hole, use a paperclip to press the button inside. It will click when pressed.
- This will reset the controller, it will need to be reconnected to any device it was previously connected to.

FCC ID: 2A023-GSCTRO1 Model: GSCTRO1 Input: DC5V ——— 500mA Made in China

Important Safety Instructions

WARNING When using this product, basic precautions should always be followed, including the following:

Read these instructions carefully.

All cautions and warnings should be followed.

Protect equipment from humidity.

Do not use chemical detergents to clean your device, use a soft dry cloth.

To avoid damage from electrical peaks unplug the device when it is not in use.

If one of the following situations arise, the equipment has to be checked by qualified service personnel:

- Liquid has penetrated into the equipment.
- Equipment has been exposed to humidity.
- Equipment has been dropped and/or is damaged.
- Equipment has obvious signs of breakage.
- Equipment does not work well or you cannot get it working according to the user's manual.

SAVE THESE INSTRUCTIONS

This device complies with Part 15 of the FCC rules. Operation is subject to the following two conditions: 1) this device may not cause harmful interference, and 2) this device must accept any interference received, including interference that may cause undesired operation.

Warning: Changes or modifications to this unit not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment.

NOTE: This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to Part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses, and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications.

However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:


- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is

- Consult the dealer or an experienced radio/TV technician for help.

The device has been evaluated to meet general RF exposure requirements. The device can be used in portable exposure conditions without restriction.

atrix. Geeknet, Inc. 625 Westport Pkwy, Grapevine, TX 76051 Phone: 855-474-7717

Documents / Resources

	<p>ATRIX GSCTR01 Bluetooth Gaming Controller [pdf] User Guide GSCTR01, 2AO23-GSCTR01, 2AO23GSCTR01, GSCTR01 Bluetooth Gaming Controller, Bluetooth Gaming Controller, Gaming Controller, Controller</p>
---	---