



AUDI A8 EVAP Temperature Sensor Instructions

[Home](#) » [Audi](#) » AUDI A8 EVAP Temperature Sensor Instructions 



Audi A8 2010 ►
Heating, Ventilation and Air Conditioning – Edition 09.2013


Contents

- [1 A8 EVAP Temperature Sensor](#)
- [2 Documents / Resources](#)
- [3 Related Posts](#)

A8 EVAP Temperature Sensor

- Disconnect the connector -A-.
- Turn the sensor -B- 90° in direction of -arrow- and remove it.

Installing

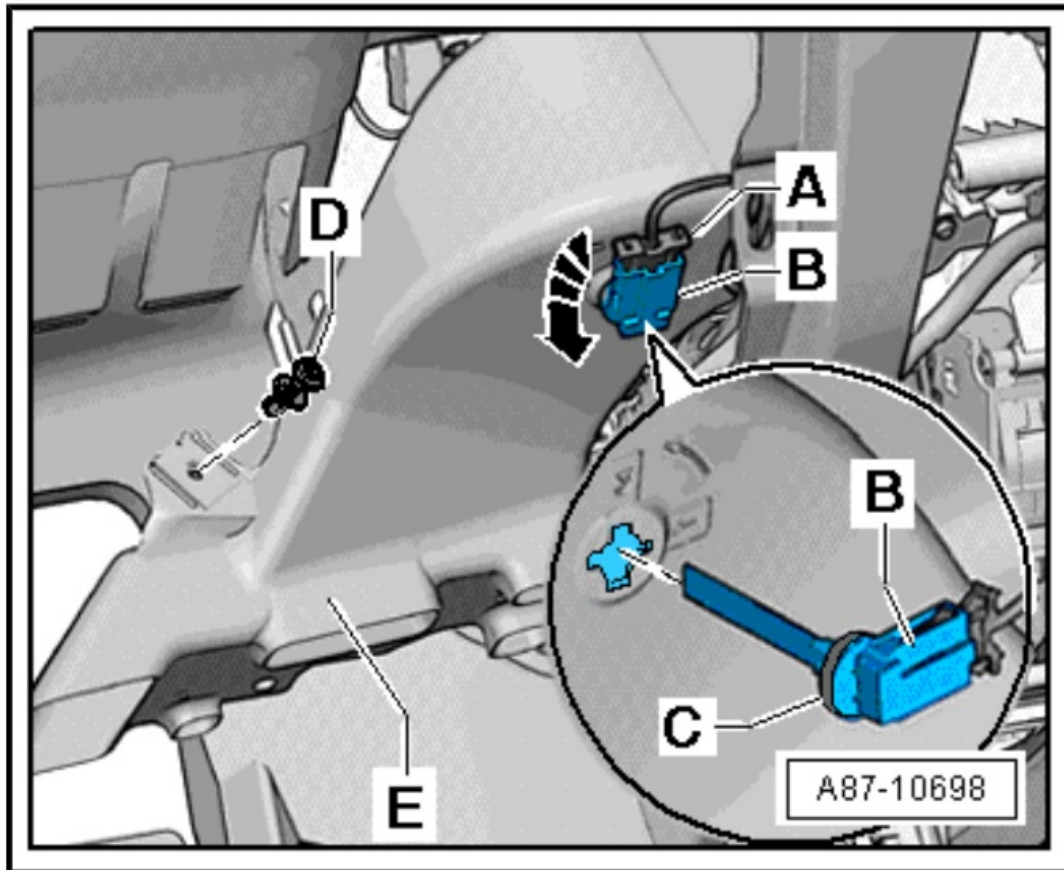


Installation is carried out in the reverse order while observing the following.

- Check the seal -C- for damage and proper seating.
- Reinstall the removed parts in the opposite order.
- Check the event memory of the front Air Conditioning (A/C) display control head, the Climatronic Control Module – J255- ,and erase any displayed malfunctions see Vehicle Diagnostic Tester in the “Guided Fault Finding” function.

Right Footwell Vent Temperature Sensor – G262- , Removing and Installing

Removing

- Move the right front seat (front passenger seat) as far back as possible.
- Turn off the ignition.
- Remove the glove compartment, refer to ⇒ Body Interior; Rep. Gr. 68 ; Storage Compartments and Covers; Glove Compart- ment, Removing and Installing .
- Remove the right footwell vent (front passenger side) -E-, refer to ⇒ “8.4 Front Passenger Side Footwell Vent, Removing and Installing”, page 608 .
- Disconnect the connector -A-.
- Turn sensor -B- 90° in direction of -arrow- and remove it from right footwell vent -E- .

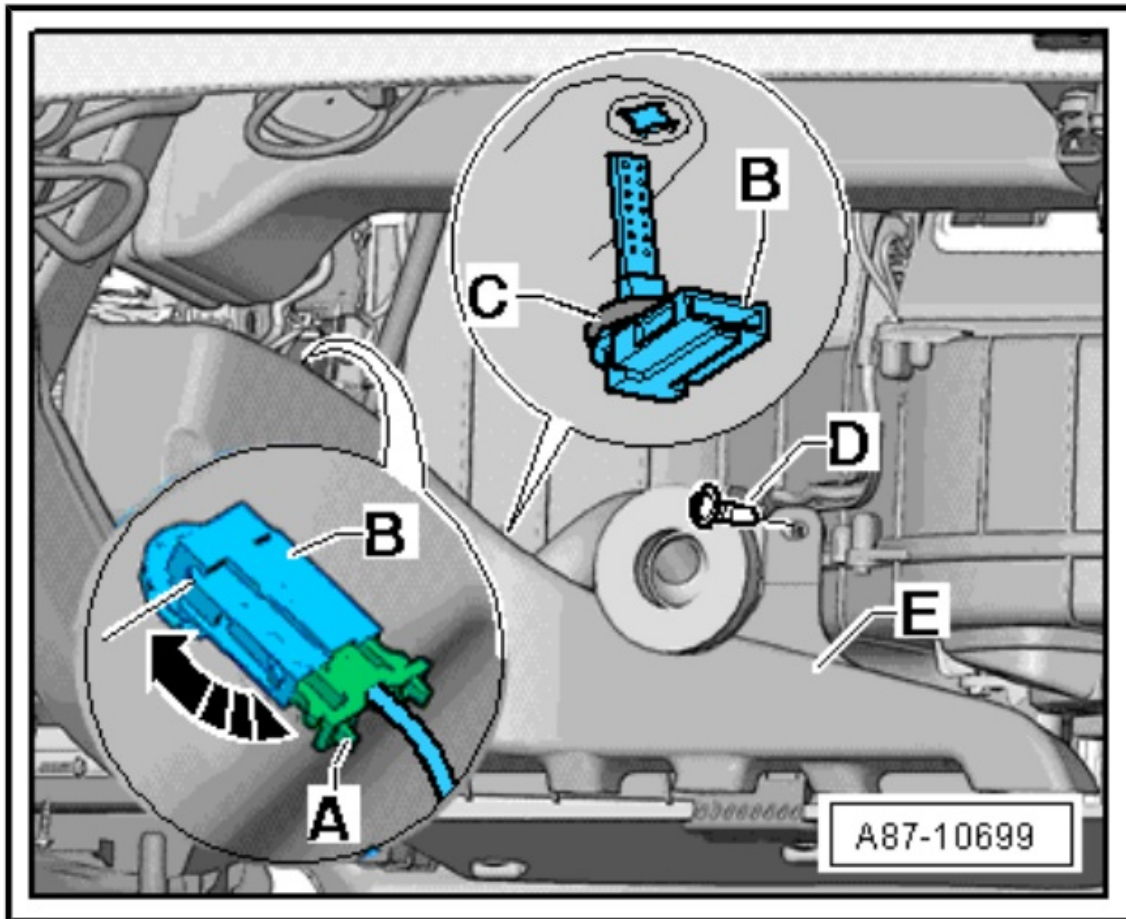

Installing


Installation is carried out in the reverse order while observing the following.

- Check the seal -C- for damage and proper seating.
- Install the removed parts in the opposite order.
- Check the event memory of the front Air Conditioning (A/C) display control head, the Climatronic Control Module – J255- , and erase any displayed malfunctions see Vehicle Diagnostic Tester in the “Guided Fault Finding” function.

Evaporator Vent Temperature Sensor G263- , Removing and Installing

Removing

- Move the right front seat (front passenger seat) as far back as possible.
- Turn off the ignition.
- Remove the glove compartment, refer to ⇒ Body Interior; Rep. Gr. 68 ; Storage Compartments and Covers; Glove Compart- ment, Removing and Installing .
- Remove the right (front passenger) footwell vent, refer to ⇒ “8.4 Front Passenger Side Footwell Vent, Removing and Installing”, page 608 .

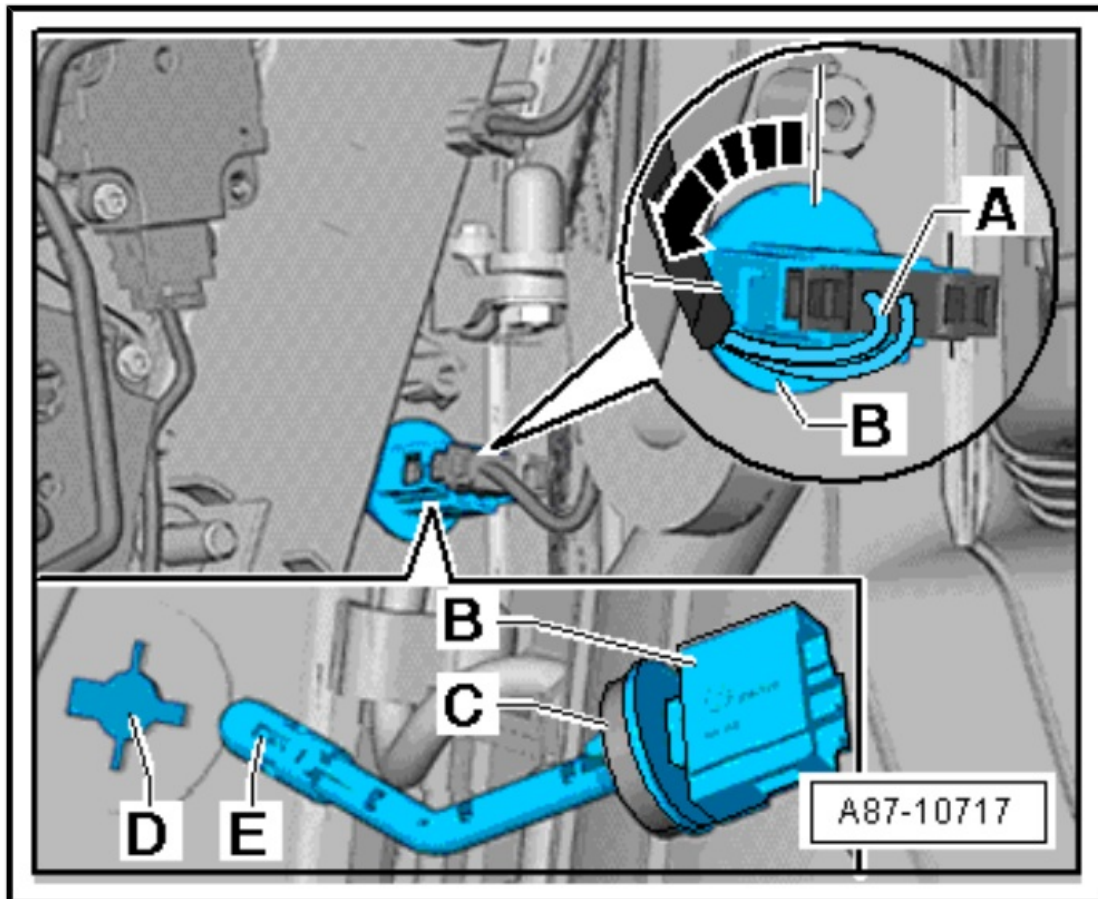

- Disconnect the connector -A-.
- Turn sensor -B- 90° in direction of -arrow- and remove it from the A/C unit mount -D-.

Installing

Installation is carried out in the reverse order while observing the following.

- Check the seal -C- for damage and proper seating.
- Insert the evaporator vent temperature sensor -G263- -B- into the Air Conditioning (A/C) unit mount -D-.
- Turn the evaporator vent temperature sensor -G263- -B- 90° against the direction of the -arrow- to secure it in the mount.
- Reinstall the removed parts in the opposite order.
- Check the event memory of the front A/C display control head, the Climatronic Control Module – J255- , and erase any displayed malfunctions see Vehicle Diagnostic Tester in the “Guided Fault Finding” function.

Left Rear Upper Body Vent Temperature Sensor – G635- , Removing and Installing

Removing


- Move the left front seat (driver seat) all the way to the front.
- Turn off the ignition.
- Remove the left rear seat or rear bench seat, refer to ⇒ Body Interior; Rep. Gr. 72 ; Rear Seats; Seat Bench/Single Seat,

Removing and Installing .

- Remove the rear left door sills, refer to ⇒ Body Interior; Rep. Gr. 70 ; Passenger Compartment Trim; Sill Panel Strip, Re- moving and Installing .
- Remove the of the B-pillar and the left C-pillar lower trim, refer to ⇒ Body Interior; Rep. Gr. 70 ; Passenger Compartment Trim; B-Pillar Trim, Removing and Installing , and ⇒ Body Interior; Rep. Gr. 70 ; Passenger Compartment Trim; C-Pillar Trim, Removing and Installing .



Documents / Resources

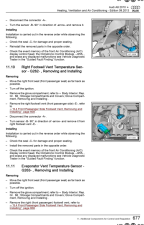	<p>AUDI A8 EVAP Temperature Sensor [pdf] Instructions A8 EVAP Temperature Sensor, A8 EVAP, Temperature Sensor, EVAP Sensor, Sensor</p>
---	---

[Manuals+](#)