




# AUDIBAX Control 8 192 Channel DMX Controller User Manual

[Home](#) » [AUDIBAX](#) » AUDIBAX Control 8 192 Channel DMX Controller User Manual 

## Contents

- [1 AUDIBAX Control 8 192 Channel DMX Controller](#)
- [2 PROGRAMMING](#)
- [3 Main Features](#)
- [4 Technical specifications](#)
- [5 INSTRUCTIONS FOR USE](#)
- [6 MANUAL OPERATION](#)
- [7 Documents / Resources](#)
- [8 Related Posts](#)



## AUDIBAX Control 8 192 Channel DMX Controller



Please read the manual before using the product.

## PROGRAMMING

Power on the unit, it will be in MANUAL mode. Press PROGRAM 2 seconds. The corresponding LED will flash. SCENE and CHASE will be ready to be programmed. To return to play mode, press PROGRAM once more. The

led will then turn off.

## **AUTO**

- In playback mode (RUN) press Auto/Del, and the led will turn on, indicating that the AUTO/RUN mode is activated.
- Press this key to program SCENEs or CHASEs when in PROGRAM mode.

## **TAP SYNC**

- In AUTO RUN mode, the playback speed will be recorded by the last two button presses.
- In program mode, select the screen between STEP and BANK.

## **BLACKOUT**

Press this button to disable all data output (no other functions) – Press it again to exit this mode and send DMX data again.

## **DMX OUT**

- DMX512 data output

## **DC INPUT**

- DC9V 12V ,300

## **PROGRAMMING SCENES**

- Press PROGRAM 3 seconds. The corresponding led will flash, indicating that the unit is in PROGRAM mode.
- Press the SCANNER button (or buttons, if you want to program several devices at the same time). Adjust the faders to your liking.

## **Main Features**

- 192 DMX Channels.
- 30 Banks, each with 8 programmable scenes.
- 8 Faders for real-time adjustment.
- AUTO mode is controlled by TAP SYNC and SPEED.
- LED display with 4 digits. The first digit shows CHASE and the second SCENE. The third and fourth digit shows the banks. The second, third, and fourth digits show steps from 0 to 255 or time.
- Manual Blackout.
- Fade Time Control (FADE TIME)

## **Technical specifications**

1. Power: DC+9-12V

2. Output: AC230V 50Hz (AC120V 60Hz)300Ma ,DC9V300Ma.
3. Measurements
4. Weight

## **INSTRUCTIONS FOR USE**

1. There are 192 DMX channels available for each scene.
2. 8 scenes can be programmed per bank. When a scene is activated, it will play along with the others in that bank in a loop.
3. Select the bank by pressing the UP and DOWN buttons. There are 30 banks available, only one is selectable at a time.
4. Scenes can run automatically, and their duration depends on the tempo tapped by TAP SYNC., Scenes are executed under music or NOTE triggering, also press a scene button by hand to run scenes.
5. 6 selectable chases are available, each with 240 scenes.

### **SCENES**

While Control 8 is in PROGRAM mode, press PROGRAM for 2 seconds and it will enter MANUAL mode. If there are no scenes programmed in a bank, they cannot be played. Only those that have been previously programmed will be executed.

## **MANUAL OPERATION**

Select a bank, and press SCENE to play a scene. If you press a SCANNER button, it will be registered to record in another SCANNER.

### **AUTORUN**

Press AUTO/DEL and the corresponding led will light up. Press TAP SYNC/DISPLAY, and after waiting for a moment, press it again. This interval is assigned to the speed of the Auto Run mode, with a limit of 10 minutes. If there are more than two clicks, only the last two will be taken as a reference.

### **Scene buttons**

Press a scene button to activate or store it, and the second digit of the display will show the scene between 1 and 8.

### **Page Selection**

Press the PAGE SELECTOR button to select between channels 1-8 and 9-16 of each SCANNER.

### **Fader SPEED**

Move the fader to adjust the speed of the CHASE.


### **Fader TIME SLIDER**

Move this fader to adjust the fade time.

### **BANK ( UP or DOWN ) buttons**

Press UP or DOWN to increase or decrease the bank number, which is shown in the third and fourth characters of the display (01 to 30).

## **Documents / Resources**

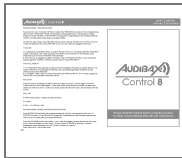

**[AUDIBAX Control 8 192 Channel DMX Controller](#)** [pdf] User Manual  
Control 8 192 Channel DMX Controller, Control 8, 192 Channel DMX Controller, DMX Controller, Controller