



AudioControl AC-LGD 20 OHM Load Generating Device and Signal Stabilizer User Manual

[Home](#) » [AudioControl](#) » AudioControl AC-LGD 20 OHM Load Generating Device and Signal Stabilizer User Manual 

AudioControl®

Making Good Sound Great™

AC-LGD 20 OHM

**Load Generating Device and Signal Stabilizer
User Manual**



Contents

- [1 AC-LGD 20 OHM Load Generating Device and Signal Stabilizer](#)
- [2 What is a Load Generating Device?](#)
- [3 Important](#)
- [4 What's Included?](#)
- [5 Documents / Resources](#)
- [6 Related Posts](#)

AC-LGD 20 OHM Load Generating Device and Signal Stabilizer

FOR OEM SOUND SYSTEMS REQUIRING A SPEAKER LOAD PROVIDES STABILITY TO OEM SOUND SYSTEMS IDEAL FOR NON-AMPLIFIED DODGE®, CHRYSLER®, JEEP®, MASERATI® MAXIMUM INPUT 15 VRMS (50 WATTS)

What is a Load Generating Device?

Today's factory amplifiers feature built-in protection circuits that can mute some or all audio outputs when the factory speakers are removed. The AC-LGD 20 has been designed to generate load and stabilize signals from amplified factory systems to ensure the best possible audio.



Quick Start:


1. Remove one speaker-level input plug from your AudioControl active line output converter (LOC), processor, or amplifier
2. Unplug one end of AC-LGD 20 then plug the AC-LGD 20 into the LOC
3. Install the plug you removed from the LOC to the open end of the AC-LGD 20
4. Connect your factory speaker signals to the AC-LGD 20
5. If you are using a LOC with different style connectors, unscrew the connectors from the AC-LGD 20 wires and connect the wires accordingly

Important

- Do not exceed 15 Vrms (50 watts) of input
- Operating Impedance: 20 Ohms
- Do not install under the carpet or near heat sources

What's Included?

One pair of AC-LGD 20s prewired with EIA color-coded wires

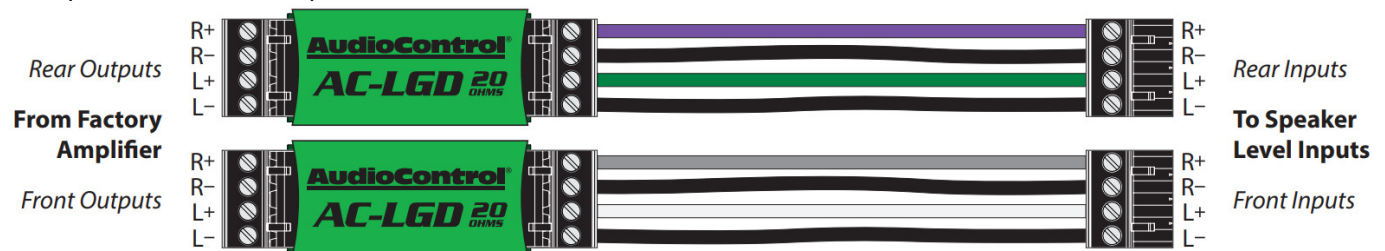

22410 70th Ave West
Mountlake Terrace, WA 98043 USA
Phone 425-775-8461
Fax 425-778-3166

**Also
makes a
charming
bracelet!**



©2019 AudioControl. All rights reserved. P/N 9120630

Documents / Resources



[AudioControl AC-LGD 20 OHM Load Generating Device and Signal Stabilizer](#) [pdf] User Manual

AC-LGD 20 OHM Load Generating Device and Signal Stabilizer, AC-LGD, 20 OHM Load Generating Device and Signal Stabilizer, Signal Stabilizer, Stabilizer, Load Generating Device, Generating Device, Device

[Manuals+](#)