



AudioControl ACR-U Universal Remote Level Control User Guide

[Home](#) » [AudioControl](#) » AudioControl ACR-U Universal Remote Level Control User Guide 



ACR-U™

UNIVERSAL REMOTE LEVEL CONTROL

PRECISE AND TACTILE REMOTE LEVEL CONTROL
ADD VOLUME CONTROL TO ANY LINE-LEVEL SIGNAL
REMOTE CAN BE FLUSH-MOUNTED FOR CUSTOM INSTALLATIONS


Contents

- [1 Add volume control to any system](#)
- [2 Specifications](#)
- [3 Documents / Resources](#)
- [4 Related Posts](#)

Add volume control to any system

The ACR-U is a universal remote volume control that can be inserted into any line-level signal path. The ACR-U can be surface or custom-mounted to add subwoofer level control, zone level control, total system volume control, and more to your audio system. Installation is simple and no power is required.

Quick Start:

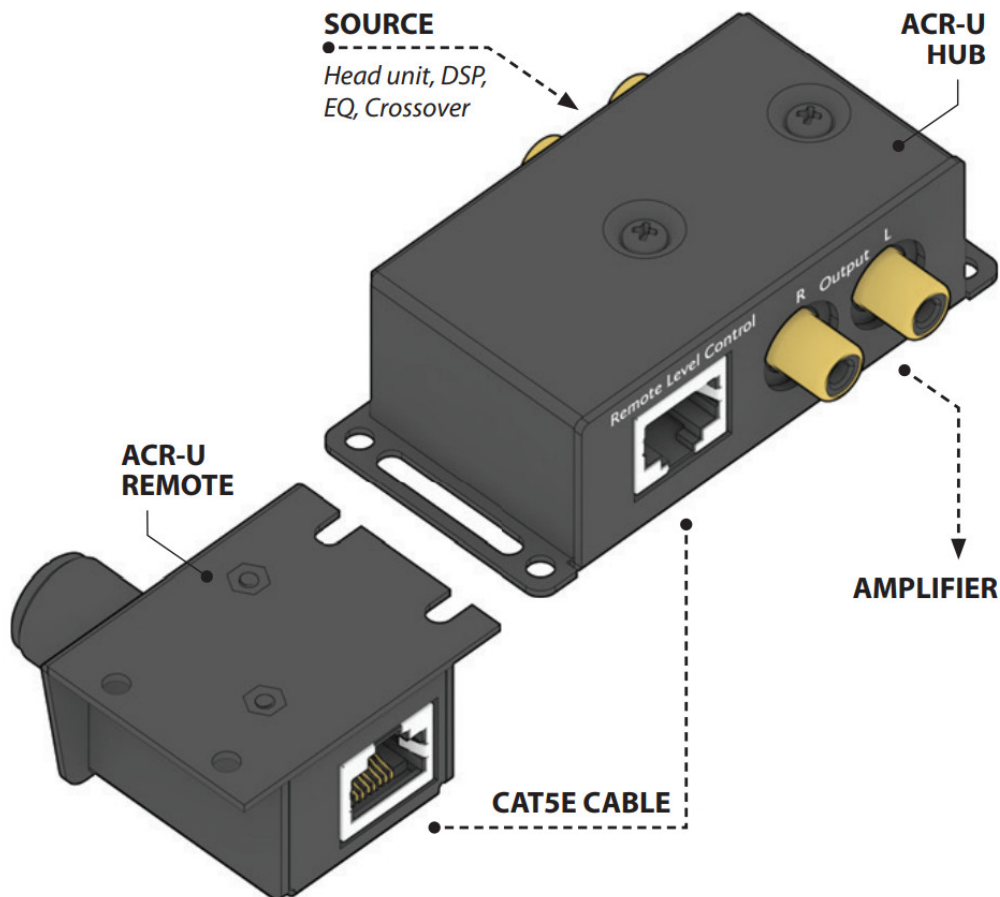

***Optional 20 foot (6 meters) Cat5e cable available for separate purchase. Any Cat5e cable may be used up to 300 feet in length.**

1. Install the ACR-U Hub between a line level source (head unit, DSP, EQ, Crossover) and your amplifier
2. Connect the output of your line-level source to the input of the ACR-U Hub
3. Connect the output of the ACR-U Hub to your amplifier
4. Connect the ACR-U Remote to the ACR-U Hub using the included 20 inches (0.5 meters) Cat5e cable*
5. The ACR-U Remote and Hub can be mounted using the integrated mounts. The ACR-U Remote can be disassembled for custom flush-mount installations

What's Included?

ACR-U Remote, ACR-U Hub, Cat5e Cable (0.5 meters)

Specifications

Audio Channels 2 (RCA)
 Insertion Loss 0.017 dB
 Attenuation Range -97 dB
 Juggling Potential. add 1 bean bag
 Warranty 5 Years



22410 70th Ave West, Mountlake Terrace, WA 98043 USA

Phone: 425-775-8461

www.audiocontrol.com



©2021 AudioControl. All rights reserved. P/N 912-073-0

Documents / Resources



[AudioControl ACR-U Universal Remote Level Control](#) [pdf] User Guide
ACR-U, Universal Remote Level Control, ACR-U Universal Remote Level Control

[Manuals+](#).