



Audionic AI9005 Wireless Speaker User Manual

[Home](#) » [Audionic](#) » Audionic AI9005 Wireless Speaker User Manual 

Contents

- [1 Audionic AI9005 Wireless Speaker](#)
- [2 Features](#)
- [3 Contents](#)
- [4 A Quick Look](#)
- [5 Charging the Speaker](#)
- [6 Pairing the Speaker](#)
- [7 On an IOS or Android Device](#)
- [8 Controls](#)
- [9 Specifications](#)
- [10 FCC Statement](#)
- [11 FAQ](#)
 - [11.1 Q: How do I switch to FM Radio mode?](#)
 - [11.2 Q: What should I do if FM radio signal reception is poor?](#)
- [12 Documents / Resources](#)
 - [12.1 References](#)
- [13 Related Posts](#)

Audionic AI9005 Wireless Speaker



USER MANUAL

MODEL: AI9005

Features

- Speaker
- Charging port
- LED indicator

Contents

- Speaker
- USB charging cable
- User Manual

A Quick Look



Charging the Speaker


- To charge the speaker, attached the small end of the usb cable to the charging port located on the speaker.
- Attached the other end to the USB port on a computer or USB charging adapter.
- The LED light will turn RED while the speaker is charging and turn OFF once charging is complete.

Pairing the Speaker

- When you turn your speaker on, it will enter Bluetooth pairing mode and start to blink Blue.
- Open your smartphone's Bluetooth menu to enable Bluetooth and search for Bluetooth devices. Select "AI9005 Speaker" from the list of devices.
- After successful pairing, the speaker's LED indicator will turn solid Blue. When playing music, the LED indicator will flash intermi?ently.

On an IOS or Android Device

Go to SETTING>BLUETOOTH
(Make sure Bluetooth is turned ON)

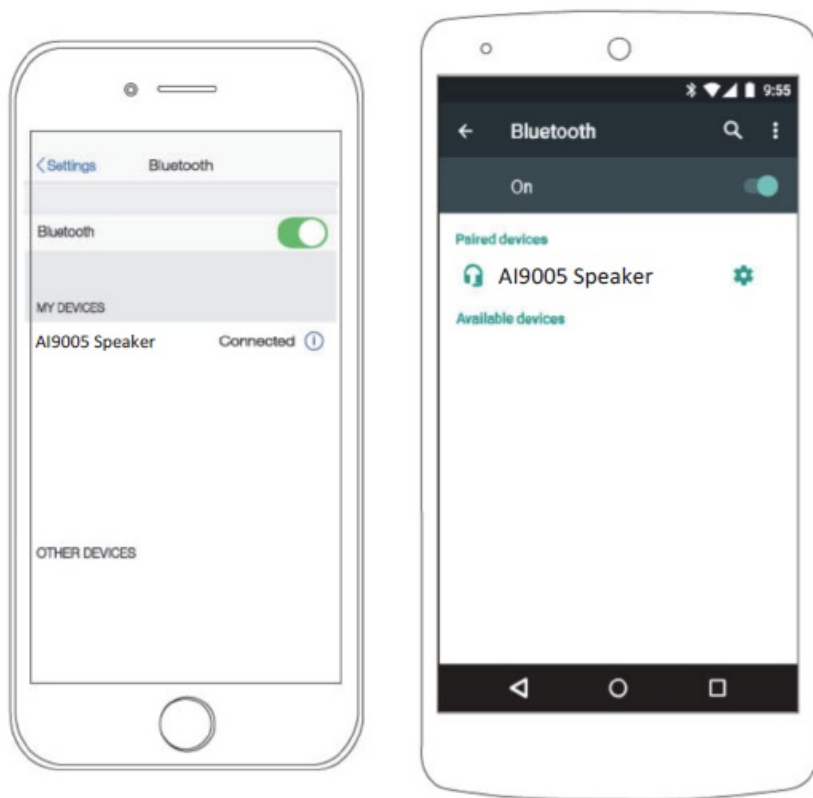

Controls

Power On/Off

To turn on the product, toggle the power switch to 'On'. To turn off the product, toggle the power switch to 'Off'.

Play/Pause music

When playing music, press the Play/Pause button to pause the music, press again the same button to resume playing the music.

Volume + / Next track

Press the Volume + / Next track button to advance to the next track. Hold down the same button if you want to increase the music volume.

Volume – / Previous

Press the Volume – / Previous track button to return to the previous track. Hold down the same button if you want to decrease the music volume.

Call controls

When receiving an incoming call, press the Call button once to accept call, press again to decline call. If you press and hold the Call button, it will reject the incoming call instead of picking it up. Press the Call button twice and it will redial the last called number.

Mode change

Press the M button to switch modes: Bluetooth, Card Reader, and FM Radio.

Radio mode

In FM radio mode, press the '>' button to search for stations. Press and hold the '+' or '-' button to adjust the radio volume.

*If the product experience poor signal reception in FM mode, connect it to a charging cable to enhance the signal reception.

USB reader / MicroSD card reader

Play music from a USB drive or MicroSD card by inserting them into the reader port.
Music controls remain the same as in Bluetooth mode.

Specifications

- Speaker: 52mm
- Output: 4Ω 3W
- Bluetooth Version: 5.1
- Transmission distance: 10m
- Battery:300mah
- Charge time:1-2H
- Play time:1-2h
- Size:135*85*45mm

FCC Statement

This equipment complies with Part 15 of the FCC Rules. Operation is subject to the following two conditions:

- (1) This device may not cause harmful interference, and
- (2) This device must accept any interference received, including interference that may cause undesired operation.

Warning

To assure continued compliance, any changes or modifications not expressly approved by the party responsible for compliance could void the user's authority to operate this equipment.

NOTE: This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to part 15 of the FCC rules.

These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio/TV technician for help.

FCC Radiation Exposure Statement:

The device has been evaluated to meet general RF exposure requirement. The device can be used in the portable exposure condition without restriction.

FAQ

Q: How do I switch to FM Radio mode?

A: Press the Mode button until you reach the FM Radio mode. Use the '>' button to search for stations and adjust volume with the '+' or '-' buttons.

Q: What should I do if FM radio signal reception is poor?

A: Connect the speaker to a charging cable while in FM radio mode to enhance signal reception.

Documents / Resources

	Audionic AI9005 Wireless Speaker [pdf] User Manual AI9005, AI9005 Wireless Speaker, Wireless Speaker, Speaker
---	--

References

- [User Manual](#)

[Manuals+](#), [Privacy Policy](#)

This website is an independent publication and is neither affiliated with nor endorsed by any of the trademark owners. The "Bluetooth®" word mark and logos are registered trademarks owned by Bluetooth SIG, Inc. The "Wi-Fi®" word mark and logos are registered trademarks owned by the Wi-Fi Alliance. Any use of these marks on this website does not imply any affiliation with or endorsement.