

 audizio

102.197

**Fremont Table
Record Player**



audizio 102.197 Fremont Table Record Player Instruction Manual

[Home](#) » [audizio](#) » audizio 102.197 Fremont Table Record Player Instruction Manual 

Contents

- [1 audizio 102.197 Fremont Table Record Player](#)
- [2 Product Usage Instructions](#)
- [3 FAQ](#)
- [4 Product Information](#)
- [5 Unpacking Instruction](#)
- [6 Powersupply](#)
- [7 Overview](#)
- [8 Assemble](#)
- [9 GETTING STARTED](#)
- [10 RECORD PLAYER](#)
- [11 BT STREAMING](#)
- [12 CONNECTING TO A COMPUTER](#)
- [13 USING AUDACITY](#)
- [14 RECORDING TO COMPUTER USING AUDACITY](#)
- [15 TECHNICAL SPECIFICATION](#)
- [16 Documents / Resources](#)
 - [16.1 References](#)

 audizio

audizio 102.197 Fremont Table Record Player



Specifications:

- Ref. nr.: 102.197_102.198
- Version: V2.0

Product Information:

This product is a multi-functional device that combines a turntable, Bluetooth playback, and compatibility with Audacity for recording and editing audio. It allows users to convert their vinyl records into digital formats for easy listening and sharing.

Product Usage Instructions

Getting Started (DEMARRER):

Follow the instructions in the manual to set up the device properly. Connect the necessary cables and ensure the power source is connected.

Turntable (TOURNE-DISQUE):

Place your vinyl record on the turntable platter, select the appropriate speed, and use the tonearm to play the record. Follow the recommended handling instructions for vinyl records.

Bluetooth Playback (LECTURE BT):

Enable Bluetooth on your device, search for the product's Bluetooth connection, and pair the devices. You can now stream audio wirelessly to the device.

Using Audacity (UTILISATION DE AUDACITY):

Install Audacity on your computer and connect the device using the provided cables. Use Audacity to record and edit audio from the device for further processing.

Exporting Music Files (.WAV and .MP3):

Follow the instructions in the manual to export your recorded audio files in WAV or MP3 format for storage or sharing purposes.

FAQ

- **Q: How do I clean the turntable?**

- A: Use a soft, dry cloth to gently clean the turntable surface. Avoid using harsh chemicals that may damage the vinyl records.

- **Q: Can I connect external speakers to this device?**

- A: Yes, you can connect external speakers using the AUX IN port for a better audio experience.

Product Information

Congratulations to the purchase of this Audizio product. Please read this manual thoroughly prior to using the unit in order to benefit fully from all features.

Read the manual prior to using the unit. Follow the instructions in order not to invalidate the warranty. Take all precautions to avoid fire and/or electrical shock. Repairs must only be carried out by a qualified technician in order to avoid electrical shock. Keep the manual for future reference.

- Prior to using the unit, please ask advice from a specialist. When the unit is switched on for the first time, some smell may occur. This is normal and will disappear after a while.
- The unit contains voltage carrying parts. Therefore do NOT open the housing.
- Do not place metal objects or pour liquids into the unit. This may cause electrical shock and malfunction.
- Do not place the unit near heat sources such as radiators, etc. Do not place the unit on a vibrating surface. Do not cover the ventilation holes.
- The unit is not suitable for continuous use.
- Be careful with the mains lead and do not damage it. A faulty or damaged mains lead can cause electrical shock and malfunction.
- When unplugging the unit from a mains outlet, always pull the plug, never the lead.
- Do not plug or unplug the unit with wet hands.
- If the plug and/or the mains lead are damaged, they need to be replaced by a qualified technician.
- If the unit is damaged to such an extent that internal parts are visible, do NOT plug the unit into a mains outlet and DO NOT switch the unit on. Contact your dealer. Do NOT connect the unit to a rheostat or dimmer.
- To avoid fire and shock hazards, do not expose the unit to rain and moisture.
- All repairs should be carried out by a qualified technician only.
- Connect the unit to an earthed mains outlet (220-240Vac/50Hz) protected by a 10-16A fuse.
- During a thunderstorm or if the unit will not be used for a longer period of time, unplug it from the mains. The rule is to unplug it from the mains when not in use.
- If the unit has not been used for a longer period of time, condensation may occur. Let the unit reach room temperature before you switch it on. Never use the unit in humid rooms or outdoors.
- To prevent accidents in companies, you must follow the applicable guidelines and follow the instructions.

- Do not repeatedly switch the fixture on and off. This shortens the life time.
- Keep the unit out of the reach of children. Do not leave the unit unattended.
- Do not use cleaning sprays to clean switches. The residues of these sprays cause deposits of dust and grease. In case of malfunction, always seek advice from a specialist.
- Do not force the controls.
- This unit is with a speaker inside which can cause a magnetic field. Keep this unit at least 60cm away from the computer or TV.
- If this product have a built-in lead-acid rechargeable battery. Please recharge the battery every 3 months if you are not going to use the product for a long period of time. Otherwise, the battery may be permanently damaged.
- If the battery is damaged please replace with sthe ame specifications battery. And dispose the damaged battery environment friendly.
- If the unit has fallen, always have it checked by a qualified technician before you switch the unit on again.
- Do not use chemicals to clean the unit. They damage the varnish. Only clean the unit with a dry cloth.
- Keep away from electronic equipment that may cause interference.
- Only use original spares for repairs, otherwise, serious damage and/or dangerous radiation may occur.
- Switch the unit off prior to unplugging it from the mains and/or other equipment. Unplug all leads and cables prior to moving the unit.
- Make sure that the mains lead cannot be damaged when people walk on it. Check the mains lead before every use for damages and faults!
- The mains voltage is 220-240Vac/50Hz. Check if power outlet match. If you travel, make sure that the mains voltage of the country is suitable for this unit.
- Keep the original packing material so that you can transport the unit in safe conditions.



This mark attracts the attention of the user to high voltages that are present inside the housing and that are of sufficient magnitude to cause a shock hazard.



This mark attracts the attention of the user to important instructions that are contained in the manual and that he should read and adhere to.

The unit has been certified CE. It is prohibited to make any changes to the unit. They would invalidate the CE certificate and their guarantee!

NOTE: To make sure that the unit will function normally, it must be used in rooms with a temperature between 5°C/41°F and 35°C/95°F.

Electric products must not be put into household waste. Please bring them to a recycling center. Ask your local authorities or your dealer about the way to proceed. The specifications are typical. The actual values can slightly change from one unit to the other. Specifications can be changed without prior notice.

Do not attempt to make any repairs yourself. This would invalid your warranty. Do not make any changes to the unit. This would also invalid your warranty. The warranty is not applicable in case of accidents or damages caused by inappropriate use or disrespect of the warnings contained in this manual. Audizio cannot be held responsible for personal injuries caused by a disrespect of the safety recommendations and warnings. This is also applicable to all damages in whatever form.

Unpacking Instruction

CAUTION! Carefully unpack the box upon receipt. Check the contents to ensure that all parts are present and have been received in good condition. Notify the shipper immediately and retain packaging material if any parts

appear damaged from shipping or the package itself shows signs of mishandling. Save the package and all packaging materials. If the product must be returned, it is important that the product is returned in the original factory box and packaging. If the device has been exposed to drastic temperature fluctuation (e.g. after transportation), do not switch it on immediately. The arising condensation water might damage your device. Leave the device switched off until it has reached room temperature.

Powersupply

The label on the back/underside of the product indicates the mains voltage to which it must be connected. Check that the mains voltage corresponds to this. Any other voltage than the one indicated may cause irreparable damage to the unit. The unit must also be connected directly to the mains voltage and no dimmer or adjustable power supply may be used. Always connect the device to a protected circuit (circuit breaker or fuse). Make sure the device has an appropriate electrical ground to avoid the risk of electrocution or fire.

Overview

1. Platter
Place your record here
2. 45rpm adapter
This adapter allows you to play 45RPM records
3. Tonearm
The tonearm can be raised and lowered by hand, or by pressing the raise /lower lever
4. Arm clip
This arm clip secures the tonearm while at rest or when not in use. The arm clip has been designed to remain in the up position whilst unlocked
5. Stylus cartridge
A cartridge containing the stylus/needle
6. Tone arm lever
Use to raise/lower the tone arm
7. Autostop ON/OFF
This switch turns the auto stop function on/off. When the automatic stop is enabled, the platform will start rotating as soon as the tone arm is placed over the record and will stop rotating when it has reached the end of the record. Some vinyl records stop before the end or do not stop when the end is reached. In this case set Auto-stop to OFF
8. 33 / 45 / 78 RPM
Use to adjust the RPM of the turntable platter
9. PH/BT/BT OUT
Rotate to choose between Phono/BT/BT OUT
BT enables playing music from a streaming device
BT out enables directing the sound from phono record playback to wireless BT headphones- or speakers
10. Power & Volume control
To power on the record player, rotate clockwise until it clicks. When powered on, use this knob to adjust the volume for the internal speakers and headphones. To turn off the record player, rotate this knob counter clockwise until it clicks
11. Headphone output
Connect your headphone with this 3,5 mm (1/8) jack

12. USB-B power input


USB-B Power socket for connecting the supplied power adapter

13. AUX input

3.5 mm auxiliary input jack. The aux in connection will automatically override the turntable and BT functions. To resume using the turntable or BT functions, unplug the auxiliary cable from the aux in jack


14. Line output

RCA connector line output to connect external speakers (not included)

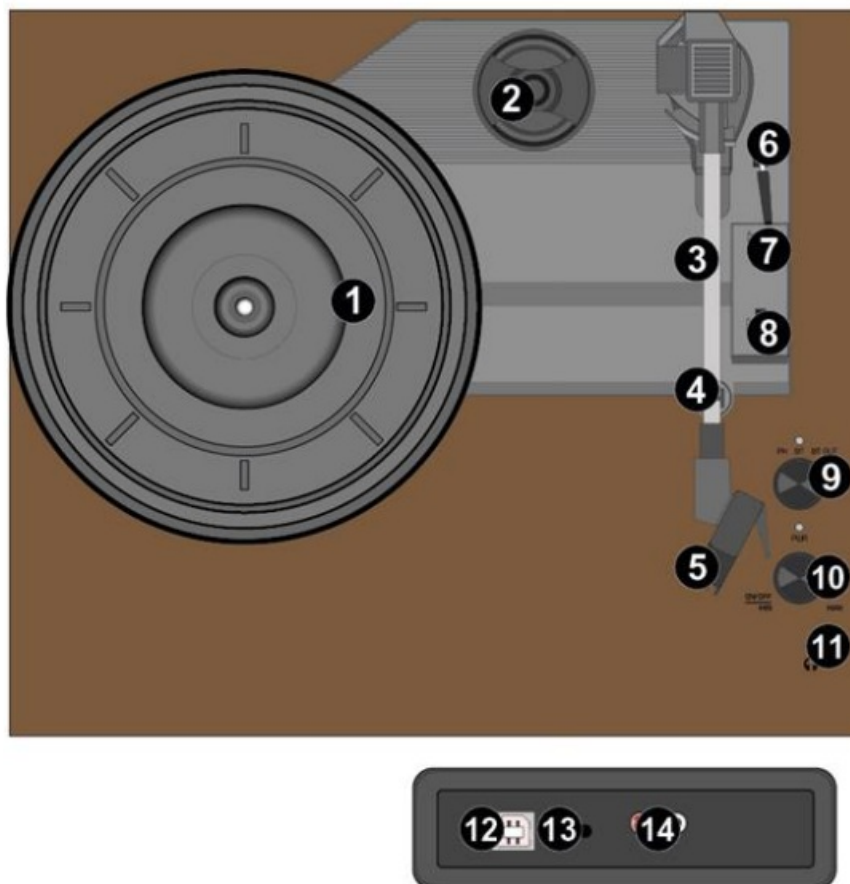

Assemble

Attach the legs on the bottom side of the record player by rotate them clockwise.

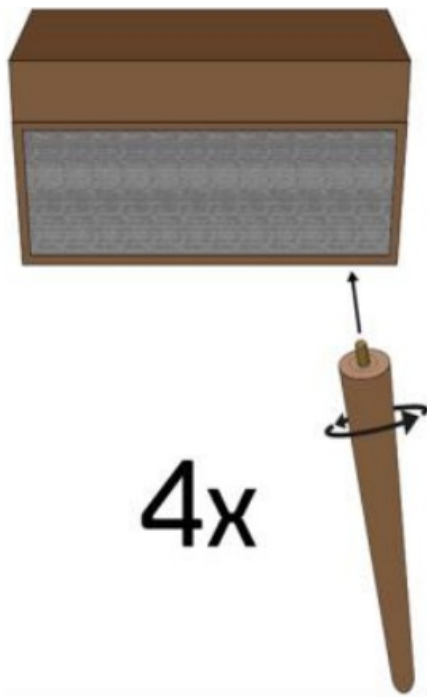

GETTING STARTED

- Remove the record player from the package box.
- Plug in the power adapter and turn on the device.

Caution: Use only the adapter supplied with the unit. Connecting a power supply with a different rating can cause permanent damage to the unit and may be hazardous.

RECORD PLAYER

- Rotate the mode button to select Phono mode.
- Place the record on the turntable. If required, place the 45rpm adapter on the record spindle.
- Choose the desired playing speed using the speed selection switch (33-, 45- or 78rpm).
- Rotate the on/off and volume control clockwise to turn on the unit.
- Make sure that any protective cover is removed from the stylus.
- Unlock the tone arm by releasing the tone arm clip.
- Raise the arm by using the tone arm lever.
- Place the stylus vertically over the first track of the record, the turntable will start turning automatically.
- Lower the stylus slowly onto the record by using the tone arm lever.
- When a record comes to the end, the turntable will stop automatically if the auto-stop switch is in the ON position. If the switch is in the off position then it will keep turning until the switch is set in the ON position.
- Some vinyl records stop before the end or do not stop when the end is reached. In this case set Auto-stop to OFF.
- Lift up the tone arm and put it on the rest when finished, always using the tone arm lever.
- Lock the tone arm by closing the tone arm clip.
- Re-attach the stylus cover.
- Turn off the power.

BT STREAMING

Before transmission between your BT device and the turntable is possible, both devices must be coupled. This process is called “Pairing”. The turntable is served as a receiver, to receive the music stream to be played on the radio. If you have already coupled to a BT device before, this connection will be restored automatically when both devices are in range and BT operation has been selected on the radio. “Pairing” does not have to be repeated. This function may need to be activated in your BT device, however.

- Set the mode knob to BT mode on the turntable.
- A blue led will begin flashing to indicate the turntable is in pairing mode.
- Turn on the BT streaming function on your device. The device will scan for pairable BT devices in the reception range.
- Select “Audizio Fremont” from the list with found devices.
- A steady blue light will indicate the turntable has paired successfully.
- You can now play your music from your device, using the turntable player as speaker. This device also features a BT transmitter, meaning that it is possible to play sound from the turntable player via BT to, for example, a BT speaker or wireless headphones. Rotate the mode knob to BT OUT mode to enable the BT transmitting function.
- Turn on pairing mode on your Bluetooth device.
- Set the mode knob to BT OUT mode on the turntable.
- A red light will begin flashing to indicate the turntable is searching for an available BT device.
- After pairing is successfully, the red led light stays lit and the turntable audio signal can be transmitted.

Note: When the turntable is being used as a BT speaker, all other playback functions cannot be used at the same time.

AUX IN

You can listen to the music stored in other audio device or smart phone via the turntable, through the connection to the 3.5 mm aux-in jack on the back side. Use a cable with 3.5 mm pins at both ends, one end connected to the aux-in jack on the turntable, the other end connected to the earphone jack on the audio device (or line out socket if available). Set the mode switch to AUX IN mode. Play music on the connected device, the sound will be emitted from the turntable.

LINE OUT

Connect your own speaker system to the Line-out jacks of the turntable with an RCA-3.5mm audio cable (not included)

NOTE: the RCA cables are color-coded. The red plug cable must be plugged into the red jack on both the turntable and external amplifier or speaker system. The white plug cable must be plugged into the white jack on both the turntable and external amplifier or speaker system.

CONNECTING TO A COMPUTER

Before connecting the turntable to a computer, disconnect it from your mixer or hi-fi system.


The included software is a third-party application and therefore Audizio does not handle any questions or problems related to the software.

1. Turn on the computer.
2. Once the computer has booted up, connect the turntable. The computer will now install the drivers.
3. After the drivers are installed, you now need to install the Audacity software. Please scan the QR code beside to land on the download page.



USING AUDACITY

- Plug the USB cable into the back of the device and the other end into a free USB port on your computer.
- Launch the Audacity software by double-clicking the Audacity icon.
- Before recording, click edit at the top of the main page; select preferences at the bottom of the menu that opens.
- In the recording section of the window, open the Device menu with the down arrow on the right. Select the USP PnP Audio Device option from the menu. Also check the box next to 'Software Playthrough (Play new track while it is being recorded)'.
- In the lower box you can set the number of recording channels, 1 is Mono and 2 is Stereo, select the option Stereo.
- Click 'OK' once the options have been selected.

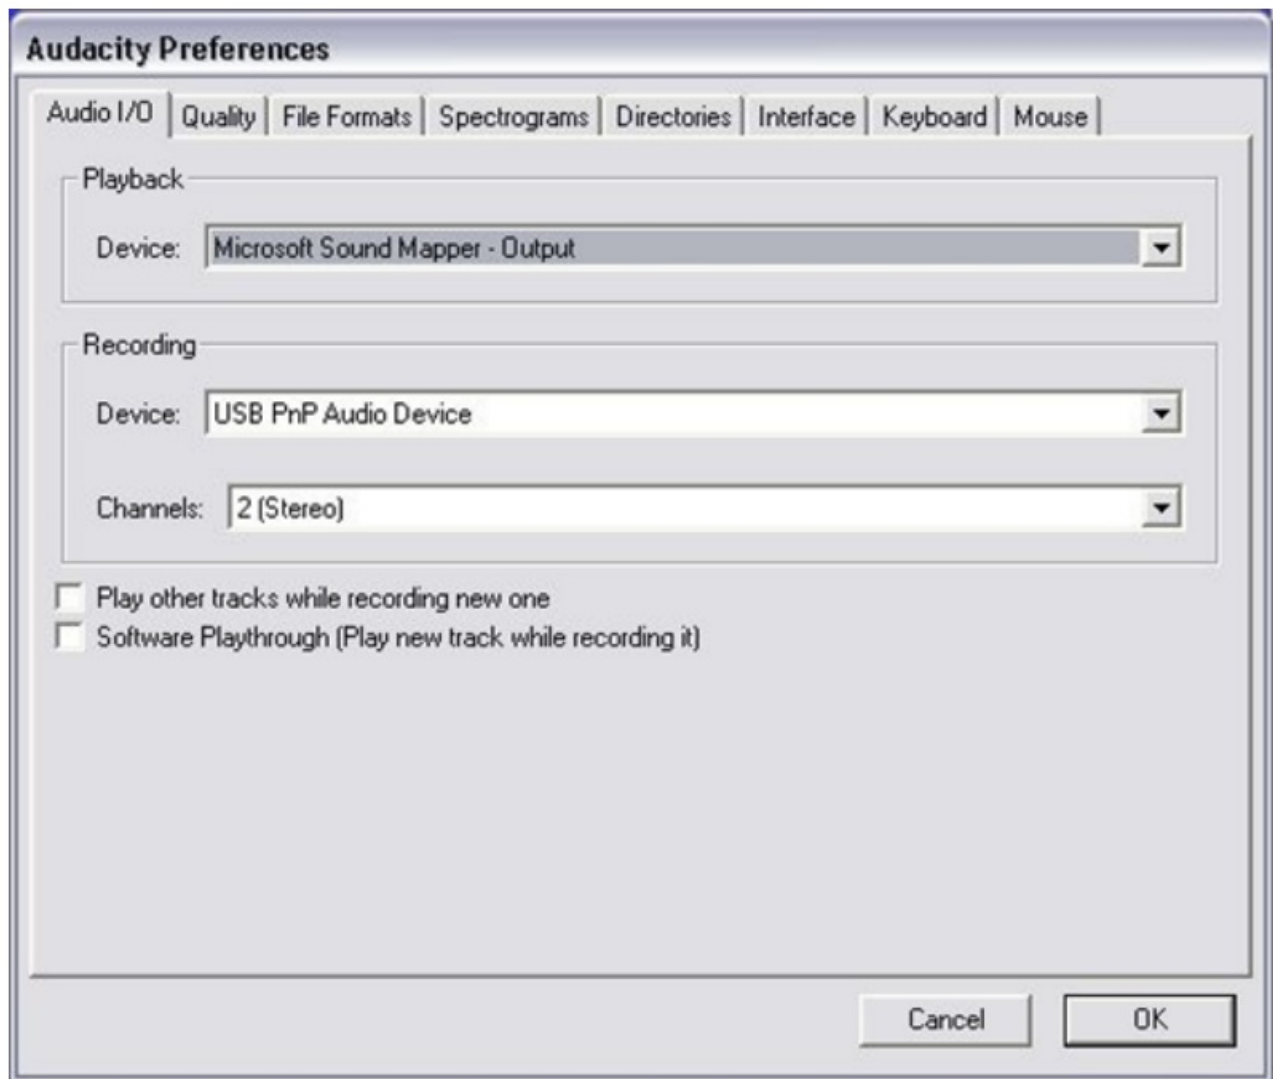

RECORDING TO COMPUTER USING AUDACITY

- Start the record playing as described above, and press record at the top of the Audacity window to start recording to the computer.



- Once recorded, use the Transport controls at the top of the screen to: Go to start, Play, Record, Pause, Stop and Go to the end.
- Use the File, Edit, View, Project, Generate, to save, export and edit your music.
- Use the File, Edit, View, Project, Generate, to save, export and edit your music.
- If the recording level requires to be adjusted, click on 'START', 'SETTINGS' and select 'Control Panel.' Under Control Panel, select 'SOUNDS and AUDIO DEVICES', click on the 'VOLUME' tab and select 'ADVANCED'.
- On the Master volume window, select options at the top left-hand corner, and click on properties in the drop-down menu.
- In the Properties window, select "USB PnP Audio Device" from the drop-down menu at the top. Click "OK" to confirm the Selection and a window will now appear with a control for the recording level. Move this control up if the recording is too quiet and down if the recording is too loud.

NOTE: the blue wave form should sit in the Audacity window such that the peaks of it stop short of the top and bottom. Before editing your music, the recorded waveform will need to be highlighted.



- To highlight your waveform, click with the left mouse button on the left-hand side of the waveform (under the L+R controls) and the waveform will go darker.
- At this point the whole waveform can be edited. The section required can be highlighted by placing the mouse over the beginning of the section holding the left button down and dragging it right over the area required and releasing it when the end of the desired section is reached. This darkened section will now be the only audio that will be edited.
- Alternatively, click on the EDIT menu at the top left and click on SELECT, then choose from: All (whole waveform), Start to Cursor or Cursor to end.

NOTE: after recording to the Computer, the USB cable may have to be removed from the USB port in order to enable playback later from the computer.

EXPORTING YOUR MUSIC FILES (.WAV)

- Once you have recorded and edited your music, you will need to save your files to the computer. To do this, click on file and move down to Export as WAV tab.
- Click on this and you will promptly be asked for the file name of the music recorded which will be saved in the location shown. At this point either make a note of the folder where your music is saved or save it in a folder of your choice.
- This can either be an existing one or a new folder.

EXPORTING YOUR MUSIC FILES (.MP3)

- Once you have recorded and edited your music, you will need to save your files to the computer. To do this click on file and move down to Export as Mp3 tab.
- Click on this and you will promptly be asked for the file name of the music recorded which will be saved in the location shown. At this point either make a note of the folder where your music is saved or save it in a folder of your choice.
- This can be either an existing one or a new folder.

NOTS

We advise you to clean your records with an anti-static cloth to gain maximum enjoyment from them and to make

them last. We would also point out that for the same reason your stylus should be replaced periodically (approximately every 250 hours).

TECHNICAL SPECIFICATION

- Playback options: BT streaming, Vinyl, USB, Line input
- Input connections: 3.5mm Jack, USB
- Output connections: 3.5mm Jack, RCA, USB
- Speed settings (RPM) : 33, 45, 78
- Power supply : 100-240VAC 50/60Hz (5V USB)
- Dimensions (no legs) (L x W x H) : 350 x 405 x 205mm
- Dimensions (with legs) (L x W x H) : 350 x 405 x 687
- Weight: 6,05kg

The specifications are typical. The actual values can slightly change from one unit to the other. Specifications can be changed without prior notice.

The products referred to in this manual conform to the European Community Directives to which they are subject:

European Union

Tronios B.V., Bedrijvenpark Twente Noord 18, 7602KR Almelo, The Netherlands

- 2014/35/EU
- 2014/30/EU
- 2011/65/EC
- 2014/53/EU

United Kingdom

Tronios Ltd.,
130 Harley Street,
London W1G 7JU, United Kingdom


- S.I. 2016:1101
- S.I. 2016:1091
- S.I. 2012:3032
- S.I. 2017:1206

Specifications and design are subject to change without prior notice.






- www.audizio.com

Copyright © 2024 by Tronios The Netherlands

Documents / Resources

 <p>audizio</p> <p>Fremont Table Record Player</p> <p>INSTRUCTION MANUAL GEBRUIKSAANWIJZING BETRIEBSANLEITUNG MANUAL DE INSTRUCCIONES MANUEL D'INSTRUCTIONS INSTRUCCJA OBSŁUGI NÁVOD K POUŽITÍ</p>	<p>audizio 102.197 Fremont Table Record Player [pdf] Instruction Manual</p> <p>102.198, 102.197 Fremont Table Record Player, 102.197, Fremont Table Record Player, Table Record Player, Record Player, Player</p>
--	--

References

-  [Audizio – always a square deal](#)
-  [Samen zijn we open. Samen staan we sterk. - Stichting Open](#)
-  [Samen zijn we open. Samen staan we sterk. - Stichting Open](#)
-  [Web Server's Default Page](#)
-  [Web Server's Default Page](#)
- [User Manual](#)

Manuals+. [Privacy Policy](#)

This website is an independent publication and is neither affiliated with nor endorsed by any of the trademark owners. The "Bluetooth®" word mark and logos are registered trademarks owned by Bluetooth SIG, Inc. The "Wi-Fi®" word mark and logos are registered trademarks owned by the Wi-Fi Alliance. Any use of these marks on this website does not imply any affiliation with or endorsement.