

Audizio RP113 Series Record Player



# Audizio RP113 Series Record Player Instruction Manual

[Home](#) » [audizio](#) » Audizio RP113 Series Record Player Instruction Manual 

## Contents

- [1 Audizio RP113 Series Record Player](#)
- [2 Introduction](#)
- [3 UNPACKING INSTRUCTION](#)
- [4 CONTROLS AND CONNECTIONS](#)
- [5 GETTING STARTED](#)
- [6 TECHNICAL SPECIFICATION](#)
- [7 Documents / Resources](#)
  - [7.1 References](#)



**Audizio RP113 Series Record Player**



## Introduction

Congratulations to the purchase of this Audizio product. Please read this manual thoroughly prior to using the unit in order to benefit fully from all features. Read the manual prior to using the unit. Follow the instructions in order not to invalidate the warranty. Take all precautions to avoid fire and/or electrical shock. Repairs must only be carried out by a qualified technician in order to avoid electrical shock. Keep the manual for future reference.

- Prior to using the unit, please ask advice from a specialist. When the unit is switched on for the first time, some smell may occur. This is normal and will disappear after a while.
- The unit contains voltage-carrying parts. Therefore do NOT open the housing.
- Do not place metal objects or pour liquids into the unit. This may cause electrical shock and malfunction.
- Do not place the unit near heat sources such as radiators, etc. Do not place the unit on a vibrating surface. Do not cover the ventilation holes.
- The unit is not suitable for continuous use.
- Be careful with the mains lead and do not damage it. A faulty or damaged mains lead can cause electrical shock and malfunction.
- When unplugging the unit from a mains outlet, always pull the plug, never the lead.
- Do not plug or unplug the unit with wet hands.
- If the plug and/or the mains lead are damaged, they need to be replaced by a qualified technician.
- If the unit is damaged to such an extent that internal parts are visible, do NOT plug the unit into a mains outlet and DO NOT switch the unit on. Contact your dealer. Do NOT connect the unit to a rheostat or dimmer.
- To avoid fire and shock hazard, do not expose the unit to rain and moisture.
- All repairs should be carried out by a qualified technician only.
- Connect the unit to an earthed mains outlet (220-240Vac/50Hz) protected by a 10-16A fuse.
- During a thunderstorm or if the unit will not be used for a longer period of time, unplug it from the mains. The rule is: Unplug it from the mains when not in use.
- If the unit has not been used for a longer period of time, condensation may occur. Let the unit reach room temperature before you switch it on. Never use the unit in humid rooms or outdoors.

- To prevent accidents in companies, you must follow the applicable guide lines and follow the instructions.
  - Do not repeatedly switch the fixture on and off. This shortens the life time.
  - Keep the unit out of the reach of children. Do not leave the unit unattended.
  - Do not use cleaning sprays to clean switches. The residues of these sprays cause deposits of dust and grease. In case of malfunction, always seek advice from a specialist.
  - Do not force the controls.
  - This unit is with speaker inside which can cause magnetic field. Keep this unit at least 60cm away from computer or TV.
  - If this product have a built-in lead-acid rechargeable battery. Please recharge the battery every 3 months if you are not going to use the product for a long period of time. Otherwise, the battery may be permanently damaged.
  - If the battery is damaged please replace with same specifications battery. And dispose the damaged battery environment friendly.
  - If the unit has fallen, always have it checked by a qualified technician before you switch the unit on again.
  - Do not use chemicals to clean the unit. They damage the varnish. Only clean the unit with a dry cloth.
  - Keep away from electronic equipment that may cause interference.
  - Only use original spares for repairs, otherwise serious damage and/or dangerous radiation may occur.
  - Switch the unit off prior to unplugging it from the mains and/or other equipment. Unplug all leads and cables prior to moving the unit.
  - Make sure that the mains lead cannot be damaged when people walk on it. Check the mains lead before every use for damages and faults!
  - The mains voltage is 220-240Vac/50Hz. Check if power outlet match. If you travel, make sure that the mains voltage of the country is suitable for this unit.
  - Keep the original packing material so that you can transport the unit in safe conditions.
- 
- This mark attracts the attention of the user to high voltages that are present inside the housing and that are of sufficient magnitude to cause a shock hazard.
  - This mark attracts the attention of the user to important instructions that are contained in the manual and that he should read and adhere to. The unit has been certified CE. It is prohibited to make any changes to the unit. They would invalidate the CE certificate and their guarantee!
  - NOTE: To make sure that the unit will function normally, it must be used in rooms with a temperature between 5°C/41°F and 35°C/95°F.
  - Electric products must not be put into household waste. Please bring them to a recycling centre. Ask your local authorities or your dealer about the way to proceed. The specifications are typical. The actual values can slightly change from one unit to the other.
  - **Specifications can be changed without prior notice.**
    - Do not attempt to make any repairs yourself. This would invalid your warranty. Do not make any changes to the unit. This would also invalid your warranty. The warranty is not applicable in case of accidents or damages caused by inappropriate use or disrespect of the warnings contained in this manual. Audizio cannot be held responsible for personal injuries caused by a disrespect of the safety recommendations and warnings. This is also applicable to all damages in whatever form.


## UNPACKING INSTRUCTION

**CAUTION!** Carefully unpack the box upon receipt. Check the contents to ensure that all parts are present and have been received in good condition. Notify the shipper immediately and retain packaging material if any parts appear damaged from shipping or the package itself shows signs of mishandling. Save the package and all packaging materials. If the product must be returned, it is important that the product is returned in the original factory box and packaging. If the device has been exposed to drastic temperature fluctuation (e.g. after transportation), do not switch it on immediately. The arising condensation water might damage your device. Leave the device switched off until it has reached room temperature.

## POWER SUPPLY

The label on the back/under side of the product indicates the mains voltage to which it must be connected. Check that the mains voltage corresponds to this. Any other voltage than the one indicated may cause irreparable damage to the unit. The unit must also be connected directly to the mains voltage and no dimmer or adjustable power supply may be used. Always connect the device to a protected circuit (circuit breaker or fuse). Make sure the device has an appropriate electrical ground to avoid the risk of electrocution or fire.

## CONTROLS AND CONNECTIONS

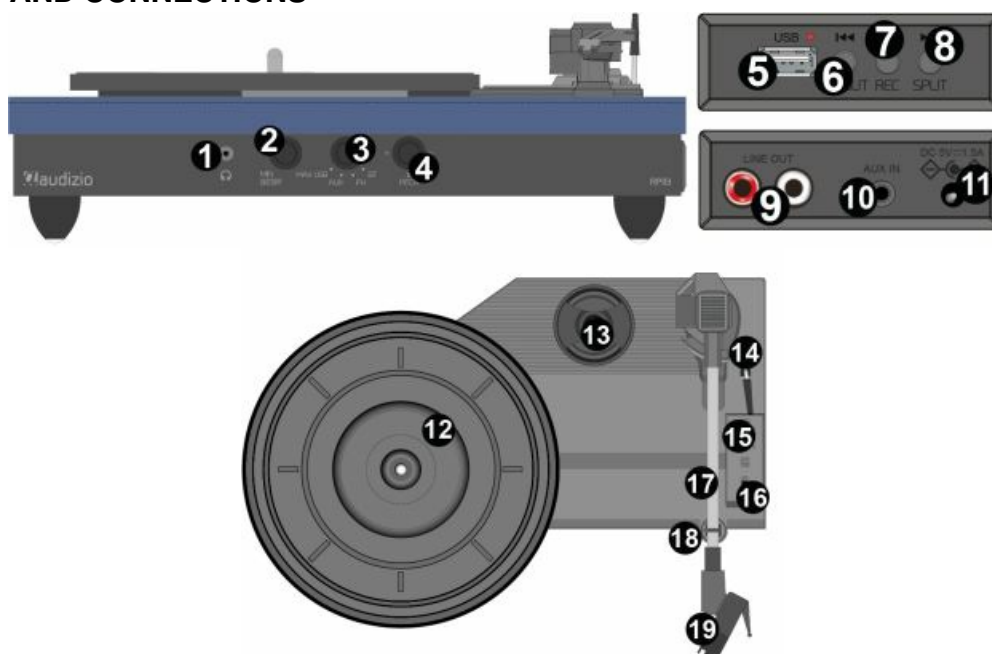

1. Headphone output  
3.5mm headphone output jack
2. On/off and volume control  
Rotate to turn the device on/off and to adjust the volume level
3. Mode  
Rotate to change modes (USB, AUX, Phono, BT streaming)
4. Pitch Rotate to control the pitch (turntable speed)
5. USB slot
6. Previous / BT out Press to change to the previous track when in USB-, AUX- and BT mode Press in Phono mode to enable a connection with a BT speaker or -headphones
7. Play/pause / REC Press to (re)start or pause play in USB-, AUX- and BT mode Press in Phono mode to record the vinyl play on a USB stick (when inserted)
8. Next / split Press to skip to the next track when in USB-, AUX- and BT mode. Press when recording vinyl play on a USB stick to cut off and save the current file and generate another save file

9. Line output RCA connector line output to connect external speakers (not included)
10. AUX input 3.5 mm auxiliary input jack
11. DC 5V IN 5V power socket for connecting the supplied power adapter
12. Platter
13. 45rpm adapter This adapter allows you to play 45RPM records
14. Tone arm lever Use to raise/lower the tonearm
15. 33 / 45 / 78 RPM switch Use to adjust the RPM of the turntable platter
16. Autostop switch ON/OFF This switch turns the auto stop-function on/off. When the automatic stop is enabled, the platform will start rotating as soon as the tone arm is placed over the record and will stop rotating when it has reached the end of the record. Some vinyl records stop before the end or do not stop when the end is reached. In this case set Auto-stop to OFF
17. Tonearm
18. Arm clip This arm clip secures the tonearm while at rest or when not in use. The arm clip has been designed to remain in the up position whilst unlocked

## **GETTING STARTED**

- Remove the radio record player from the package box.
- Plug in the power adapter and turn on the device.
- Caution: Use only the adaptor supplied with the unit. Connecting a power supply with a different rating can cause permanent damage to the unit and may be hazardous.

## **RECORD PLAYER**

- Rotate the mode switch to select Phono mode.
- Place the record on the turntable. If required, place the 45rpm adapter on the record spindle.
- Choose the desired playing speed using the speed selection switch (33-, 45- or 78rpm).
- Rotate the on/off and volume control clockwise to turn on the unit.
- Make sure that any protective cover is removed from the stylus.
- Unlock the tone arm by releasing the tone arm clip.
- Raise the arm by using the tone arm lever.
- Place the stylus vertically over the first track of the record, the turntable will start turning automatically.
- Lower the stylus slowly onto the record by using the tone arm lever.
- When a record comes to the end, the turntable will stop automatically if the auto-stop switch is in the ON position. If the switch is in the off position then it will keep turning until the switch is set in the ON position.
- Some vinyl records stop before the end or do not stop when the end is reached. In this case set Auto-stop to OFF.
- Lift up the tone arm and put it on the rest when finished, always using the tone arm lever.
- Lock the tone arm by closing the tone arm clip.
- Re-attach the stylus cover.
- Turn off the power.

## **BT STREAMING**

Before transmission between your BT device and the radio is possible, both devices must be coupled. This process is called “pairing”. The radio is served as a receiver, to receive the music stream to be played on the radio. If you have already coupled to a BT device before, this connection will be restored automatically when both devices are in range and BT operation has been selected on the radio. “Pairing” does not have to be repeated. This function may need to be activated in your BT device, however.

- Set the mode switch to BT mode. The LED indicator will blink in blue color.
- Turn on the BT streaming function on your device. The device will scan for pairable BT devices in the reception range.
- Select “Audizio RP113” from the list with found devices.
- After pairing, the LED will light up continuously. You can now play your music from your device, using the turntable player as a speaker.

This device also features a BT transmitter, meaning that it is possible to play sound from the turntable player via BT to, for example, a BT speaker or wireless headphones. When in phono mode, press the “previous” button: the indicator light will blink in red color. Then, turn on the BT streaming function of the speaker or headphones and start pairing. If the connection is successful, the indicator stops blinking. Now, the vinyl playback will be transmitted to the speaker or headphones wirelessly. Turn the volume control knob of the speaker or press the volume control buttons of the headphones to adjust the volume. The volume control knob of the record player is now blocked.

**Note:** When the turntable is being used as a BT speaker, all other playback functions cannot be used at the same time.

## AUX IN

You can listen to the music stored in other audio device or smart phone via the radio, through the connection to the 3.5 mm aux-in jack on the front side. Use a cable with 3.5 mm pins at both ends, one end connected to the aux-in jack on the radio, the other end connected to the earphone jack on the audio device (or line out socket if available). Set the mode switch to AUX mode. Play music on the connected device, the sound will be emitted from the radio.

## USB

**Playback:** Insert your USB drive in the USB slot. The device will automatically start playing the files. Press “previous” or “next” to choose the previous/next track. Press play/pause to (re)start/pause playback.  
**Record:**

- Insert your USB drive in the USB slot.
- Start vinyl playback in Phono mode.
- During the vinyl records playback, press “REC”. The indicator will blink in red and blue colors.
- Press “split” when recording, the current record will be cut off and stored in a file automatically. Press “split” again and another file will be generated.
- Press “REC” to stop the recording

## TECHNICAL SPECIFICATION

- Playback options
- BT streaming, USB
- Input connections: 3.5mm Jack, USB

- Output connections: 3.5mm Jack, RCA
- Speed settings (RPM) : 33, 45, 78
- Power supply : 100 240VAC 50/60Hz (5V Adapter)
- Dimensions (L x W x H) : 335 x 305 x 120mm
- Weight: 2,65

The specifications are typical. The actual values can slightly change from one unit to the other. Specifications can be changed without prior notice. The products referred to in this manual conform to the European Community Directives to which they are subject:

### **European Union**

Tronios B.V., Bedrijvenpark Twente Noord 18, 7602KR Almelo, The Netherlands

- 2014/35/EU
- 2014/30/EU
- 2011/65/EC
- 2014/53/EU

### **United Kingdom**

Tronios B.V., Bedrijvenpark Twente Noord 18, 7602KR Almelo, The Netherlands Tronios Ltd., 130 Harley Street, London W1G 7JU, United Kingdom 2014/35/

- S.I. 2016:110
- S.I. 2016:1091
- S.I. 2012:3032
- S.I. 2017:1206

 
Specifications and design are subject to change without prior notice.

- [www.audizio.com](http://www.audizio.com)

Copyright © 2023 by Tronios The Netherlands

---

### **Documents / Resources**



## References

- User Manual

**Manuals+, Privacy Policy**

This website is an independent publication and is neither affiliated with nor endorsed by any of the trademark owners. The "Bluetooth®" word mark and logos are registered trademarks owned by Bluetooth SIG, Inc. The "Wi-Fi®" word mark and logos are registered trademarks owned by the Wi-Fi Alliance. Any use of these marks on this website does not imply any affiliation with or endorsement.