

# AUGURY Node Replacement Instructions

## Contents

### 1 Node Replacement

#### 1.1 Production Health Start here

#### 1.2 How to replace a node

#### 1.3 BEFORE YOU START Tools needed

#### 1.4 Supplied by Customer:

#### 1.5 Setting Up the New Node

#### 1.6 Replacing Node in the Halo Installation App

#### 1.7 VIA FIELD JOB

#### 1.8 Via tab Installed

#### 1.9 Deleting Old Node Out of Halo Installation App

### 2 Documents / Resources

#### 2.1 References

### 3 Related Posts

## Node Replacement



Production Health Start here

## How to replace a node



## BEFORE YOU START Tools needed

Make sure the replacement node is:



Turned On



In Hotspot Mode (Network LED is Flashing GREEN)

**Supplied by Customer:**


- AndrHid device
- Active Power source  
(110-240 VAC/POE)

### Supplied by Augury:

- Halo Node

## Setting Up the New Node

### 1 Supply power to Node

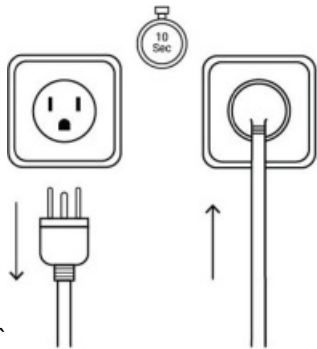

### 2 Sign in to the Halo

1. Navigate to the installed tab
2. Click-add node
3. The App will search for nearby nodes that are on and connected to the network and will display the new node's serial number shortly
4. Select the relevant node and fill in the information requested – Keep in mind the node name cannot be the same, So use a variation such as "Replacement" in the node name
5. Click active Node

### 3 Mount the node using your professional judgment on the best mounting method to affix the mounting plate to the appropriate location.

## Replacing Node in the Halo Installation App

A node can be replaced both from the Field job tab and the installed tab

### VIA FIELD JOB

- 1 Enter the job in the app
- 2 Press and hold (long tap) on the node you wish to replace

Note: if the node does not already have EP's mapped to it, you will only be able to delete it- please see the Delete section for flow.

3 Tap on “Replace”

4 Select the node to replace with

5 Approve replace node

6 Validate the status that the endpoints are linking to the new node and sending data

### **Via tab Installed**

1 Find the node to be replaced In node list

2 Open the menu of Node to be replaced

3 Select “Replace” button

4 Select the Replacement

5 Check in app that all EP and machines from previous node were moved to new node

6 Validate that the data from EPs is uploaded (might take up to 1 hour)

7 If needed see “Delete” section below for flow.

### **Deleting Old Node Out of Halo Installation App**

Why is this necessary? If you leave the old node in the app, it will continue to show up on the Needs Remediation reports. Do not do this until you have verified the new node is connected to the endpoints and sending data correctly.


1 Navigate to the old node in Halo Installation App

2 Click on the three dots to the right of the name

3 Click Delete

4 Confirm the deletion

### **Documents / Resources**

	<p><a href="#"><b>AUGURY Node Replacement</b></a> [pdf] Instructions Node Replacement, Replacement</p>
---	--

## References

- [User Manual](#)

[Manuals+](#), [Privacy Policy](#)

This website is an independent publication and is neither affiliated with nor endorsed by any of the trademark owners. The "Bluetooth®" word mark and logos are registered trademarks owned by Bluetooth SIG, Inc. The "Wi-Fi®" word mark and logos are registered trademarks owned by the Wi-Fi Alliance. Any use of these marks on this website does not imply any affiliation with or endorsement.