

## AURA

GK1 Mechanical  
Keyboard



# AURA GK1 Mechanical Keyboard Instructions

[Home](#) » [Aura](#) » AURA GK1 Mechanical Keyboard Instructions 

### Contents

- 1 AURA GK1 Mechanical Keyboard
- 2 O.S. Support
- 3 Wired Connection
- 4 Product Features
- 5 Frequently Asked Questions
- 6 Documents / Resources
  - 6.1 References
- 7 Related Posts

# AURA

## AURA GK1 Mechanical Keyboard



## O.S. Support

Windows XP/ Vista/ Win 7/ Win 8/ Win 10/Win 11

## Wired Connection

Connect the keyboard to the computer with USB cable.

The computer will recognize and configure the keyboard automatically.

## Product Features

### Backlight

1. The default 11 backlight patterns switch by pressing [FN] + [INS] to cycling switch the light patterns.
2. Press [FN] + [←/→] to adjust light rotating speed, total 5 levels.  
Press [FN] + [↑/↓] to adjust backlight brightness, total 5 levels.
3. Backlight preset gaming mode:
  1. Gaming mode 1: [FN] + [1], [A] [S] [D] [W] [↑] [↓] [←] [→] light on.
  2. Gaming mode 2: [FN] + [2], [1-5] [Q] [W] [E] [R] [A] [S] [D] [G] [B] [L\_Shift] [L\_Ctrl] [L\_Alt] [Space] light on.
  3. Gaming mode 3: [FN] + [3], [W] [R] [A] [S] [D] [L\_Ctrl] [L\_Shift] [L\_Alt] [↑] [↓] [←] [→]
4. Backlight : Press [FN] + [1-3] to enter relevant preset mode, then press [FN] + [HOME] to start recording, LED indicator will flashing till the recording completed, press the key to light it up to set the pattern you want, once key light color setting are completed, press [FN] + [END] to save.  
The [FN]+[PGUP] key can clear the light recording and restore the steady on mode.
5. [WIN] lock  
Press [FN] + [WIN] to lock [WIN] key, repeat to unlock.
6. Commands of key combinations with [FN] key
  1. FN+F1: My computer FN+F7: Play/Pause
  2. FN+F2: Search FN+F8: Stop playing
  3. FN+F3: Calculator FN+F9: Mute
  4. FN+F4: Media player FN+F10: Volume –
  5. FN+F5: Pre track FN+F11: Volume +
  6. FN+F6: Next track FN+F12 Lock keyboard
7. Restore factory settings  
Press and hold [FN] + [PGUP] for 3 seconds.

## Frequently Asked Questions

### 1. Keyboard Unresponsive:

If the keyboard doesn't respond, check if the USB cable is correctly inserted into the computer's USB port. Try using another USB port on the computer.

### 2. Liquid Spill:

If liquid is spilled on the keyboard, immediately unplug the USB cable. Wipe off excess liquid and place the keyboard in a dry, ventilated area. Ensure the keyboard is completely dry before using it again.

Make sure the keyboard is dried naturally before the next use

## Documents / Resources

A high-resolution photograph of the AURA GK1 Mechanical Keyboard. The keyboard is black with a standard QWERTY layout. It features a prominent, illuminated 'AURA' logo on the left side of the keyboard frame. The keys have a textured, slightly raised design. The keyboard is shown from a slightly elevated, front-three-quarter angle, highlighting its slim profile and the lighting effects.

# [AURA GK1 Mechanical Keyboard](#) [pdf] Instructions

## GK1 Mechanical Keyboard, GK1, Mechanical Keyboard, Keyboard

## References

- [User Manual](#)

[Manuals+](#), [Privacy Policy](#)

This website is an independent publication and is neither affiliated with nor endorsed by any of the trademark owners. The "Bluetooth®" word mark and logos are registered trademarks owned by Bluetooth SIG, Inc. The "Wi-Fi®" word mark and logos are registered trademarks owned by the Wi-Fi Alliance. Any use of these marks on this website does not imply any affiliation with or endorsement.