

AURIOL®
4-LD6584-1 Wall Clock
With Temperature and
Humidity



AURIOL 4-LD6584-1 Wall Clock With Temperature and Humidity Instruction Manual


[Home](#) » [AURIOL](#) » AURIOL 4-LD6584-1 Wall Clock With Temperature and Humidity Instruction Manual 

Contents

- [1 AURIOL 4-LD6584-1 Wall Clock With Temperature and Humidity](#)
- [2 Product Specifications](#)
- [3 Product Usage Instructions](#)
- [4 FAQ](#)
- [5 Introduction](#)
- [6 Intended use](#)
- [7 Package contents](#)
- [8 Technical specifications](#)
- [9 Explanation of signal words](#)
- [10 Explanation of sign](#)
- [11 Important safety instructions](#)
 - [11.1 Setting up the product](#)
 - [11.2 The digi-tech gmbh warranty](#)
- [12 Service](#)
- [13 Documents / Resources](#)
 - [13.1 References](#)
- [14 Related Posts](#)

AURIOL®

AURIOL 4-LD6584-1 Wall Clock With Temperature and Humidity

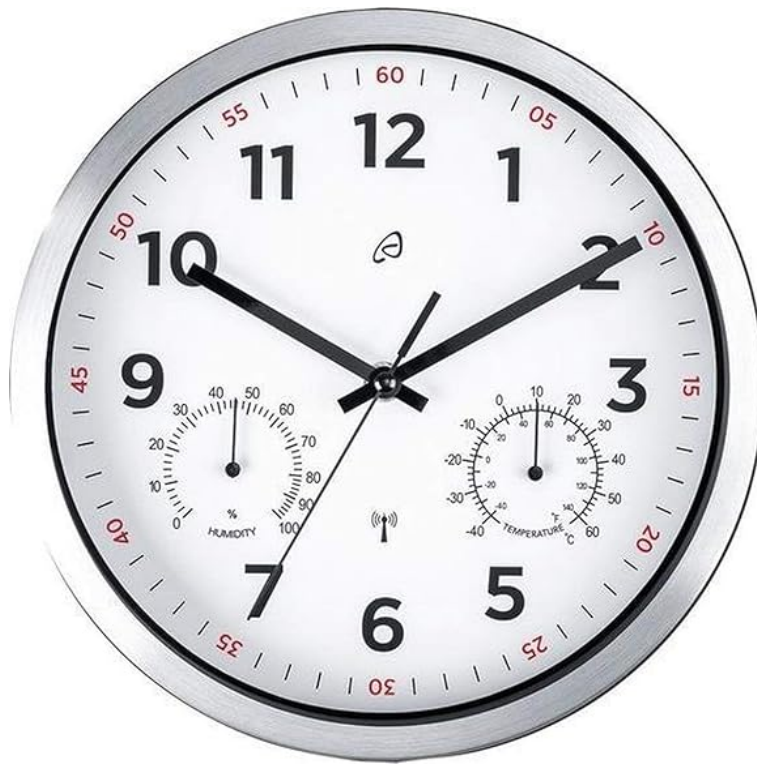

Product Specifications

- **Product Name:** Wall Clock with Temperature & Humidity
- **Model Number:** IAN 459952_2310
- **Manufacturer:** Inter-Quartz GmbH
- **Power Source:** Alkaline Battery (included)
- Indoor Use Only

Product Usage Instructions

Introduction:

The wall clock with temperature and humidity features is designed to display the time along with additional functions such as temperature and humidity readings. It is intended for indoor use only.

Unpacking and Setup:

Upon unpacking the product, ensure the alkaline battery is included. Install the battery correctly and handle with care to prevent breakage.

Setting Up:

- **Time Setting:** Adjust the clock hands to set the correct time.
- **Thermometer:** Allow some time for the sensor to adjust to its new environment after unpacking.
- **Hygrometer:** Similar to the thermometer, give time for the sensor to adapt to the surroundings.

Cleaning and Maintenance:

Regularly clean the clock using a soft, dry cloth. Avoid using harsh chemicals that may damage the surface. Store the clock in a dry place away from direct sunlight and extreme temperatures.

Disposal:

Follow local regulations for proper disposal of the product at the end of its life cycle.

FAQ

- **Can the clock be used outdoors?**

No, the product is intended for indoor use only.

- **How often should I replace the battery?**

The alkaline battery included should last a considerable amount of time, but it is advisable to replace it when the clock shows signs of low power.

- **What should I do if the temperature or humidity readings seem inaccurate?**

Allow some time for the sensors to adjust to the new environment. If issues persist, contact customer support for further assistance.

Introduction

- Congratulations on purchasing your wall clock with thermometer and hygrometer (hereinafter referred to as „device“). In choosing this item, you have opted for a high-quality product. These operating instructions form an integral part of this product. It contains important instructions pertaining to its safety, use and disposal. Please familiarise your-self with all the operating and safety instructions before using this product. Only use this product as described and for the purposes stated.
- If you give this product to anyone else, please be sure to pass on these documents. Please keep the packaging and operating instructions for future reference.

Intended use

- The product is suitable for displaying the time and for using the additional functions described. Any other use or modification of the product is considered improper use.
- The product is only suitable for indoor use.
- The manufacturer is not liable for damage caused by improper use or incorrect operation. The product is not intended for commercial use.

Package contents

Note: Please check the delivery contents after purchase. Check that all parts are present and not defective. If the delivery is incomplete and/or parts are damaged, do not use the product. Contact the service department (see „Processing in the event of a warranty claim“).



- 1 x wall clock
- 1 x battery 1.5 V AA LR6
- 1 x Quick start guide

Technical specifications


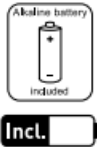

- **Quartz movement** ES368
- **Measuring range/temperature:** -20 – 50 °C
- **Temperature display/tolerance:** +/-3 °C
- **Measuring range/humidity:** 10 % – 100 %


















- **Humidity display/tolerance:** +/-8 %
- **Dimensions:** approx. Ø 25.4 x 4.0 cm
- **Weight:** approx.378 g (excl. batteries)
- **Battery:** 1 x 1.5 V AA R6/LR6

Explanation of signal words

 WARNING!	This symbol/word indicates a hazard with a medium level of risk, which, if not avoided, could result in death or serious injury.
 CAUTION!	This symbol/word indicates a hazard with a low degree of risk which, if not avoided, can result in minor or moderate injury.
ATTENTION:	This signal word warns against potential damages to property.
Note:	This signal word is used for additional information.

Explanation of sign

	Improper use of the batteries may result in explosion and leakage of the battery fluid.
	Alkaline battery included
	Battery: 1 x 1.5 V AA R6/LR6

	Operating instructions
	Read through these operating instructions.
	digi-tech gmbh uses the CE marking to show compliance with the applicable EU directives.
	Setting the time
	Warning, fragile!
	Always keep batteries out of children's reach.
	Do not throw batteries into the fire or place them near fire.
	Batteries must always be inserted with the correct polarity.
	Do not deform or damage batteries.
	Do not open or disassemble batteries.
	Do not mix batteries of different brands and types.
	Do not mix new and used batteries.
	Do not charge batteries.
	Protect batteries from moisture and keep them away from liquids.
	Do not short-circuit batteries.
	Always insert the batteries with the correct polarity.
	Protective gloves must be worn!

Important safety instructions

Safety instructions for the user

WARNING! Danger of death and accidents for toddlers and children!

Children frequently underestimate the risks. Always keep children away from the product.

- This product may be used by children aged 8 years and older and by persons with reduced physical, sensory or mental capabilities or a lack of experience and knowledge if they are supervised or have been instructed in the safe use of the product and understand the hazards involved. Children are not allowed to play with the product.

Cleaning and user maintenance is not to be carried out by children without supervision.

- The packaging material is not a toy. Children can get caught in it and suffocate while playing.
- Do not operate the product if it is damaged.
- Do not expose the product to moisture.
- Only use the product indoors.
- This product does not contain any parts that can be serviced by the consumer.

Battery safety information

WARNING! Danger of death!

- Keep batteries/rechargeable batteries away from children. If swallowed, immediately seek medical attention.
- Ingestion can result in burns, perforation of soft tissue and death. Severe burns can occur within 2 hours after swallowing.
- Do not use rechargeable batteries.
- Never recharge non-rechargeable batteries.
- Do not short-circuit batteries/rechargeable batteries and do not open them. This can result in overheating, fire hazards or explosions.
- Never throw batteries/rechargeable batteries into fire or water.
- Do not subject batteries/rechargeable batteries to mechanical stress.

Risk of battery/rechargeable battery leakage

- **CAUTION!** Risk of injury!

Leaking or damaged batteries/rechargeable batteries can cause burns if they come into contact with skin.

Therefore, wear suitable protective gloves in such cases.

- Avoid extreme conditions and temperatures that may affect batteries/rechargeable batteries, e.g. radiators/direct sunlight.
- If batteries/rechargeable batteries leak, prevent chemicals from coming into contact with skin, eyes and mucous membranes. Rinse any affected areas immediately with clear water and seek medical attention.
- In case of leakage from the batteries/rechargeable batteries, remove them from the product immediately to avoid damage.
- Remove the batteries/rechargeable batteries if the product will not be used for a prolonged period.

- **ATTENTION:** Damage to the product

- Only use the specified type of battery/rechargeable battery.
- Insert batteries according to the polarity markings (+) and (-) into the battery/rechargeable battery and the product.
- Clean the contacts on the battery/rechargeable battery and in the battery compartment with a dry, lint-free cloth or cotton swab before inserting them.
- Remove discharged batteries/rechargeable batteries from the product immediately.

Hanging the product safely on the wall

The product is not designed for use in rooms with high humidity (e.g., bathrooms). Before mounting to the wall, make sure that there are no gas, water or electricity lines at the drilling location. Use suitable screws and dowels (not included in the package contents). Be mindful of the wall's condition. The manufacturer assumes no liability for damage caused by improper fastening. Make sure that:

- no direct heat sources (e.g., heaters) affect the product;
- it is not placed in the path of direct sunlight;
- contact with spraying or dripping water is avoided;
- the product is not mounted in the immediate vicinity of magnetic fields (e.g., loudspeakers);
- no foreign bodies can enter the product;
- candles and other open flames must be kept away from this product at all times to prevent the spread of fire.

Setting up the product

Using the correct polarity, insert a 1.5 V AA R6/LR6 battery into the battery compartment on the back of the product.

Setting the time

Use the dial on the back of the product to set the time.

Thermometer

- Your product has an analogue temperature display (TEMPERATURE).
- The measuring range of the temperature is between -20 – 50 °C.

Note: After unpacking your device, it may take some time for the sensor to adapt to the new environment.

Hygrometer

- Your product has an analogue humidity display (HUMIDITY).
- The humidity measuring range is between 10 – 100 %

Note: After unpacking your device, it may take some time for the sensor to adapt to the new environment.

Cleaning instructions

- Improper cleaning can damage the product. Do not immerse the product in water or other liquids. Avoid any aggressive cleaning agents, brushes with metal or nylon bristles, or any sharp or metallic cleaning objects such as knives, hard spatulas and the like. These can damage the surface.
- Clean the product with a soft, dry, lint-free cloth, such as that used for cleaning glasses lenses.

Storage

If the product is not used for a long time, remove the battery, clean and store the product away from sunlight in a dry, cool place, preferably in the original packaging.

Disposal

- The product and packaging material are recyclable. Please dispose of them separately for better waste management. To learn options for disposal of the used product, please contact your municipal or city administration.
- Check the labelling on the packaging material when separating waste – they are marked with abbreviations (a) and numbers (b) with the following meaning:
 - **1-7:** Plastics

- 20–22: paper and cardboard
- 80-98: Composites.

Disposal of the electrical device

The symbol with the crossed-out dustbin means that electrical and electronic equipment must not be disposed of together with household waste. Consumers are legally obliged to dispose of electrical and electronic equipment at the end of their life separately from unsorted municipal waste. This is to ensure environmentally friendly and resource saving recycling. Batteries and rechargeable batteries that are not an integral part of the electrical or electronic device and can be removed without being destroyed, must be separated from the device before handing it in at a collection point for designated disposal. The same applies to lightbulbs that can be removed from the device without being destroyed. Owners of electrical and electronic equipment who are private individuals can hand them in at the collection points operated by the public waste disposal agencies or at the collection points set up by manufacturers or distributors. Returning used devices is free of charge. This free take-back obligation applies both to purchases in shops and to home deliveries. The place of performance of the obligation to take back is the same as the place of performance of the delivery. Transport costs may not be charged for returned equipment. In general, distributors have the obligation to ensure the free return of used devices by providing suitable return facilities within a reasonable distance. Consumers have the option to return an old device free of charge to a distributor who is obliged to take it back if they purchase an equivalent new device with essentially the same function. This option is also available for deliveries to a private household. In the case of distance selling retailers, the option of free collection when purchasing a new device is limited to heat exchangers, display screen devices, and large devices that have at least one outer edge with a length of more than 50 cm. The distributor must ask the consumer at the time of concluding the sales contract about any corresponding intention to return the product. Beyond this, consumers can hand in up to three old devices of one type free of charge at a distributor's collection point without this being linked to the purchase of a new device. However, the edge lengths of the respective devices must not exceed 25 cm. Remove the battery without destroying it before disposal and dispose of it separately (see Disposal of batteries).

Disposal of batteries

- The accompanying symbol indicates that batteries must not be disposed of with normal household waste. Defective or used batteries must be recycled in accordance with Directive 2006/66/EU and its amendments. Consumers are legally obliged to hand in all batteries, regardless of whether they contain harmful substances, such as:
Cd = cadmium, Hg = mercury, Pb = lead, Li = lithium or not, to a collection point in their municipality/district or a retail outlet to ensure environmentally friendly disposal and to recover valuable raw materials, such as cobalt, nickel or copper. The return of batteries is free of charge.

WARNING! Environmental damage due to incorrect disposal of batteries!

Some of the possible contents, such as mercury, cadmium and lead, are poisonous and, if not disposed of properly, endanger the environment. Heavy metals, for example, can have harmful effects on the health of humans, animals and plants and accumulate in the environment and in the food chain, and then enter the body indirectly via food.

WARNING! Risk of explosion!

With used batteries containing lithium (Li = lithium), there is a high risk of fire. Therefore, special attention must be paid to the proper disposal of used and rechargeable batteries containing lithium. Incorrect disposal can also lead to internal and external short circuits due to thermal effects (heat) or mechanical damage. A short circuit can lead to a fire or an explosion and have serious consequences for humans and the environment. For this reason, tape off the poles of lithium-based batteries prior to disposal in order to avoid an external short circuit. Batteries that are not permanently installed in the device must be removed and disposed of separately before disposing of the device. Please return batteries only when fully discharged! Use rechargeable batteries instead of disposable batteries whenever possible.

Simplified EU declaration of conformity

- Digitech gmbh hereby declares that the wall clock with thermometer and hygrometer 4-LD6584-1, 4-LD6584-2 complies with the RoHS directives 2011/65/EU and 2014/30/EU.
- You can download your operating instructions and declaration of conformity here: www.digi-tech-gmbh.com/downloads
- Then click on the magnifying glass and enter the item number 459952_2310.

The digi-tech gmbh warranty

This device has a 3-year warranty valid from the date of purchase. In the event of defects in this device, you have legal rights against the seller of the device. These statutory rights are not limited by our warranty set out below.

Warranty terms

The warranty period begins on the date of purchase. Please keep the receipt. This document is required as proof of purchase. If a material or manufacturing defect occurs within three years of the date of purchase of this device, the device will be repaired or replaced – at our discretion – by us free of charge. This warranty requires that the defective device and the purchase receipt are presented within the three-year period with a briefly written statement stating the nature of the defect and when it occurred. If the defect is covered by our warranty, you will receive the repaired or a new device back. No new warranty period begins with the repair or replacement of the device.

Warranty period and statutory claims for defects

Statutory warranty rights do not extend the warranty period. This also applies to replaced and repaired parts. Any damage or defects already present at the time of purchase must be reported immediately after unpacking. After the warranty has expired, any repairs are subject to a charge.

Scope of Warranty

The device was carefully manufactured according to strict quality guidelines and carefully checked before delivery. The warranty applies to material or manufacturing defects. This warranty does not cover parts of the product that are subject to normal wear and tear and can therefore be regarded as wear parts or for damage to fragile parts, e.g. switches, batteries or parts made of glass. This warranty is void if the unit has been damaged or improperly used or maintained. For proper use of the device, all instructions given in the manual must be strictly observed. Uses and actions that are advised against or warned against in the operating instructions must be avoided at all costs. The device is designed exclusively for private and not for commercial use. The warranty expires in the event of abusive or improper handling, the use of force or repairs that were not carried out by our authorised service branch.

Processing in the event of a warranty claim

To ensure that your request is processed quickly, please follow the instructions below:

- For all inquiries, please have the receipt and item number (459952_2310) ready as proof of purchase.
- Please refer to the type plate, engraving, title page of your manual (bottom left) or to the sticker on the back or underside for the item number.
- If functional errors or other defects occur, first contact the following service department by phone or email.
You can download these instructions and many other manuals, product videos and software at www.lidl-service.com.

This QR code will take you directly to the Lidl service page (www.lidl-service.com), where you will be able to access your operating instructions by entering the item number (459952_2310).



Service


Inter-Quartz GmbH, Valterweg 27A, 65817 Eppstein, GERMANY Email: support@inter-quartz.de, Telephone: +49 (0)6198 571825

- 00800 5515 6616
- 8009 4403
- 800 62851

Supplier

Please note that the following address is not a service address. Contact the Service Office named above first. digi-tech gmbh, Valterweg 27A, 65817 Eppstein, GERMANY

Documents / Resources

 The thumbnail shows the cover of the instruction manual. At the top, it says 'AURIOL'. Below that, there is a list of features and specifications in German. At the bottom, there is a small image of the wall clock and the text 'IAN 459952_2310'.	<p>AURIOL 4-LD6584-1 Wall Clock With Temperature and Humidity [pdf] Instruction Manual IAN 459952_2310, 4-LD6584-1, 4-LD6584-2, 4-LD6584-1 Wall Clock With Temperature and Humidity, 4-LD6584-1, Wall Clock With Temperature and Humidity, With Temperature and Humidity, Temperature and Humidity, Humidity</p>
--	--

References

- [User Manual](#)

[Manuals+.](#) [Privacy Policy](#)

This website is an independent publication and is neither affiliated with nor endorsed by any of the trademark owners. The "Bluetooth®" word mark and logos are registered trademarks owned by Bluetooth SIG, Inc. The "Wi-Fi®" word mark and logos are registered trademarks owned by the Wi-Fi Alliance. Any use of these marks on this website does not imply any affiliation with or endorsement.