


AURZEN
EAZZE D1 Smart
Projector Netflix



AURZEN EAZZE D1 Smart Projector Netflix User Manual

[Home](#) » [AURZEN](#) » AURZEN EAZZE D1 Smart Projector Netflix User Manual 

Contents

- [1 AURZEN EAZZE D1 Smart Projector Netflix](#)
- [2 TROUBLESHOOTING GUIDE](#)
- [3 IN THE BOX](#)
- [4 PRODUCT OVERVIEW](#)
- [5 QUICK START](#)
- [6 Image Adjustment](#)
- [7 PROJECTOR CONNECTION AND INPUT SOURCE](#)
- [8 WIFI CONNECTION](#)
- [9 BT CONNECTION](#)
- [10 SETTINGS](#)
- [11 PROJECTION DISTANCE AND SIZE](#)
- [12 SPECIFICATION](#)
- [13 FCC Statement](#)
- [14 CONTACT](#)
- [15 Documents / Resources](#)
 - [15.1 References](#)

AURZEN

AURZEN EAZZE D1 Smart Projector Netflix



TROUBLESHOOTING GUIDE

1. Can I directly use Netflix on the projector?

- Yes, you can. The projector comes with preinstalled and officially licensed Netflix/YouTube/Prime Video apps. You have the convenience of watching your favorite videos directly on the projector without any hassle.

2. The copyrighted content from Hulu, Disney+, and similar services can not be mirrored or cast.

- Due to the copyright restriction from Hulu, Disney+, and similar services, the content MAY NOT be mirrored or cast. To play copyrighted content, please prepare a laptop, Fire TV Stick, Roku stick, or Chromecast™ and connect it to the projector.


3. Blurry image

- Adjust the focus/keystone.
- The projector and screen/wall must be in an effective distance.

4. Why doesn't the remote control work?

- Make sure the remote points at the IR receiver directly.
- Please make sure you have installed two AAA batteries in the remote control.
- Avoid mixing new batteries with old ones in the remote control as this can result in insufficient power supply and operational issues.

5. Upside down images

- Go to Homepage> Settings  > Projection to flip the projection image.

6. Factory reset

- Go to Homepage> Settings  > Setup> Reset Default to restore the projector to default settings.

7. Can I sideload Android Apps onto the projector?

- Sorry, you cannot sideload Android apps onto the projector.

8. How to solve the black spot in the picture?

- It can be easily removed. Please scan the QR code on the back of the remote to get the video or contact us for a video to solve it.

9. Auto Focus/Auto Keystone is not working.

- Please restore the projector to factory settings and try again. If the issue still persists, please send a video to our service team by email for assistance.

10. The picture is not bright enough.

- To enjoy the best viewing experience, we suggest using it in a dark environment. The darker the room,

the better the image.

 
IN THE BOX



Projector



Remote
(Batteries Not Included)



Power Adapter



 
HD Cable




User Manual

NOTICE







Recommended

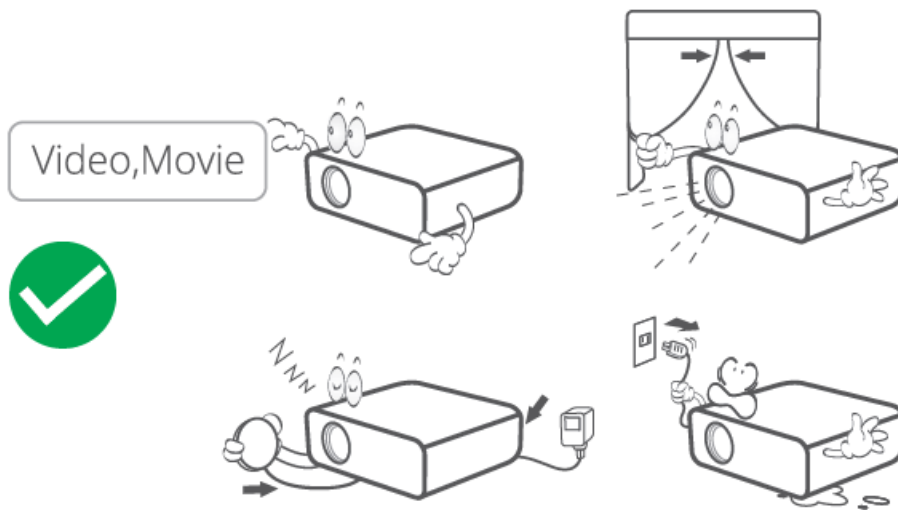

NOT Recommended

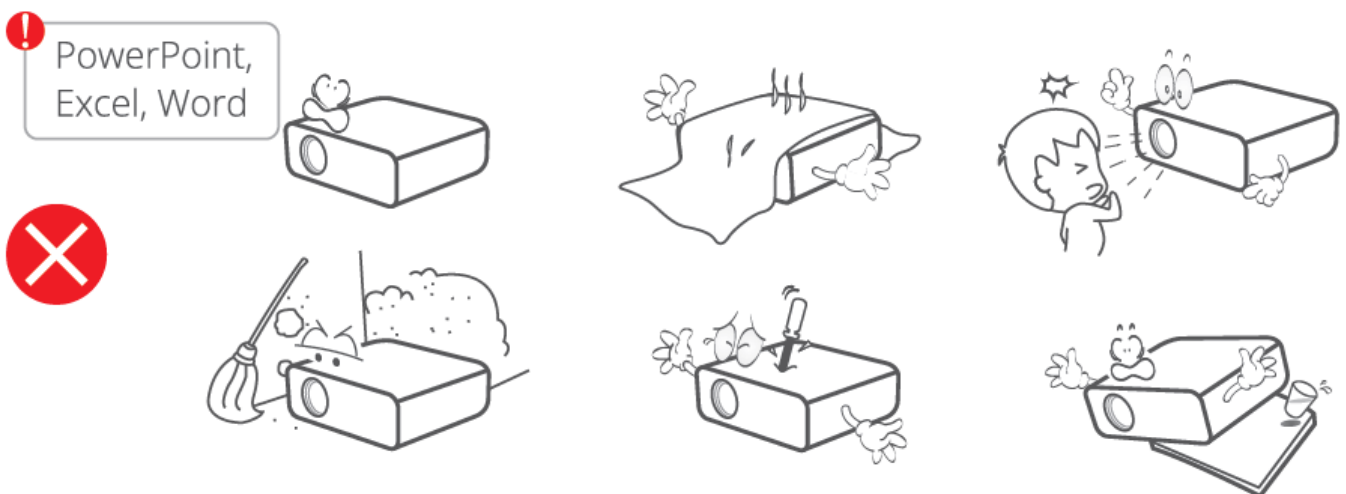 

PRODUCT OVERVIEW

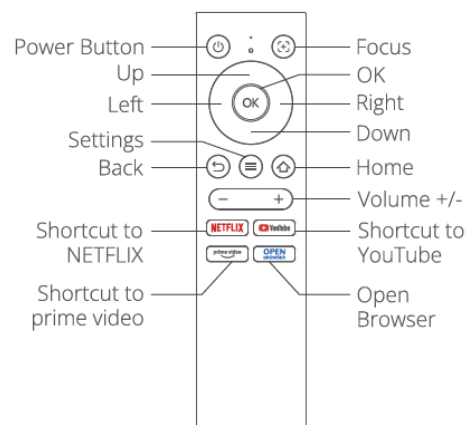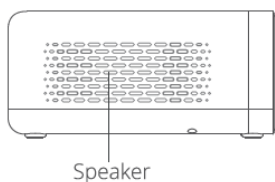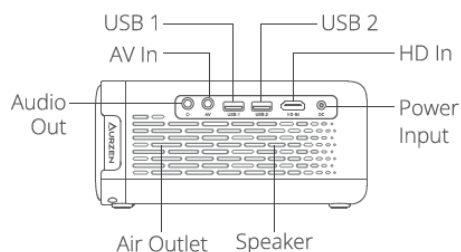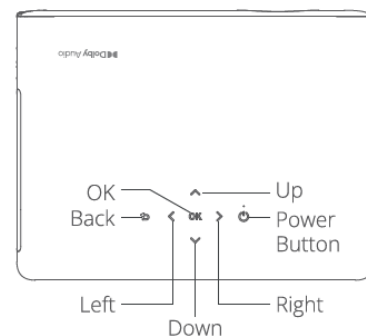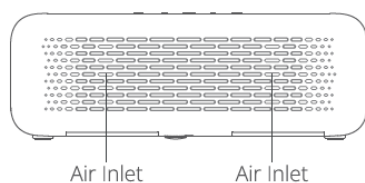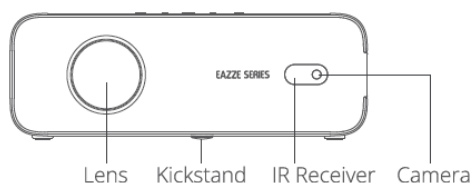      


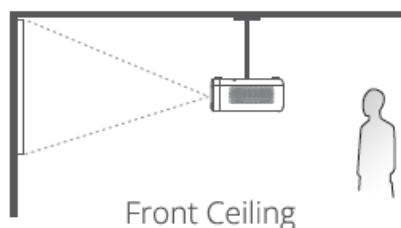 
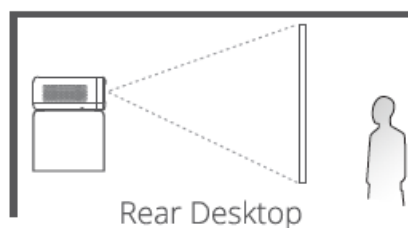 
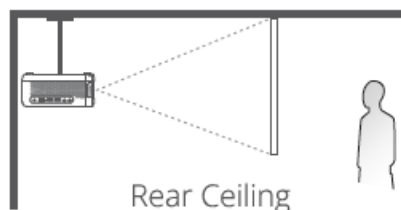 
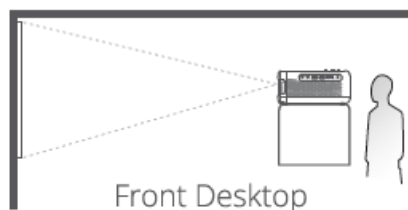 
QUICK START

Projector Installation

 
Note

Whichever installation option you select, please make sure:


- To go to Homepage > Settings  > Projection to select the corresponding projection mode, so the images can be projected correctly.
- Mounting Screw: 1 / 4" (not included)




Power On/Off

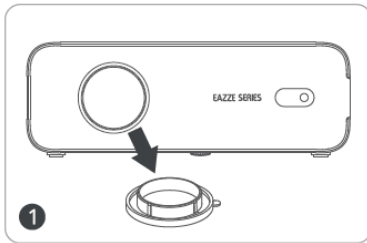

Take off the lens cover.

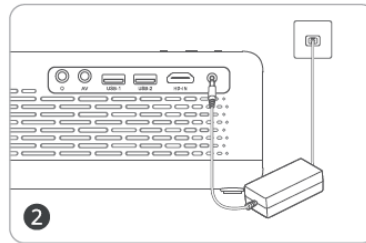 

Connect the power adapter to an outlet.

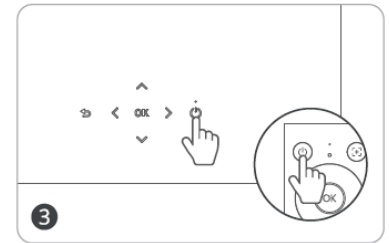 

Press the **Power Button** to turn on/off the projector.

Setup Wizard

Follow the setup wizard to choose your preferred language, select the correct region, establish a WiFi connection, and access the homepage.

Tip: To ensure successful Wi-Fi search, please select the correct region.

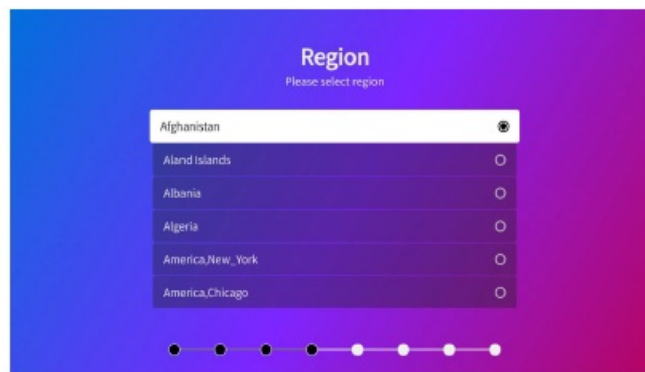 



Image Adjustment


Focus

 
Auto Focus

When the projector detects shaking/rapid movement, it will automatically adjust the image quality.

Tip: You can go to Homepage > Settings  > Focus to enable Auto Focus After Boot, allowing the projector to automatically adjust the focus after it is powered on.

Electric/Manual Focus

You can also press the Focus button on the remote or go to Homepage > Settings  > Focus > Manual Focus to sharpen the image focus until the blurry image becomes clear.

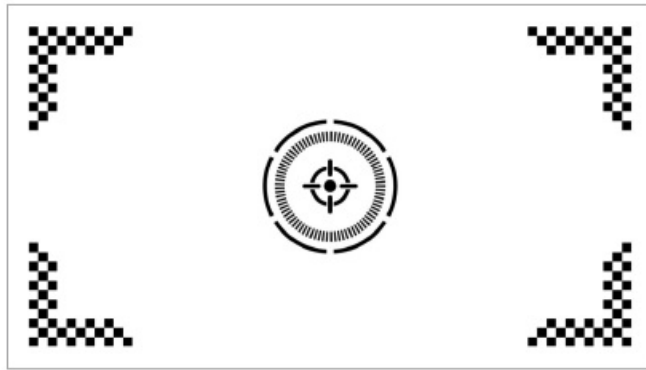


Keystone Correction


Note: Upon powering on the projector, it will automatically correct any keystone distortion within a range of vertical/horizontal $\pm 45^\circ$. A side projection at 20 degrees has virtually no impact on the resolution, while between 20 and 45 degrees, there may be a slight impact.

Auto Keystone Correction

 When the projector detects shaking/rapid movement, it will automatically correct the keystone distortion.

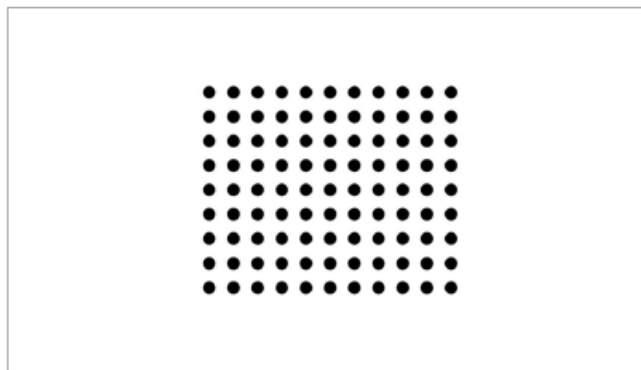


Tips

You can enable more automatic features by going to Homepage > Settings  > Keystone.

- Auto Correction After Boot: Automatically corrects vertical distortion after the projector is powered on.
- Auto Screen: Automatically adjust the projected image to match your screen.
- Auto Avoid: Automatically detects and avoids obstacles in specific areas.
- In case the Auto Avoid/Auto Screen is not performing optimally, you can achieve the desired effect by adjusting the keystone/focus.

Manual Keystone Correction

- Go to Homepage> Settings  > Keystone> Four Points Correction to manually correct the image shape by four points.

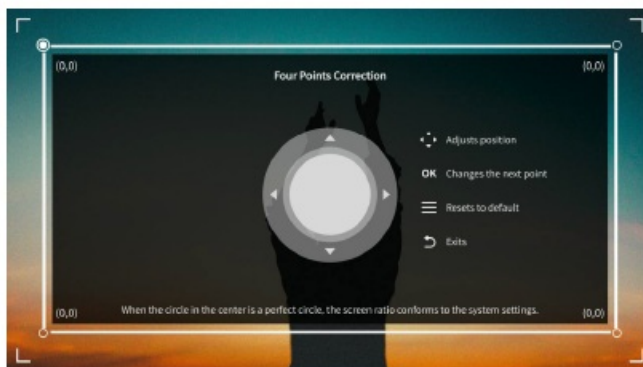 

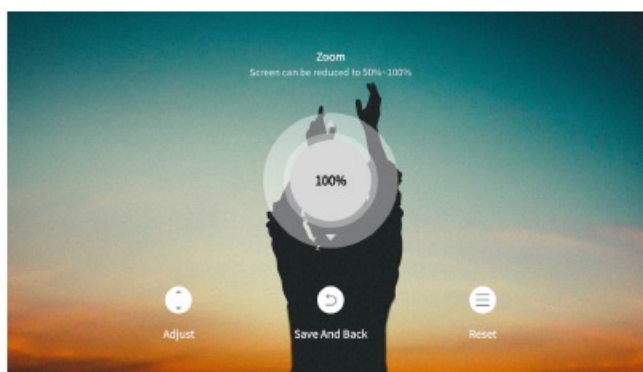 



Image Scaling

- Go to Homepage> Settings  > Zoom to reduce or enlarge the image size between 50% and 100%.



Play Content from Officially Licensed Apps like Netflix, Prime Video and YouTube

 
- Go to the Homepage and select your preferred platform via the shortcuts on the remote, then log in to your account to play the corresponding content.


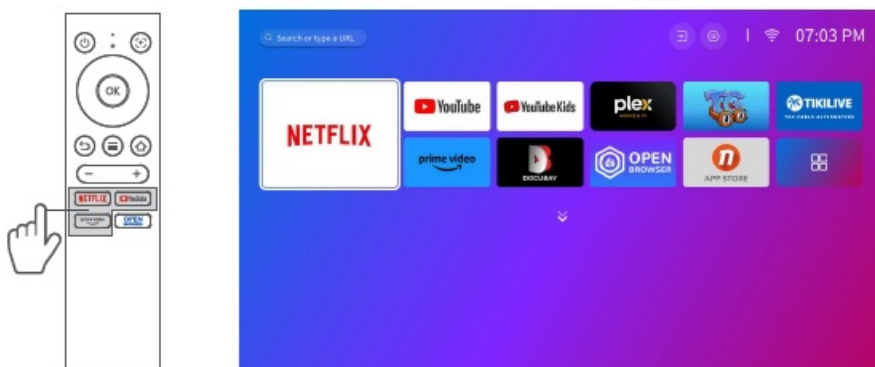


PROJECTOR CONNECTION AND INPUT SOURCE


- Connect your device to the projector correctly, then select the right input source.



USB Connection

  - To play files stored on a USB disk, insert the disk into the projector. Then go to Homepage> Inputs  and select USB to play the desired file directly.

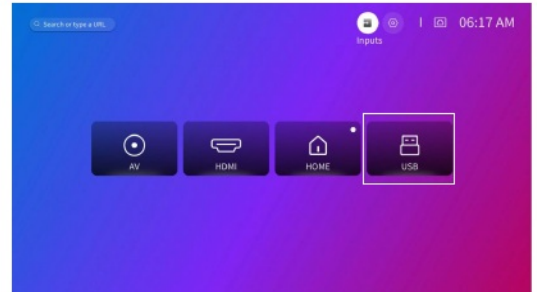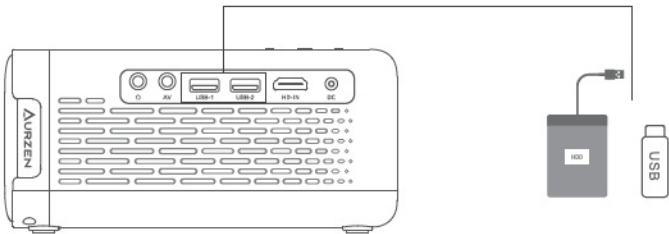


HD Connection

 
 
- To connect a device with an HD output port to the projector, use the provided HD cable to connect it to the projector's HD input port. Then go to Homepage> Inputs  and select HDMI.

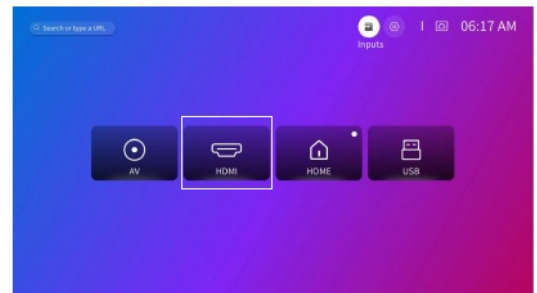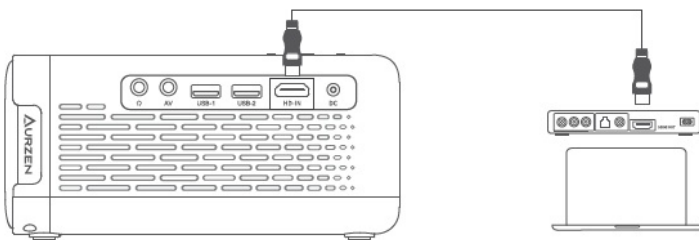

Note: For gaming, a wired HD connection is recommended due to faster processing and reduced audio-visual delays compared to a wireless screen! mirroring.


AV Connection

  To connect a device with an AV output port to the projector, use the AV cable (not included) to connect it to the projector's AV input port. Then go to Homepage> Inputs  and select AV.

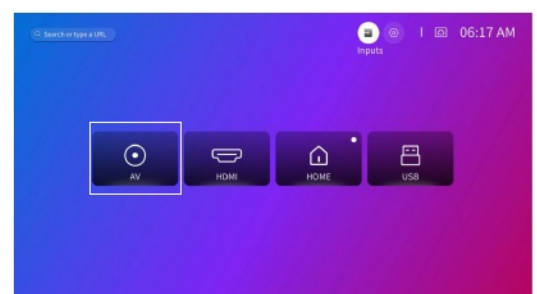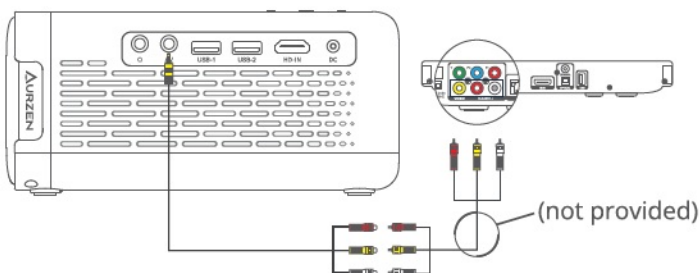



Wired Speaker and Headphones Connection

 - This option is not required to select any input source.

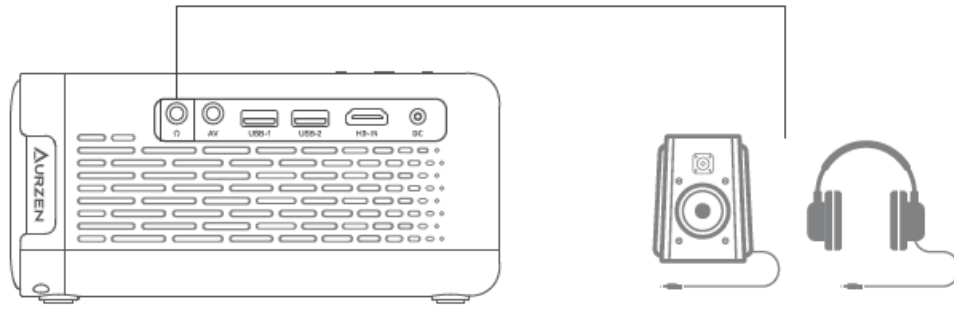

WIFI CONNECTION

  - You can connect your projector to your router's WiFi by going to Homepage> Settings  > Network.

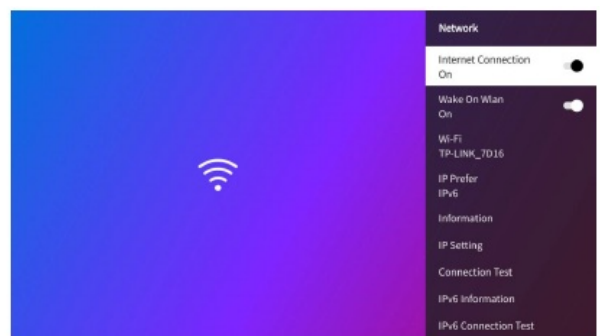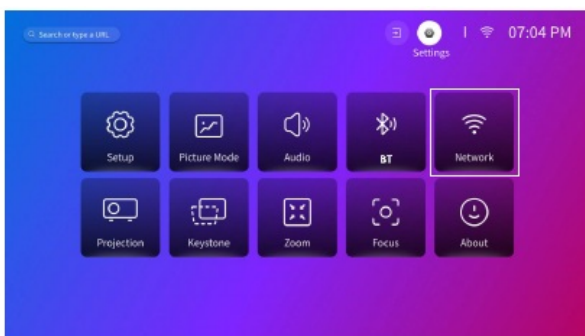

SCREEN MIRRORING

Important Note: Copyrighted content from Hulu, Disney+, or other similar streaming services CANNOT be wirelessly mirrored or cast due to copyright: restrictions.

 
 
For Android System

To activate this function, please make sure your Android device supports Multi-screen/Smart View/Wireless Display. Names vary on different Android devices.

- **Step 1:** Go to the WiFi setting of your Android device to switch on the option of Wi-Fi.

Note: It is not necessary to have a successful WiFi connection, but it is important to ensure that the WiFi is turned on in your Android device.

- **Step 2:** Go to Homepage > My Apps  > Screencast to enter the interface below.

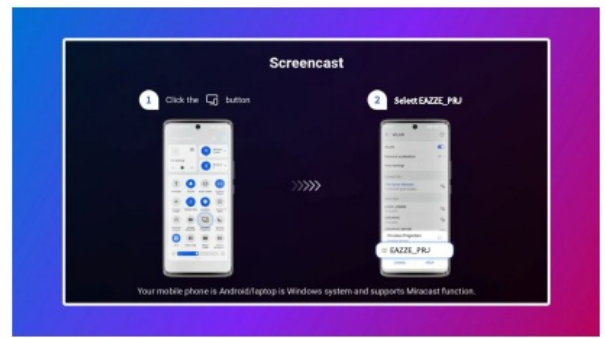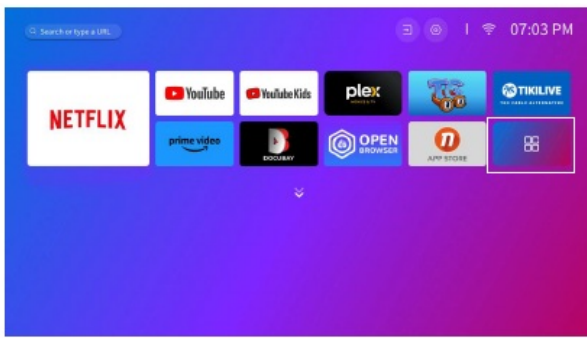


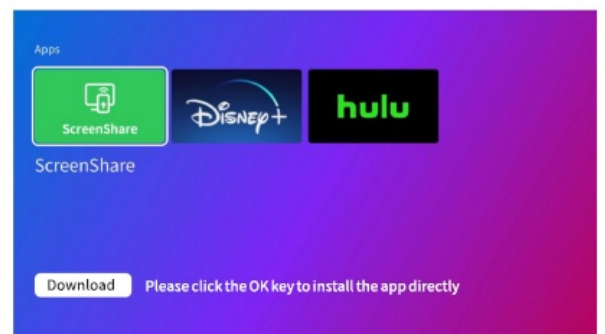 
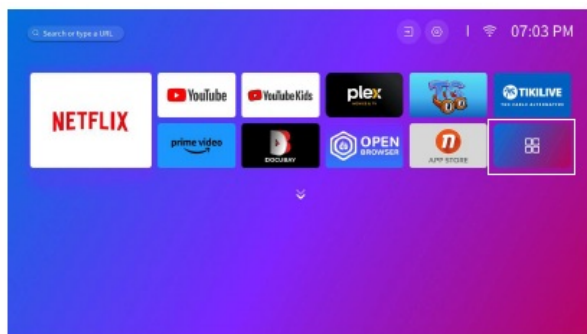 
- **Step 3:** Activate the Multi-screen/Smart View/Wireless Display function on your Android device and search for the projector.
- **Step 4:** Choose EAZZE_PRJ from the list, and once the connection is successful, the content on your Android device will be mirrored onto the projection screen or wall.

For iOS System

- **Step 1:** Connect the projector and your mobile device to the same router's WiFi or directly connect your projector to the mobile device's hotspot.

Notes:

 
- When you are using the mobile device's hotspot, the content will be mirrored using cellular data.
- Copyrighted content from Hulu, Disney+, or other similar streaming services CANNOT be wirelessly mirrored or cast due to copyright restrictions.
- **Step 2:** Go to Homepage > My Apps  > APP assistant. Then, select ScreenShare and press OK on the remote to download and install the ScreenShare app.



 
Tips:

- You will need to download the ScreenShare app for the initial setup. Afterward, you can skip this step.
- After downloading the ScreenShare app, please reboot the projector to ensure the proper functioning of the app.

Step 3: Go back to the My Apps page, and then launch the ScreenShare app to enter the following page.

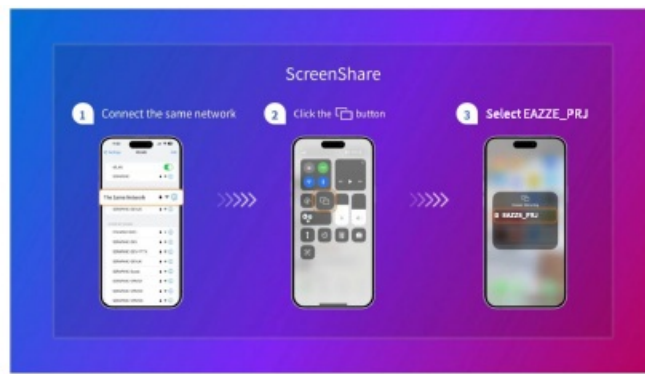


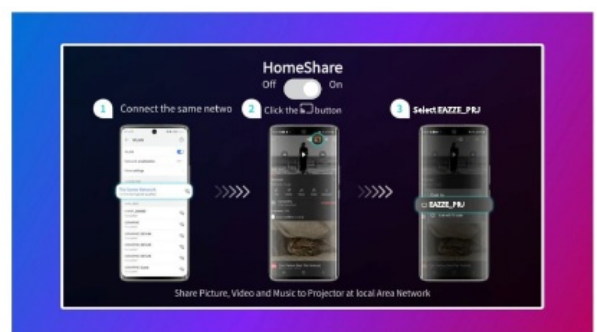 
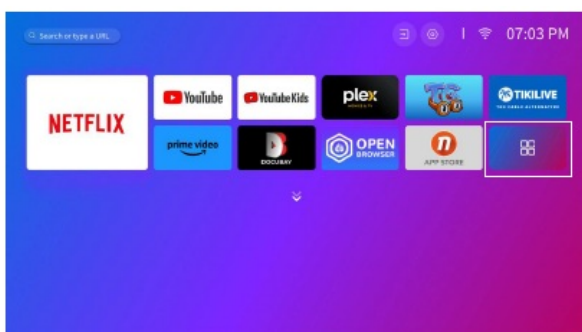 
Step 4: Go to the Control Center of your iOS device, then tap Screen Mirroring to search for the projector.

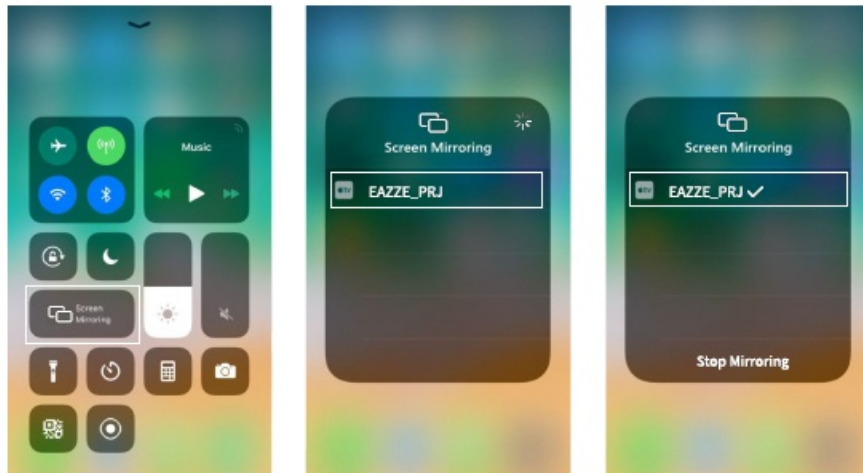


Step 5: Choose EAZZE_PRJ from the list, and once the connection is successful, the content on your iOS device will be mirrored onto the projection screen or wall.

Home Share

- **Step 1:** Connect the projector and your mobile device to the same router's WiFi.
- **Step 2:** Go to Homepage> My Apps  and then select HomeShare to access the following page. Ensure the toggle is switched to On.



- **Step 3:** Launch a video player App on your mobile device and select a video to play.
- **Step 4:** Tap  to search for the projector and select EAZZE_PRJ to connect. The contents on your device will be cast to the wall/screen.

Tip:


When you cast a video from your mobile device, the video will only be displayed on the projected screen and you


can still use your mobile device without interrupting the video or showing any of your other content.

 
 
BT CONNECTION

Use as A BT Speaker

 
It is possible to use this projector as a BT speaker by connecting your mobile device to it through a BT connection.

Tip: Ensure the projector's BT is enabled by going to Homepage > Settings  > BT.

Step 1: Go to Homepage > My Apps  > BT Speaker to make the projector ready for a BT connection.

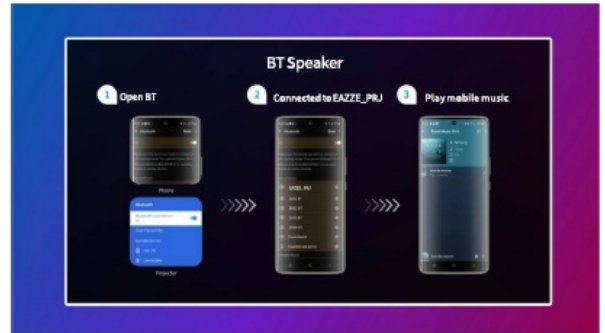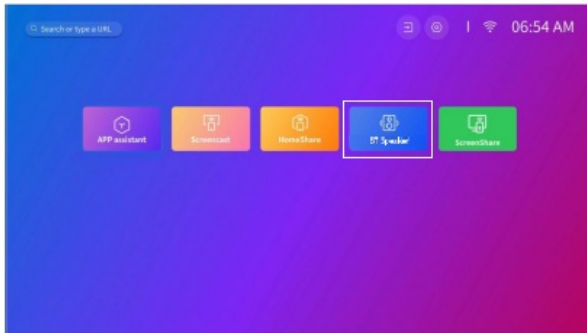


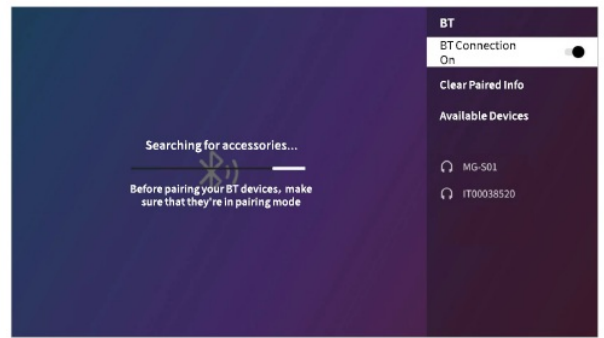 
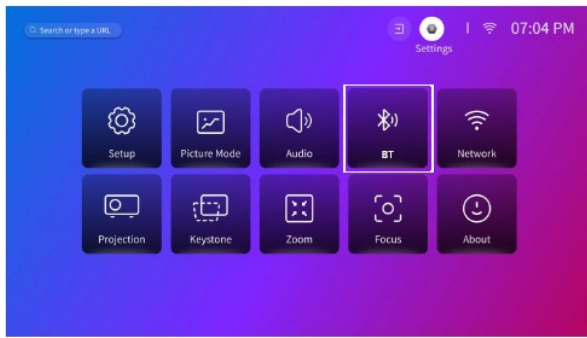 
- **Step 2:** Access your mobile device's BT settings and activate BT. Search for EAZZE_PRJ in the available devices list to pair your mobile device with the projector.

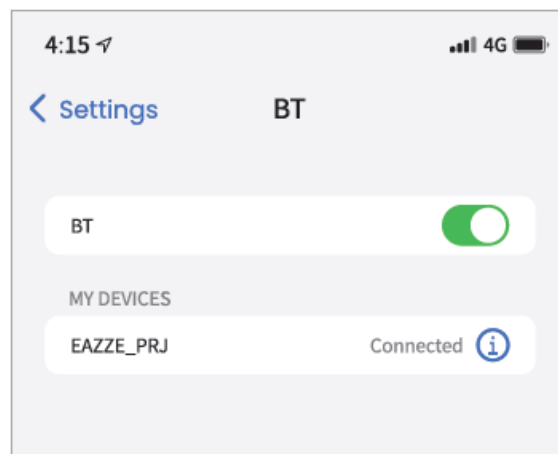

Connect to An External BT Speaker

In addition to using the wired 3.5mm audio output port, you can also connect BT speakers or BT Headphones to this projector via a BT connection.

 
- **Step 1:** Turn on your BT device and make it ready for a BT connection.
- **Step 2:** Go to Homepage> Settings  > BT to scan available BT devices, then select your BT device and pair it with the projector.



IMPORTANT

- Compared with the wired connection to a speaker, BT wireless connection spends more time processing digital audio data, converting said data to an audio signal, and streaming the signal. There may be a delay or slight lag on audio due to signal interference.
- As a result, the sound on the speaker may not be in sync with the image on the projector, especially when you are using wireless screen mirroring with WiFi and BT wireless connection at the same time.
- If you are experiencing this situation, please check the following options to improve audio quality:
- Instead of using wireless screen mirroring with WiFi and BT wireless connection at the same time, we recommend using wired screen mirroring and BT connection or using HD connection via the provided HD cable and BT connection simultaneously. If you still want to use wireless screen mirroring, it is recommended to output the audio via a wired speaker.
- Move your BT device closer to the projector.
- Keep the projector and your BT device away from other BT devices to avoid interference.
- You may be able to adjust the latency (Lip Sync) on your device which is playing the video. The way to adjust the latency varies with different devices; please consult it from the device manufacturer.
- Due to the compatibility issue between BT speakers/headphones and the projector, few BT devices may not be paired with the projector via BT wireless connection. Please contact us via email for further assistance.

SETTINGS

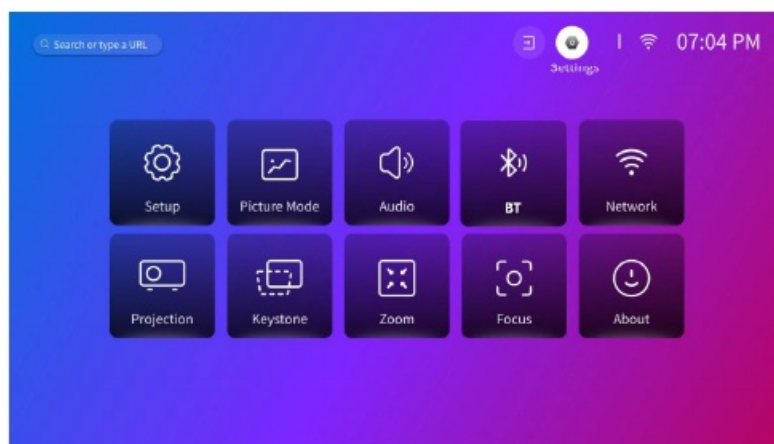

1. Set the projector's language.
2. Adjust the date and time settings.

3. Set the screen to automatically activate screensaver after a specific period of inactivity.
4. Set the screen turn-off timer.
5. Set the screen to automatically turn off after a specific period of inactivity.
6. Update the software as needed.
7. Restore the projector to the factory settings.

Picture Mode

Select the picture mode and adjust the image preferences such as color temperature, contrast, etc.

Audio

1. Set your preferred sound style such as vivid, movie, etc.
2. Choose the correct digital output mode. And more.

BT

- Connect the projector to an external BT speaker.

Network

- Connect the projector to a working WiFi network.

Projection

- Select the appropriate projection mode to ensure accurate image projection.

Keystone

1. Enable the projector to automatically correct the keystone after it is powered on.
2. Enable the projector to automatically correct the keystone after it is moved.
3. Enable the projected image to automatically match the screen.
4. Enable the projector to automatically avoid obstacles.
5. Correct the keystone manually.

Zoom

- Modify the image size between 50% and 100%.

Focus

 
1. Enable the projector to automatically adjust the focus after it is powered on.

2. Enable the projector to automatically adjust the focus after it is moved.
3. Adjust the focus manually.

About

1. Check version info, license info, and device temperature.
2. Rename the projector.


PROJECTION DISTANCE AND SIZE

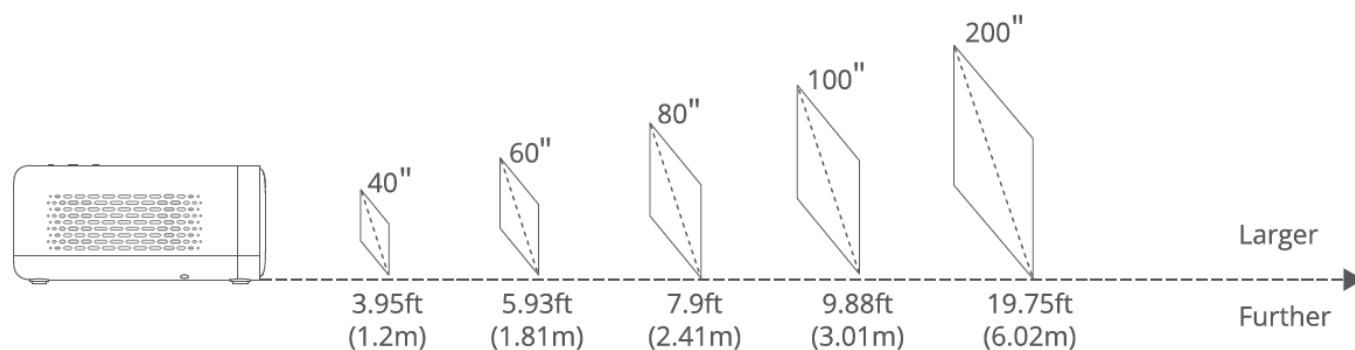


- The recommended projection distance varies with different projection contents. Please adjust the distance between the wall/ screen and the projector as needed.
- Ambient darkness will improve the clarity of the projected images.
- For optimal image quality, we recommend a projection size of 50 to 80 inches.

EXPLANATION OF APPS

 
1. You can't download the apps on the APP STORE platform, but you can log into your account to watch the content directly.

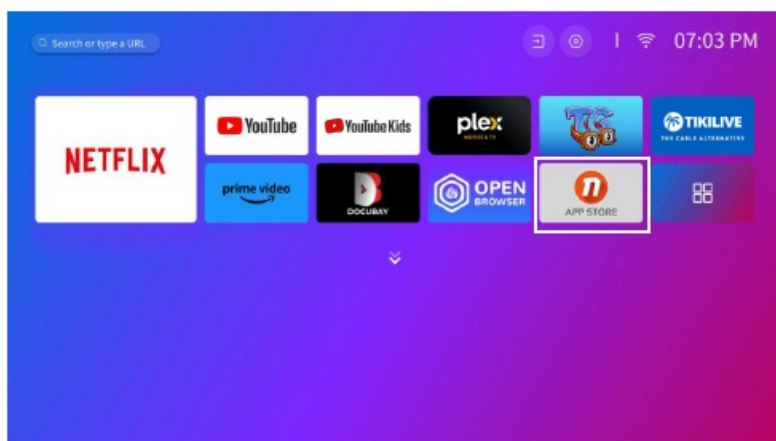

 2. You can download some apps in the APP assistant and log into your account to watch the content directly.

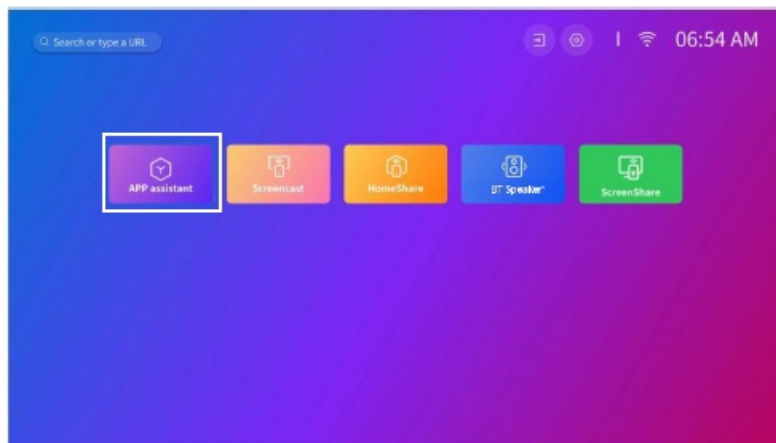

 3. After downloading the app, return to the homepage, pull down to find the corresponding app, and open it to view its content.

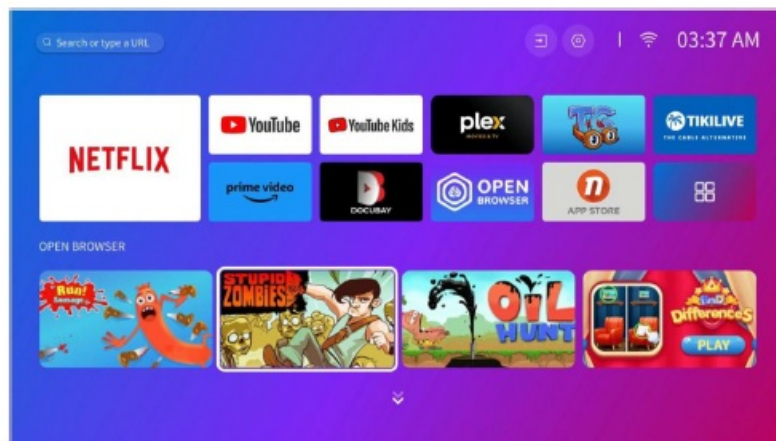

SPECIFICATION

| | | | |
|--------------------|--------------------------|--------------|------------------------------------|
| Display Technology | LCD | Light Source | LED |
| Resolution | Native 1920 x 1080P | Input Signal | 576i/576P/720i/720P/10S0i/1080P/4K |
| Installation Type | Front/Rear /Ceiling | Aspect Ratio | 16:9 |
| Focus | Auto and Electric/Manual | Keystone | Auto and Electric/Manual |

| | | | |
|------------------------|--|------------------------|----------------------------------|
| Unit Dimension | 9.1×6.9×3.2 inches (231. Sx 175x82mm) | Power Supply | DC21V=2.8SA |
| Photo Format Supported | J PG/PNG/BM P/GIF/ J PEG | Audio Format Supported | OGG/AAC/MP3/FLAC/WAV |
| Video Format Supported | MKV/M P4/FLV/MOV/M PG/ 3GP/MPEG1 | Ports | HDInx1 /USBx2/AudioOutx1 /AVInx1 |
| Mounting Screws | 1/4" | Screw Number | 1 (not included) |

FCC Statement

Any Changes or modifications not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment. This device complies with part 15 of the FCC Rules. Operation is subject to the following two conditions:

1. This device may not cause harmful interference, and
2. this device must accept any interference received, including interference that may cause undesired operation.

NOTE: This equipment has been tested and found to comply with the limits for a Class B digital device, according to part 15 of the FCC Rules.

These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses, and can radiate radio frequency energy and, if not installed and used under the instructions, may cause harmful interference to radio communications.

However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and the receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio/TV technician for help.

This equipment complies with FCC radiation exposure limits set forth for an uncontrolled environment.

This equipment should be installed and operated with a minimum distance of 20cm between the radiator & your body.

This transmitter must not be co-located or operating in conjunction with any other antenna or transmitter.

ISED Warning

This device complies with Industry Canada license-exempt RSS standard(s). Operation is subject to the following two conditions:

1. this device may not cause interference, and
2. this device must accept any interference, including interference that may cause undesired operation of the device.

The device is compliant with RF exposure guidelines, users can obtain Canadian information on RF exposure and compliance. The minimum distance from the body to use the device is 20cm.






This transmitter must not be co-located or operating in conjunction with any other antenna or transmitter.

RECYCLING

This product bears the selective sorting symbol for Waste electrical and electronic equipment (WEEE). This means that this product must be handled according to European directive 2012/19/EU to be recycled or dismantled to minimize its impact on the environment.

User has the choice to give their product to a competent recycling organization or the retailer when they buy new electrical or electronic equipment.



-  The symbol indicates class II equipment
-  The symbol indicates AC voltage
-  The symbol indicates the DC voltage
-  For indoor use only
-  The exclamation point within an equilateral triangle is intended to alert the user to the presence of important operating and maintenance (servicing) instructions in the literature accompanying the appliance.

The mains plug is used as the disconnect device. The socket outlet shall be installed near the equipment and shall be easily accessible.

EU Compliance Statement: Shenzhen Neutop Optoelectronics Co., Ltd. hereby declares that this device complies with the essential requirements and other relevant provisions of the Directive 2014/53/EU.


The full text of the EU Declaration of Conformity is available at the following internet address:

https://cdn.shopify.com/s/files/1/0720/5109/7892/files/D1-Neutop_Declaration_of_Conformity.pdf?v=1714014385

CONTACT

- North America/United Kingdom: support@aurzen.com
- Europe: support.eu@aurzen.com
- +1 [667-218-4830](tel:667-218-4830)

Documents / Resources

| | |
|---|---|
|  | <p>AURZEN EAZZE D1 Smart Projector Netflix [pdf] User Manual</p> <p>EAZZE D1 Smart Projector Netflix, EAZZE D1, Smart Projector Netflix, Projector Netflix, Netflix</p> |
|---|---|

References

- [User Manual](#)

[Manuals+.](#) [Privacy Policy](#)

This website is an independent publication and is neither affiliated with nor endorsed by any of the trademark owners. The "Bluetooth®" word mark and logos are registered trademarks owned by Bluetooth SIG, Inc. The "Wi-Fi®" word mark and logos are registered trademarks owned by the Wi-Fi Alliance. Any use of these marks on this website does not imply any affiliation with or endorsement.