Home » AUSDOM » AUSDOM Foliokey10.9 Tablet Keyboard Case User Manual

### **AUSDOM Foliokey10.9 Tablet Keyboard Case User Manual**

## **AUSDOM®**

# Contents 1 User Manual 1.1 Foliokey10.9

1.2 Tablet Keyboard Cases

1.3 ■ 1. Product Overview

1.4 ■ 2. Packing List

1.5 **■** 3. Pairing

1.6 ■ 4. Sleep Mode

**1.7 ■ 5.** Charging

1.8 ■ 6. Function Key Description

1.9 ■ 7. Indicator

1.10 ■ 8. Schematic Diagram of Touchpad

**Functions** 

1.11 ■ 9. Specifications

1.12 **■** 10. Warranty

1.12.1 ■ Safety Instructions


1.13 RECYCLING

1.14 WARRANTY CARD

2 Documents / Resources

**3 Related Posts** 


#### **User Manual**

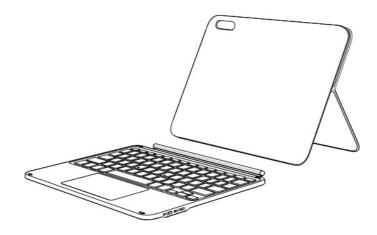

Foliokey10.9

**Tablet Keyboard Cases** 

Thank you for purchasing AUSDOM Tablet Keyboard Cases

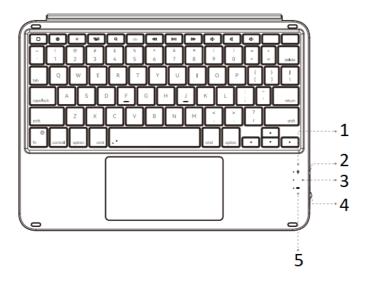

- 1. Low battery indicator
- 2. USB-C charging port
- 3. Caps lock indicator
- 4. Power switch
- 5. Power indicator/Pairing indicator

#### ■ 2. Packing List


- 1\* Keyboard Case
- 1\* USB-C Charging Cable
- 1\* User Manual

#### ■ 3. Pairing


- 1) Toggle the switch to ON, the power indicator turns to blue for 1 second and then goes out the keyboard is turned on.
- 2) The keyboard will automatically enter pairing mode after the first successful power on. You can also press and hold for 3 seconds to enter pairing mode. In the paring mode, the pairing indicator will flash rapidly.
- 3) Go to Settings and turn "Bluetooth" on.



4) Search for "Foliokey10.9" and Click "Pair".

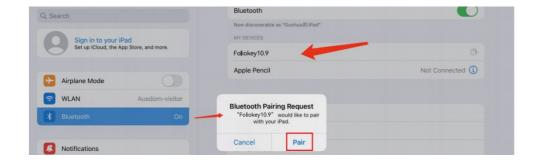

5) The keyboard is connected, pairing successfully.

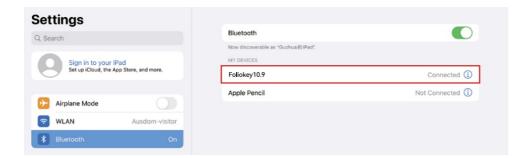

#### ■ Note:

- 1) If the keyboard is turned on for 3 minutes without being connected to any devices, it will enter sleep mode automatically until you press any key or press and hold for 3 seconds.
- 2) If the keyboard has already been paired with iPad, they will automatically connect to each other next time without pairing again.

#### ■ 4. Sleep Mode

- 1) When you do not use the keyboard for more than 30 minutes, the keyboard will automatically go to sleep mode and be disconnected from devices.
- 2) Before using the keyboard, please press any key to wake it up and the keyboard will automatically connect to the device within 3 seconds.

#### **■** 5. Charging

When the battery level of the keyboard is too low, the power indicator light will flash red. Please charge it in time to ensure normal use.

**Note:** When the battery level is low, the transmission of the keyboard maybe delayed, stuck and unstable.

#### ■ 6. Function Key Description

	Home	·	Decrease brightness
	Increase brightne ss	<del>-</del>	Open the App Switcher
Q	Search	714	Single press to adjust backlight brightness
<b>◇</b>	Previous track	DII	Play/Pause
DD	Next track	Ц×	Mute
	Volume down	⟨\')	Volume up
	Lock screen	တ	Pairing key
fn +	Touchpad switch	fn + delete	press and hold for 3 seconds, to restore factory sett ings

#### ■ 7. Indicator

Indicato r	Lig ht Col or	Operating status
Power i ndicator	Blu e	When powered on, the blue light stays on for 1 second and then turns off
Low bat tery indi cator	Re d	When the battery power of the keyboard is low, the red light flashes rapidly, please charge it as soon as possible.
Chargin g indica tor	Re d/G ree n	The red light is on when charging, and the green light is on after fully charged.
Pairing indicato	Blu e	During pairing mode, the indicator light flashes 3 times every second. If the pairing is not succe ssful after 180 seconds, the keyboard will go to sleep mode, and the indicator light will be off if t he pairing is successful.
Caps L ock indi cator	Wh ite	Caps status right will stay on

#### ■ 8. Schematic Diagram of Touchpad Functions

Finge r move ment	Finger Gesture Instructions	Function
J.m	Press with one finger until you feel a click.	Click
Nm.	Press and hold with one finger.	Click and hol
Nm -P-	Click and hold an item, then slide your finger across the trackpad to move it.	Drag
ym	Click the trackpad. Or press any key, if you're using an external keyboard.	Wake iPad
J.m	Use one finger to swipe the pointer past the bottom of the screen.	Open the Do
4m	Use one finger to swipe the pointer past the bottom of the screen. After the Dock appears, swipe the pointer past the bottom of the screen again. Alternatively, click the b ar at the bottom of the screen (on an iPad with Face ID).	Go Home
- Am	Use one finger to move the at the top right, then click. Or the top right, then swipe up pointer to select the status icons select the status icons at with one finger.	Open Contro I Center
Pm	Use one finger to move the pointer to select the status icons at the top left, then click. O r use one finger to move the pointer past the top of the screen near the middle.	Open Notific ation Center
	Swipe two fingers up or down.	Scroll up or down
	Swipe two fingers left or right.	Scroll left or right
(0)	Place two fingers near each other. Pinch open to zoom in, or pinch closed to zoom out.	Zoom
	Swipe up with three fingers.	Go Home
	Swipe up with three fingers, pausing before you lift your fingers. Or pinch four fingers to gether, pausing before you lift your fingers.	Open the Ap p Switcher
	Swipe left or right with three fingers.	Switch betw een open ap ps
	When the Home Screen or the Lock Screen is visible use two fingers to swipe right.	Open Today View
, M	Swipe down with two fingers.	Open search from the Ho me Screen
(My	Click with two fingers to show the quick actions menu for items like icons on the Home S creen, messages in a mailbox, and the Camera button in Control Center.  Or if you're using an external keyboard, you can press the Control key while you click the trackpad.	Secondary cl ick

#### ■ 9. Specifications

Wireless Version	V4.2
Pairing Name	Foliokey10.9
Wireless Range	8m
Battery Capacity	650mAh
Continuous working time with backlight on	>6.5 hours
Continuous working time with backlight off	>346hours
Standby Time	>365 days
Charging Time	<2.5 hours
Keys Life	3 Million Strokes

 
Note: Features and technical specifications are subject to change without notice, we apologize for any inconvenience.

 
#### ■ 10. Warranty

The Keyboard is covered by a 1-year manufacturer warranty. For more information, visit www.ausdom.com

#### ■ Safety Instructions

Warning: Fire, electric shock, damage to keyboard device could occur if the following instructions are not obeyed







X 1. Away from edge tool

2. Away from microwave radiation source

X 3. Do not place heavy objects on this product

X 4. No shocking and bending

△ 5. Away from oil, chemical, or organic solvents



#### **CAUTION** RISK OF EXPLOSION IF BATTERY IS REPLACED BY AN INCORRECT TYPE DISPOSE OF USED BATTERIES ACCORDING TO THE INSTRUCTIONS

#### RECYCLING

This product bears the selective sorting symbol for Waste electrical and electronic equipment (WEEE). This means that this product must be handled pursuant to European directive 2012/19/EU in order to be recycled or dismantled to minimize its impact on the environment.

User has the choice to give his product to a competent recycling organization or to the retailer when he buys a







This device complies with part 15 of the FCC Rules.

Operation is subject to the following two conditions:

- (1) This device may not cause harmful interference.
- (2) This device must accept any interference received, including interference that may cause undesired operation. Any Changes or modifications not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment.

Note: This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- -Reorient or relocate the receiving antenna.
- -Increase the separation between the equipment and receiver.
- -Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- -Consult the dealer or an experienced radio/TV technician for help.

The device has been evaluated to meet general RF exposure requirement. The device can be used in portable exposure condition without restriction.

#### **WARRANTY CARD**

#### **ATTENTIONS:**

- Please read the return procedures and warranty policy carefully on www.ausdom.com before sending items back to point-of-purchase.
- Please fill the card and send it to your reseller together with the product if your product's warranty is valid.

S.N:	
Date of Purchase:	
Product Model:	
RMA Number:	
Return Reason:	
Customer Name:	
TEL:	
E-mail:	
Address:	



For more information, please visit our official website www.ausdom.com

Your valuable comments and suggestions on improving AUSDOM products are welcome!



#### **Documents / Resources**



AUSDOM Foliokey10.9 Tablet Keyboard Case [pdf] User Manual Z63-O3FOLIOKEY, Z63O3FOLIOKEY, o3foliokey, Foliokey10.9, Foliokey10.9 Tablet Keyboard Case, Tablet Keyboard Case, Keyboard Case, Case

Manuals+,