



AUTEL EVO II RTK Series V3 Drone Plus Software Bundle User Guide

[Home](#) » [AUTEL](#) » AUTEL EVO II RTK Series V3 Drone Plus Software Bundle User Guide 

AUTEL

ROBOTICS

EVO II RTK Series V3 Drone Plus Software Bundle User Guide

 


Contents

- 1 OVERVIEW
- 2 AIRCRAFT
- 3 FLIGHT LED INDICATIONS
- 4 REMOTE CONTROLLER
- 5 CHARGING
- 6 ATEL EXPLORER APP
- 7 PREPARING THE AIRCRAFT
- 8 PROPELLERS
- 9 PREPARING THE CONTROLLER
- 10 POWERING UP
- 11 TAKE OFF
- 12 COMMAND STICK CONTROLS(MODE 2)
- 13 SPECIFICATIONS
- 14 Documents / Resources
 - 14.1 References
- 15 Related Posts

OVERVIEW


The EVO II RTK Series V3 brings excellent flight performance, achieving a top speed of 20m/s (45mph), 36-minute flight time, and an operating distance at 15km (9.32miles, FCC). The aircraft comes with a 7.9 inch touch-screen controller, boasts a 2048×1536 pixel resolution.

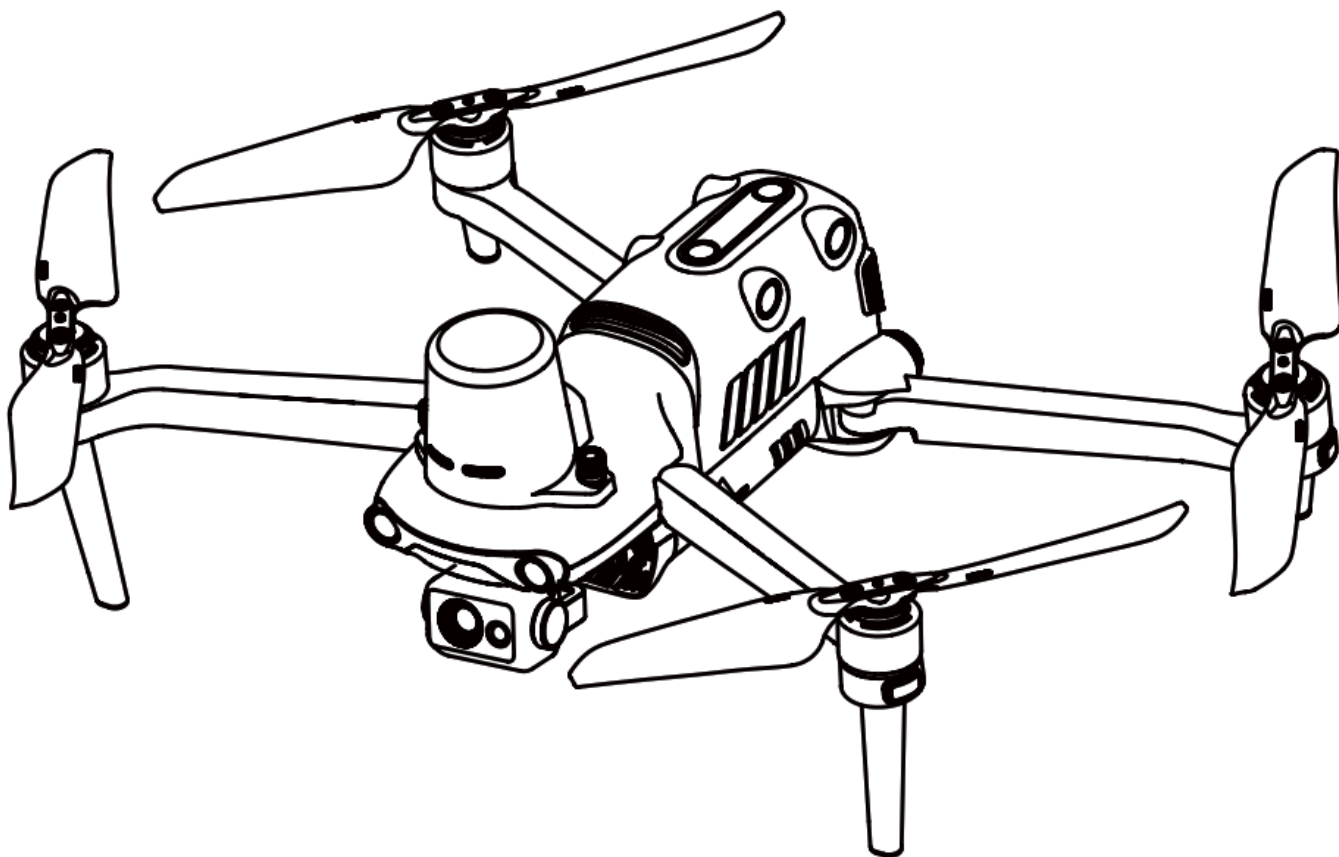


NOTE:

Please read all documentation before your first flight. Failure to operate the aircraft responsibly could lead to injury or damages, and may void any applicable warranty coverage.

 
AIRCRAFT

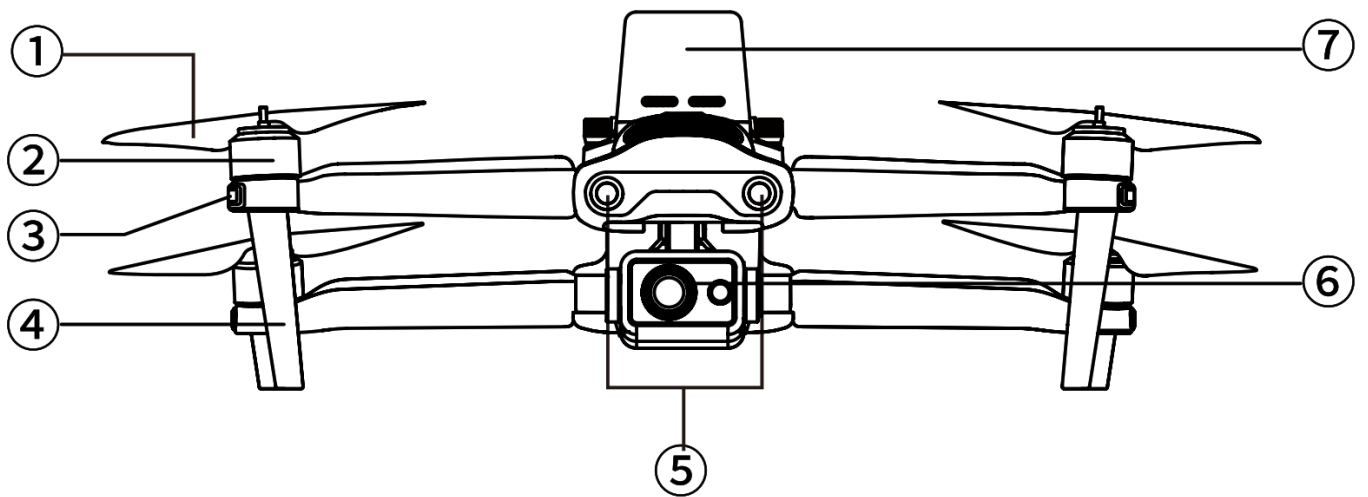

 1. Propellers
2. Motors
3. Front LED Indicators
4. Landing Gear
5. Front Vision System
6. Gimbal Camera
7. RTK Module

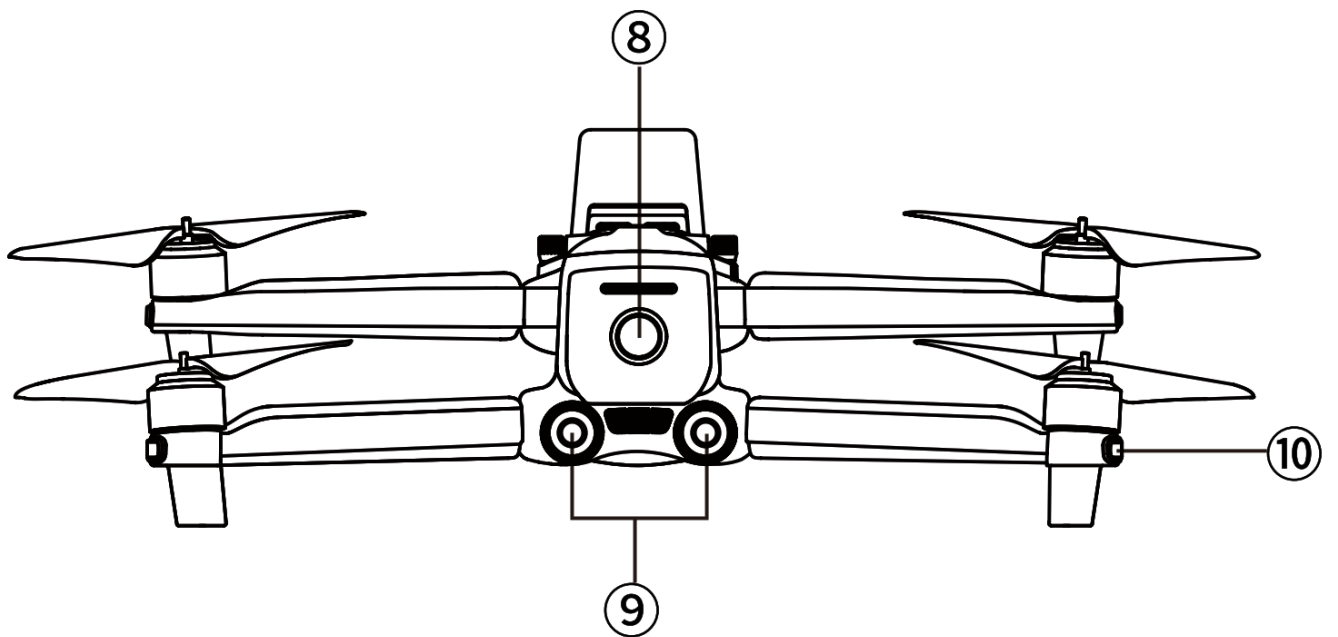


 8. Power Button
9. Rear Vision System
10. Rear LED Indicators

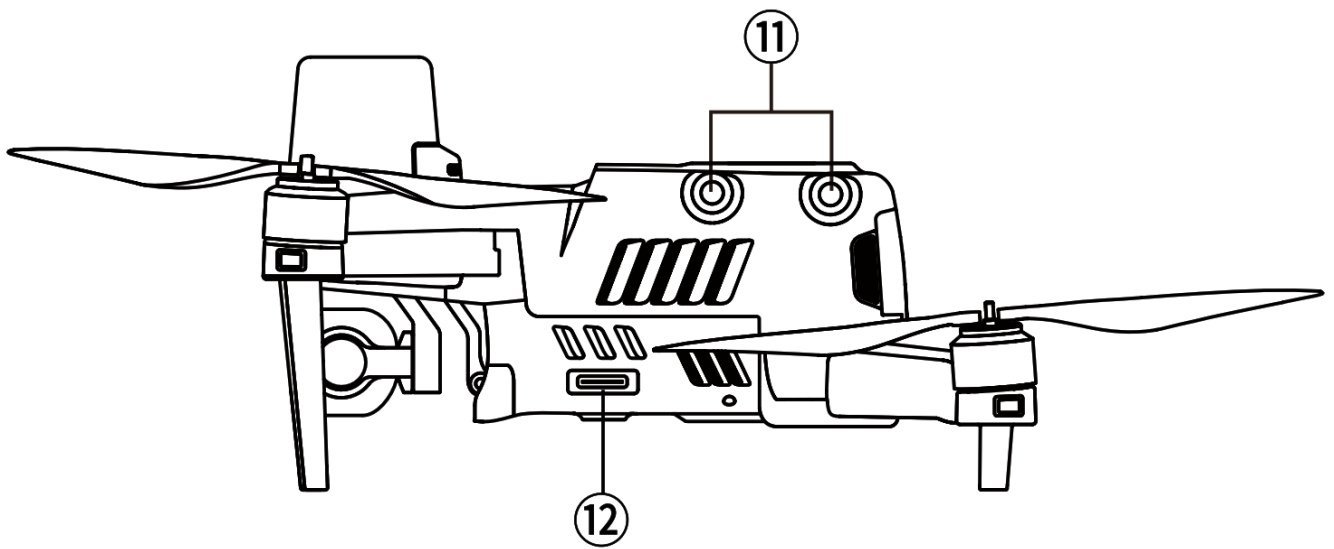

11. Left Vision System

 12. SD Card Slot

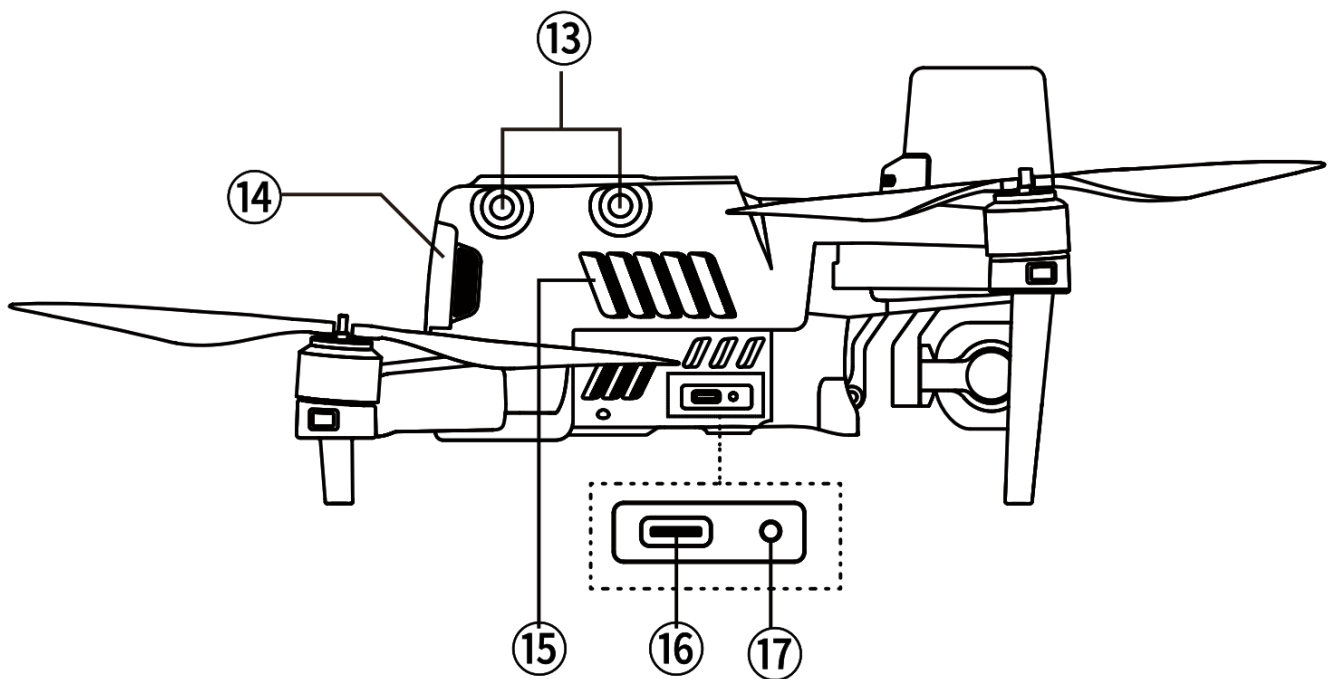


13. Right Vision System

14. Aircraft Battery


15. Air Vent

16. USB Port

 17. Pairing Button / Pairing Indicator

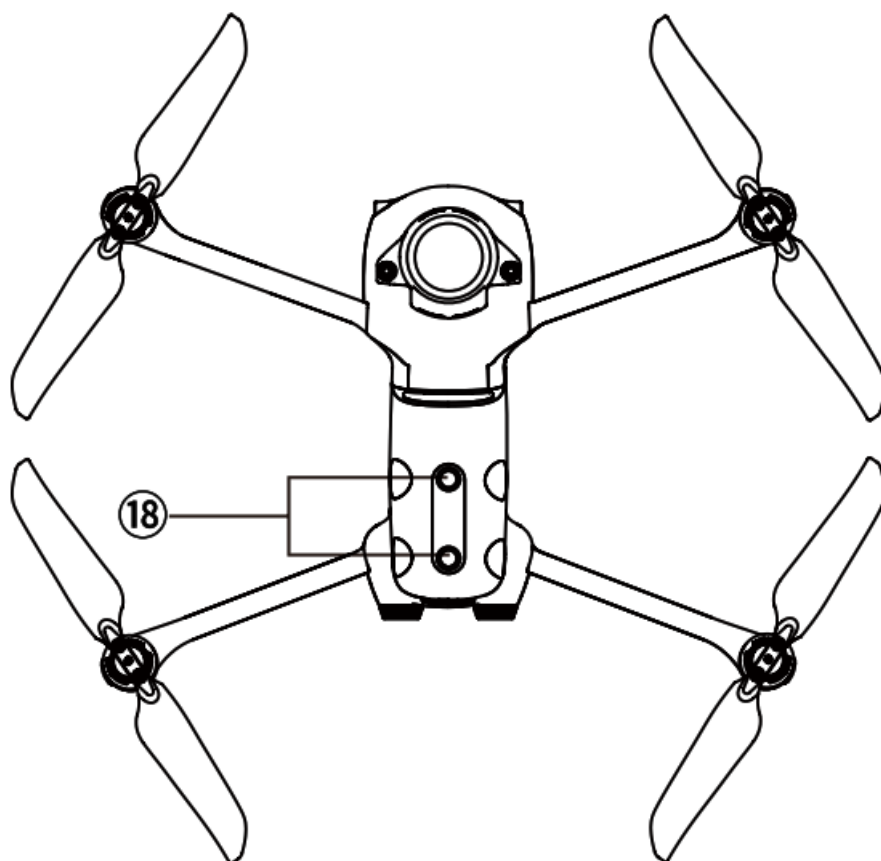

 18. Upward Vision System

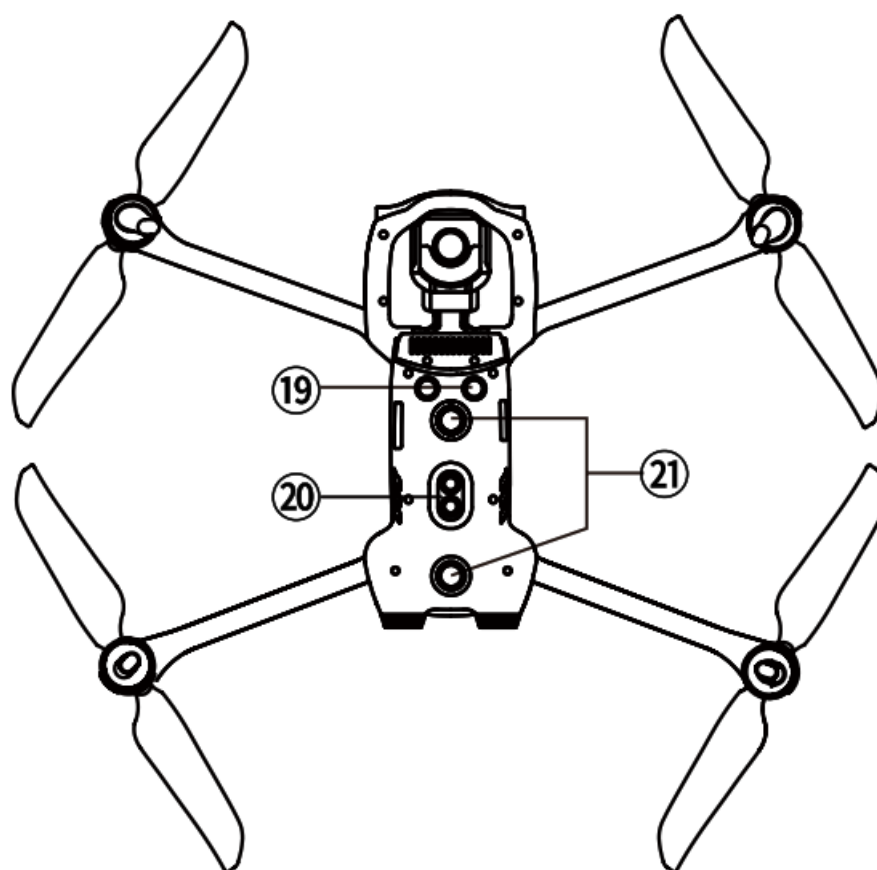

19. Ultrasonic Sensor

20. Downward Vision Lighting LED

21. Downward Vision System

FLIGHT LED INDICATIONS


A LED indicator is located on the end of each aircraft arm. The front LEDs will light up solid red to help you identify the direction of the aircraft's nose.

The rear LEDs will display the current flight status of the aircraft. The chart below shows the meaning of each status indicator.

| Indicator Key: | Color Key |
|---|------------------|
| Slow Flashing:Flashes once every 2s | R – Red Color |
| Fast Flashing: Flashes twice per second | G – Yellow Color |
| Alternate Flashing: Alternates among different colors | Y – Green Color |


| Definitions of Indicator Status | |
|---------------------------------|---|
| Normal | |
| RGY – Alternate Flashing | System self-test is activated |
| VG – Alternate Flashing | The aircraft is warming up |
| G – Slow Flashing | The aircraft is in GPS mode |
| Warning | |
| Y – Slow Flashing | The aircraft is in ATTI mode |
| V – Fast Flashing | No connection between the aircraft and smart controller |
| R – Slow Flashing | Low Battery Warning |
| R – Fast Flashing | Critically Low Battery Warning |
| R – Solid Light | Critical problems, IMU error |
| RY – Alternate Flashing | Abnormal compass, calibration is required / Magnetometer Interference |
| Compass Calibration | |
| Y – Fast Flashing | Be ready to calibrate the compass/ The aircraft is calibrating |
| G – Solid Light | Calibration is successful |
| R – Solid Light | Calibration is failed |

 REMOTE CONTROLLER

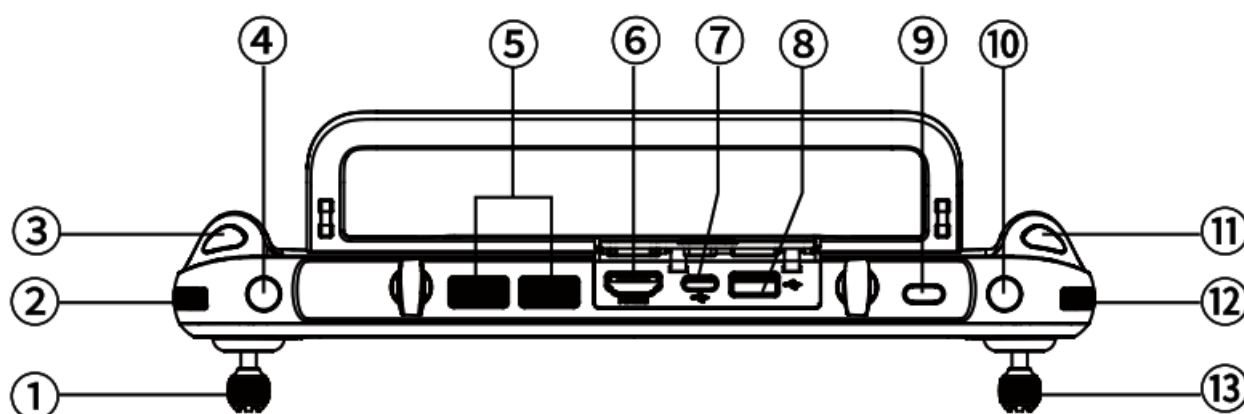


1. Left Command Stick
2. Gimbal Pitch Angle Wheel 0
3. Video Recording Button
4. Customizable Button C1
5. Air Outlet @ HDMI Port
6. USB-C Port @ USB-A Port
7. Power Button
8. Customizable Button C2
9. Photo Shutter Button
10. *Zoom Control Wheel
11. Right Command Stick

 *The function may alter, please take the practical effect as standard.

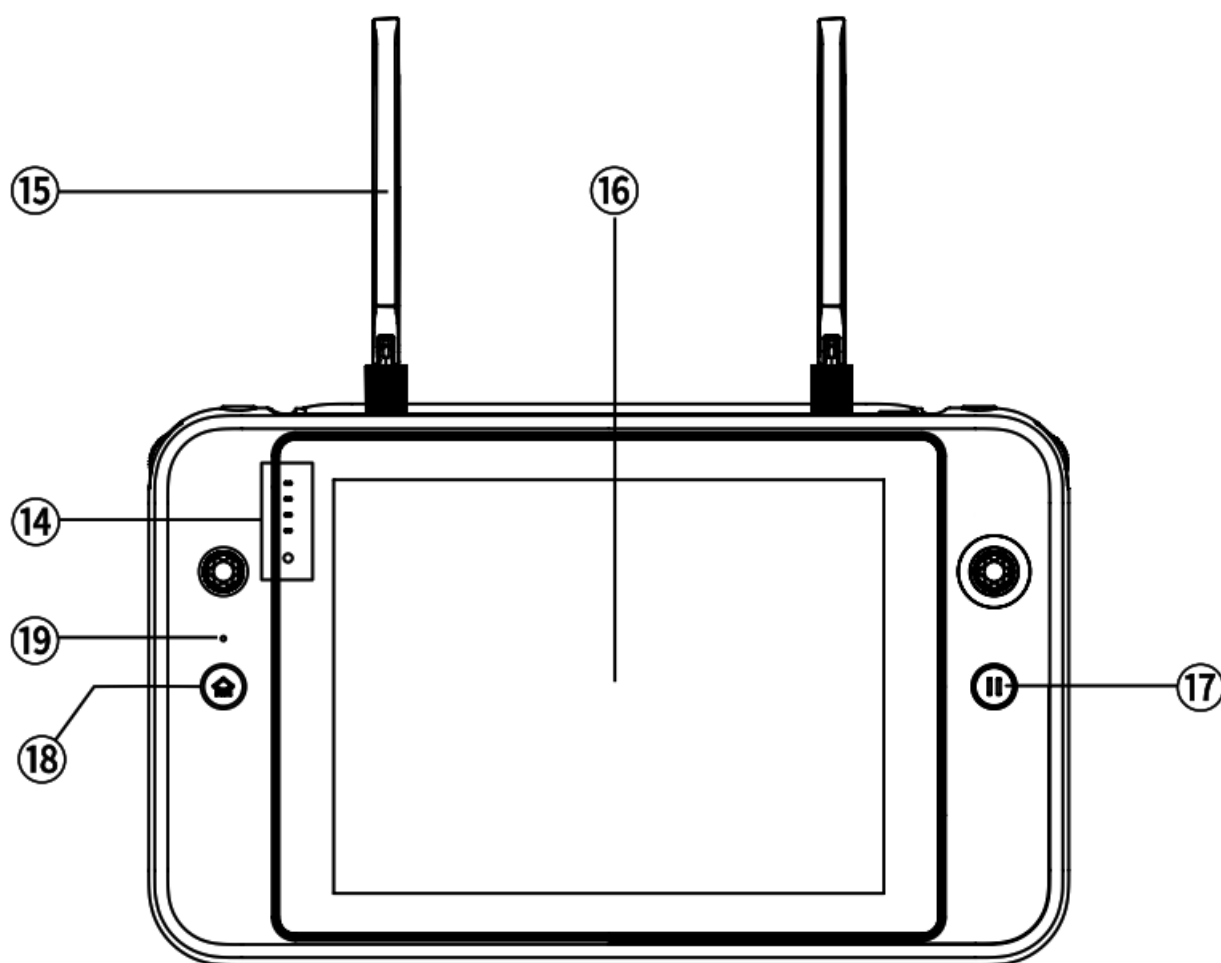

 
12. Battery Indicator
13. Antenna
14. Touch Screen
15. Pause Button
16. Auto-takeoff/ RTH Button
17. Microphone

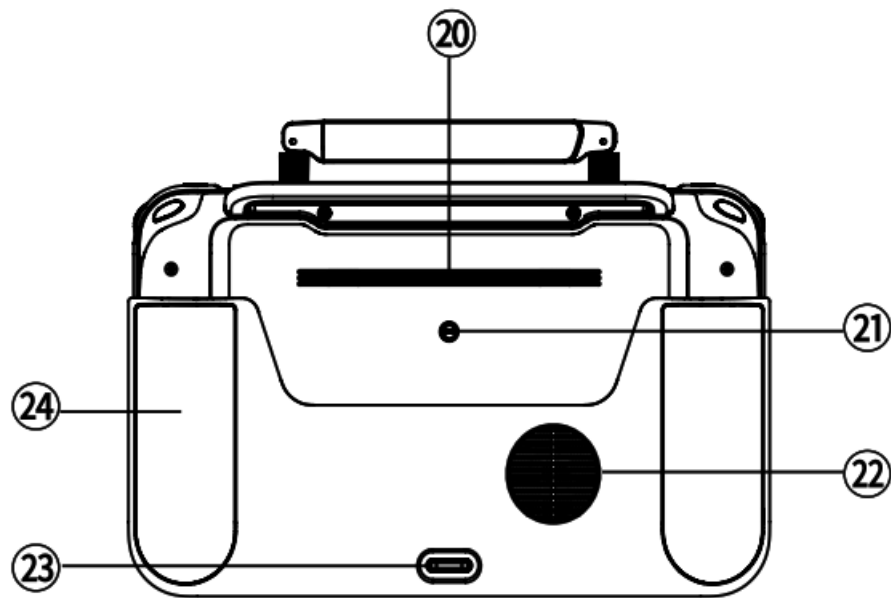

- 18. Speaker Hole
- 19. Tripod Mount Hole
- 20. Air Vent
- 21. Bottom Hook
- 22. Grips

CHARGING

 1. **Aircraft Battery:** Plug the charging connector into the battery's charge port, and connect the other end to power adapter. Plug the power adapter into a power outlet (100-240V AC).

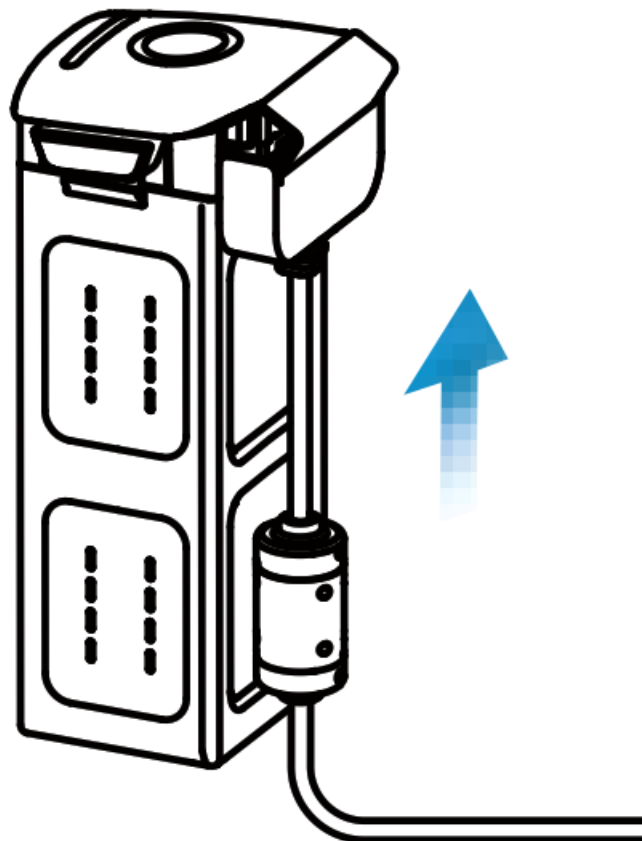

2. **Controller:** Connect the charging cable to the USB port at the top of the controller, and the other end to power adapter. Plug the power adapter into a power outlet (100-240V AC).

NOTE:

 
- Always fully charge the aircraft and smart controller battery before flying.
- It takes approximately 90 minutes to fully charge the aircraft battery, and 120 minutes to charge the controller.

AUTEL EXPLORER APP


Search for 'Autel Explorer' from Google Play and install the app on your controller.

PREPARING THE AIRCRAFT

1. Before powering on the aircraft, please remove the gimbal guard.

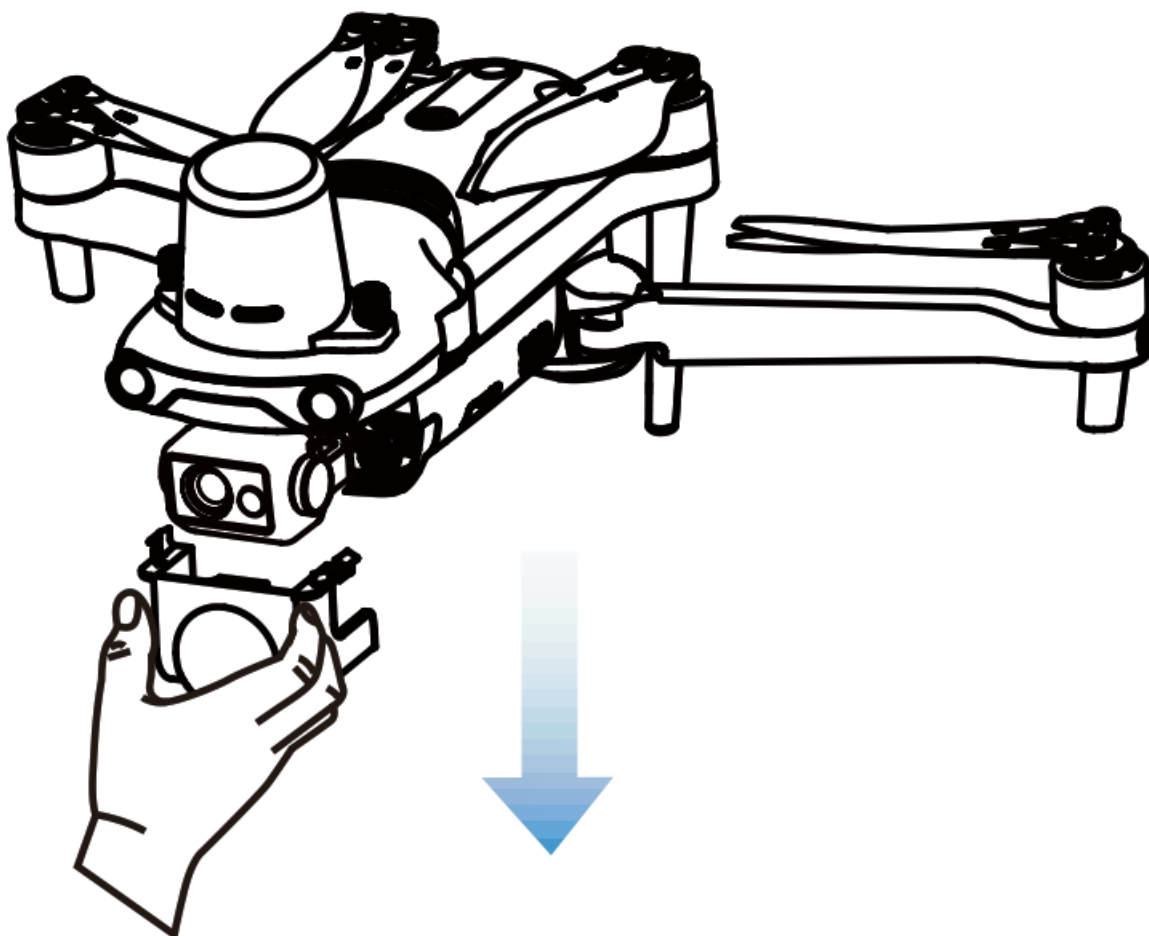

 2. Unfold the arms and **propellers**.

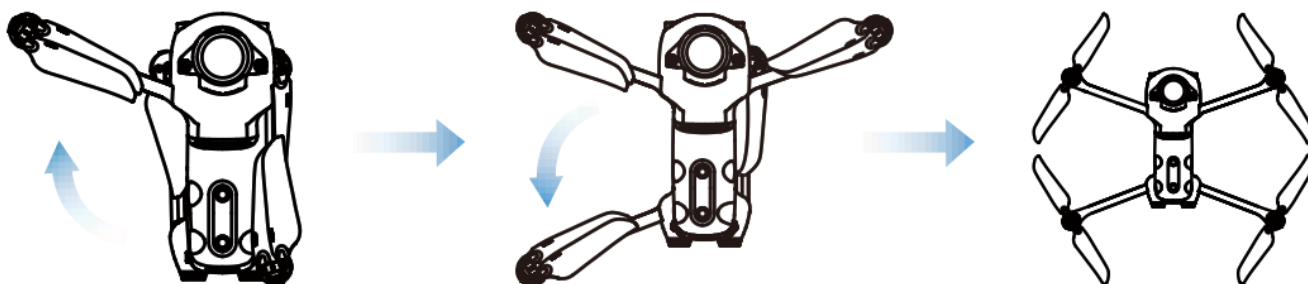

NOTE:

 
Power off the aircraft before folding the arms. Fold in the rear arms and propellers first, and then the front ones.

PROPELLERS

Because the propellers come attached to the aircraft, the following instructions apply if you need to reinstall propellers.

Attaching the Propellers

1. Power off the aircraft.
2. Pair the propellers and corresponding motors according to the white mark .
3. Press each propeller down firmly and rotate in the lock direction to securely attach the propeller.

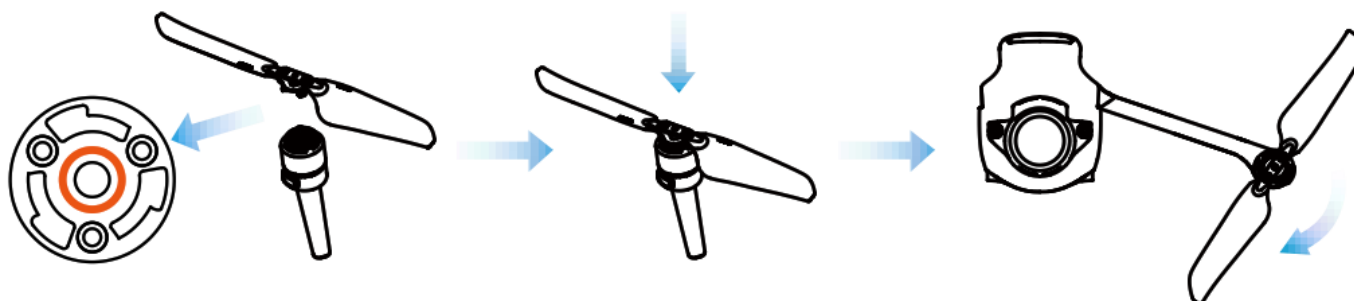

Detaching the Propellers

1. Power off the aircraft.
2. Press each propeller down firmly and rotate in the unlock direction to detach the propeller.

LEGEND



Lock Direction: Fasten the propeller by rotating it as indicated.



Unlock Direction: Unfasten the propeller by rotating is as indicated.

 


NOTE:


- Power off the aircraft before attaching or detaching propellers.
- Propellers must be undamaged and firmly attached.

PREPARING THE CONTROLLER

1. Unfold the antenna, detach the stick heads on the back of the controller handle, and screw them into the corresponding screw holes on both sides of the screen.

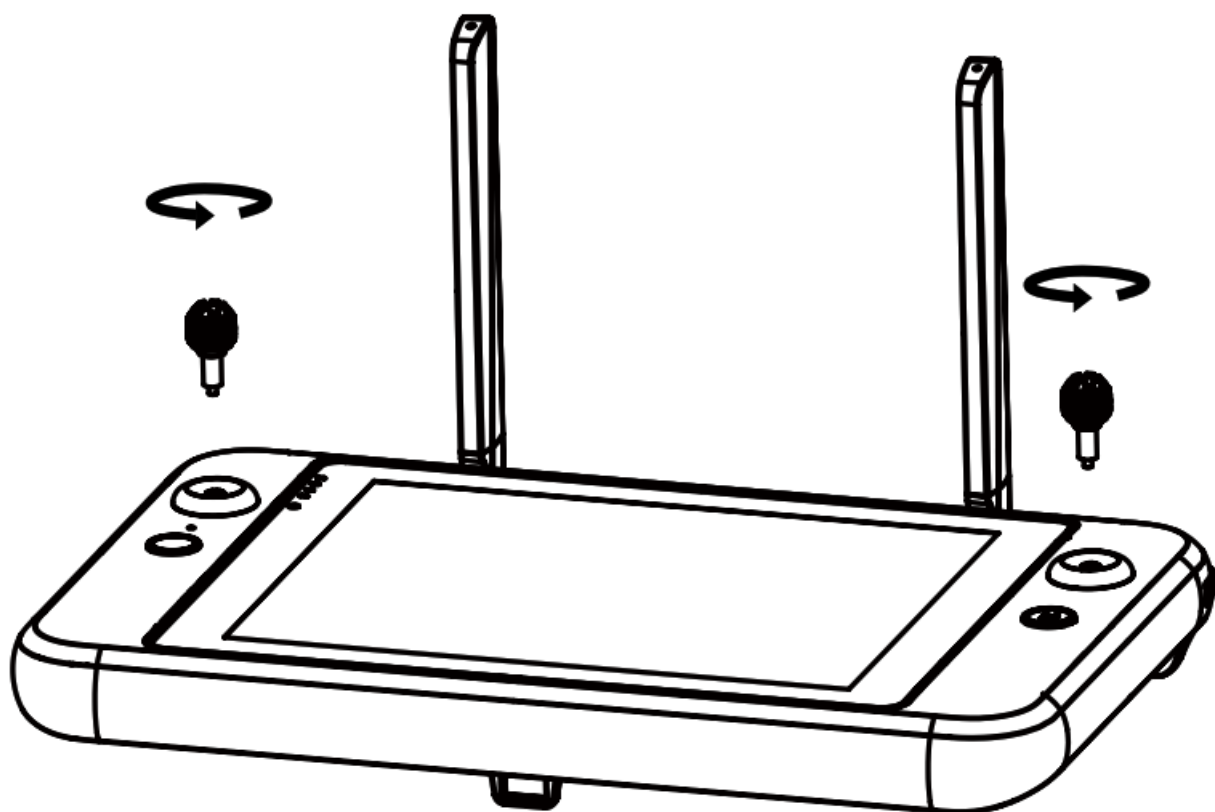


 2. Adjust the antenna angle, and when the antenna and the back of the controller are at the angle of 180 or 260, and the antenna surface is facing the aircraft, the signal quality of the aircraft and controller will reach the optimal condition.

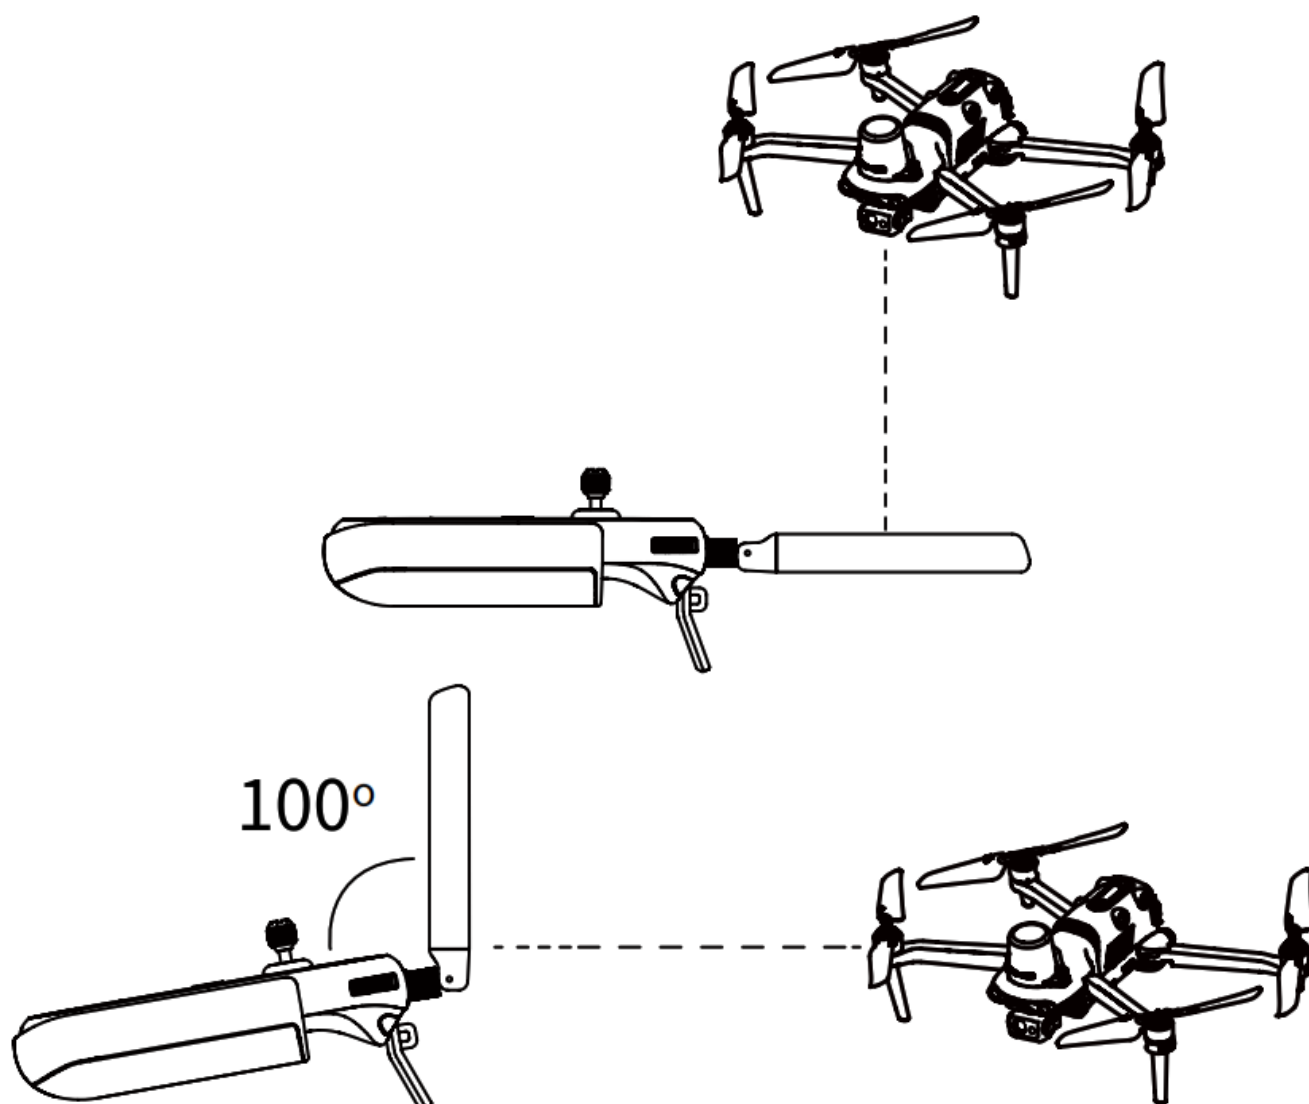


POWERING UP

 1. Press and hold the power button for 2 seconds to turn on the controller.

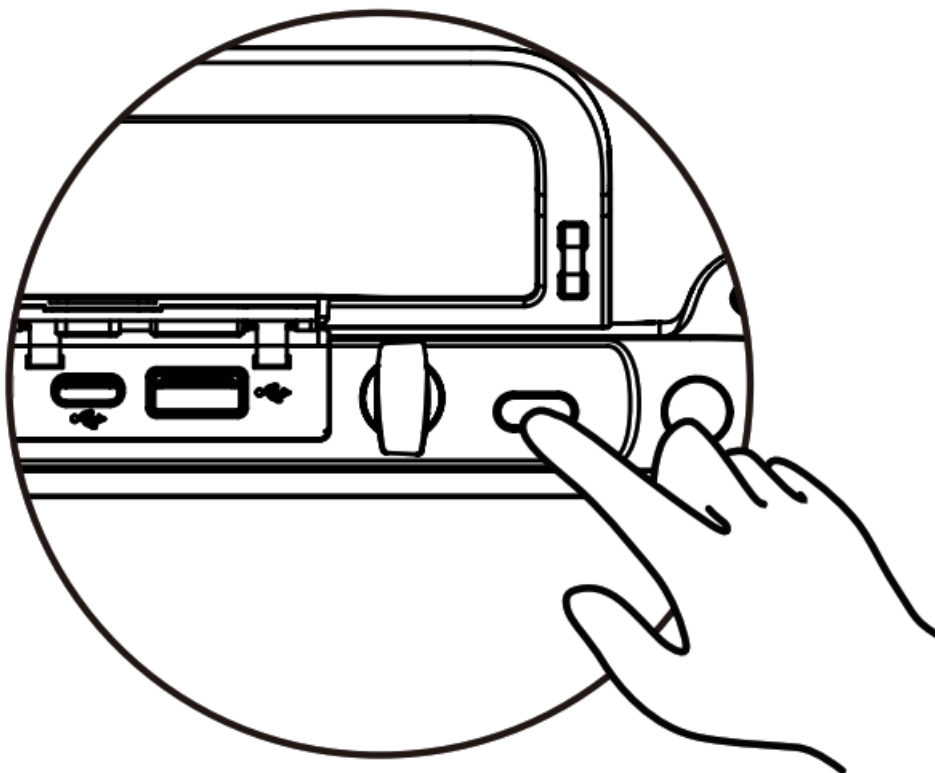


 2. Press and hold the power button 3 seconds to turn on the aircraft. The current battery level will be clearly displayed.

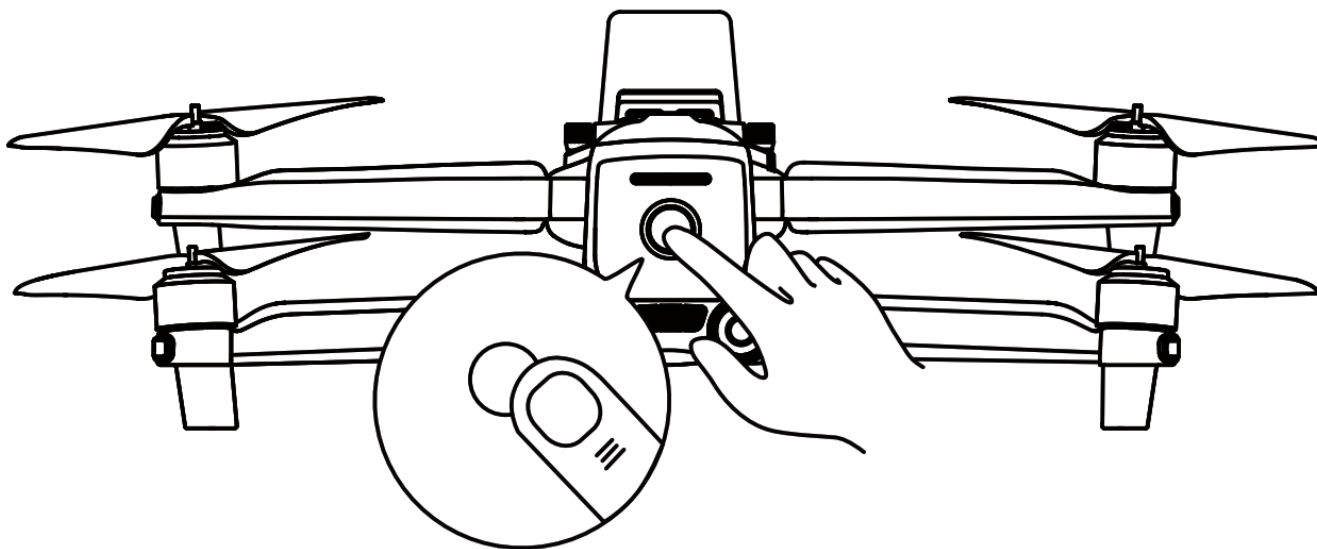


TAKE OFF

 
1. Start the motors by holding both command sticks for two seconds as shown below.

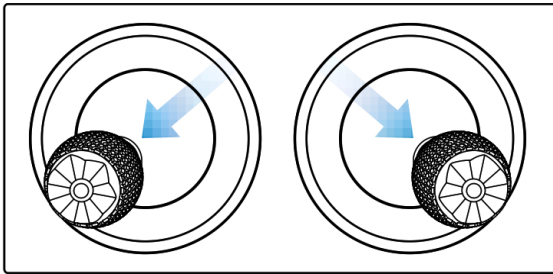

or

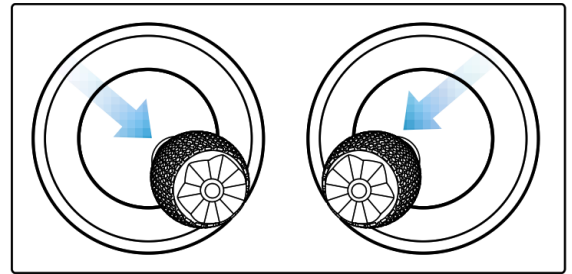 

 2. Push the left command stick slowly **upward**.

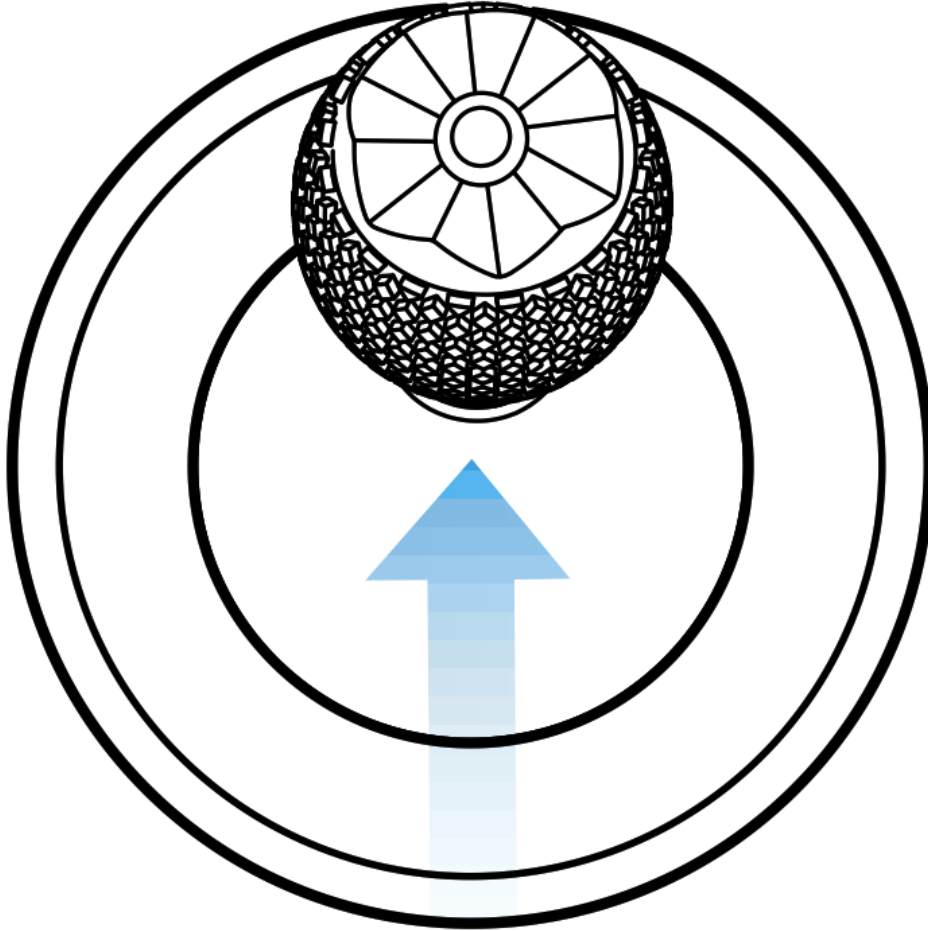


NOTE:

- The default control stick mode is mode 2. The left stick controls the altitude and heading of the aircraft, while the right stick controls the forward, backward and ideward movements.
- Before takeoff, place aircraft on a level surface, stand well clear of the rear of the aircraft.


COMMAND STICK CONTROLS(MODE 2)

Left Command Stick

 
Left Side View

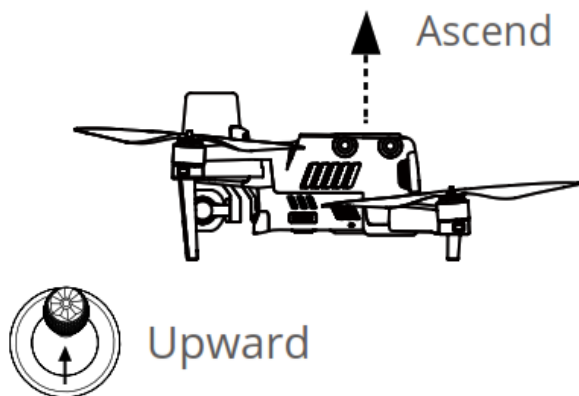


Left Side View

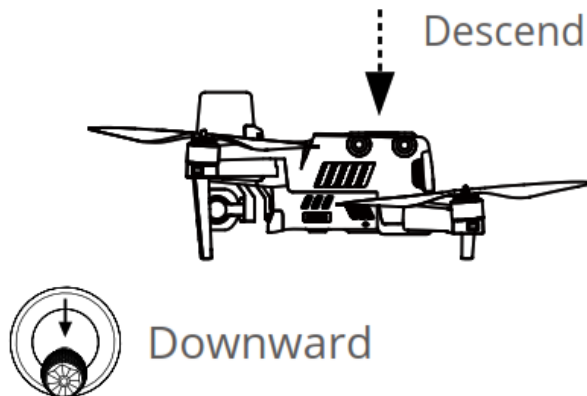 

Top View

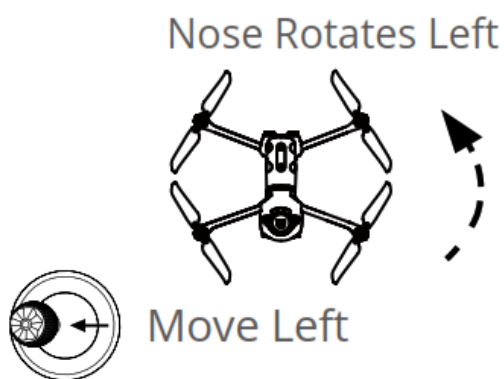 


Top View

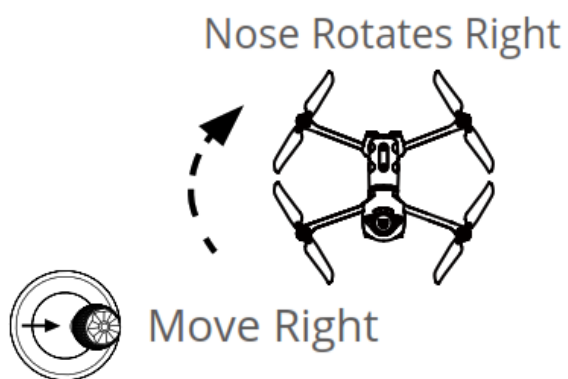 


Right Command Stick

 
Left Side View

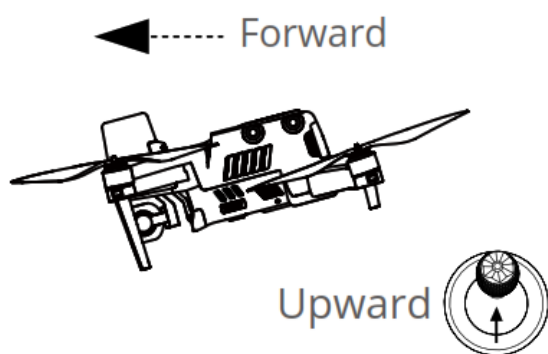


Left Side View

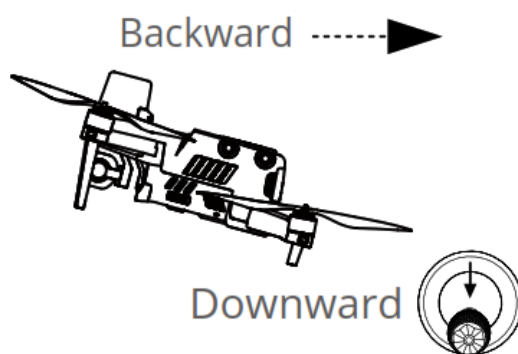 

Rear View

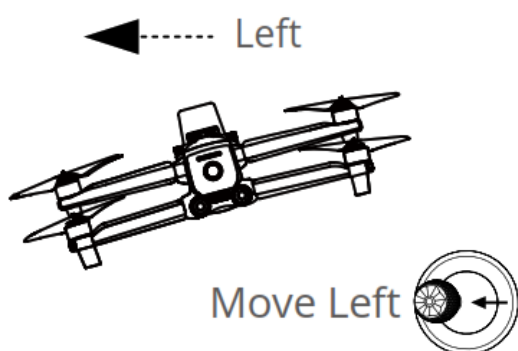 

Rear View

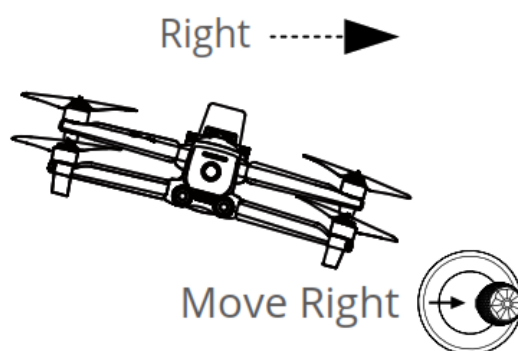 

SPECIFICATIONS

| Aircraft | |
|---------------------------|--|
| Operating Frequency | 902-928MHz (FCC); 2.4-2.4835GHz; 5.725-5.8506Hz (Non-Japan); 5.650-5.755GHz (Japan) |
| Transmission Power (EIRP) | 900MHz: FCC/ISED<=31 dBm 2.4GHz: FCC/ISED<=32dBm; CE/MIC/SRRC/RCM<=20dBm 5.8GHz/5.7 GHz: FCC/ISED/SRRC/MIC<=33dBm; CE/RCM<=14dBm |
| Remote Controller | |
| Operating Frequency | 902-928MHz (FCC); 2.4-2.4835GHz; 5.725-5.8506Hz (Non-Japan); 5.650-5.755GHz (Japan) |
| Transmission Power (EIRP) | FCC: 33dBm CE: Q0dBm@2.4G, c14dBm@5.8G/5.7G SRRC: s20dBm@2.46, 33dBm@5.8G/5.7G |

FCC and ISED Canada Compliance

This device complies with part 15 of the FCC Rules and ISED Canada licence-exempt RSS standards. Operation is subject to the following two conditions:

1. This device may not cause harmful interference, and
2. This device must accept any interference received, including interference that may cause undesired operation.

NOTE:

This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio/TV technician for help.

Changes or modifications not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment.

Aircraft RF Exposure Information

This equipment complies with RF radiation exposure limits set forth for an uncontrolled environment. This equipment should be operated with minimum distance 20cm between the radiator and your body.

Remote Controller

FCC Specific Absorption Rate (SAR) information

SAR tests are conducted using standard operating positions accepted by the FCC with the device transmitting at its highest certified power level in all tested frequency bands, although the SAR is determined at the highest certified power level, the actual SAR level of the device while operating can be well below the maximum value, in general, the closer you are to a wireless base station antenna, the lower the power output. Before a new model device is available for sale to the public, it must be tested and certified to the FCC that it does not exceed the exposure limit established by the FCC. Tests for each device are performed in positions and locations (e.g. at the ear and worn on the body) as required by the FCC.

For limb worn operation, this device has been tested and meets the FCC RF exposure guidelines when used with an accessory designated for this product or when used with an accessory that contains no metal.

For body worn operation, this device has been tested and meets the FCC RF exposure guidelines when used with an accessory designated for this product or when used with an accessory that contains no metal and that positions the device a minimum of 10mm from the body.

ISED Specific Absorption Rate (SAR) information

SAR tests are conducted using standard operating positions accepted by the ISED with the device transmitting at its highest certified power level in all tested frequency bands, although the SAR is determined at the highest certified power level, the actual SAR level of the device while operating can be well below the maximum value, in general, the closer you are to a wireless base station antenna, the lower the power output. Before a new model device is available for sale to the public, it must be tested and certified to the ISED that it does not exceed the exposure limit established by the ISED. Tests for each device are performed in positions and locations (e.g. at the ear and worn on the body) as required by the ISED.

For limb worn operation, this device has been tested and meets the ISED RF exposure guidelines when used with an accessory designated for this product or when used with an accessory that contains no metal.

For body worn operation, this device has been tested and meets the ISED RF exposure guidelines when used with an accessory designated for this product or when used with an accessory that contains no metal and that positions the device a minimum of 10mm from the body.

EU/UK Compliance

Autel Robotics Co., Ltd.

hereby declares that this wireless device is in compliance with Directive 2014/53/EU and Radio Equipment Regulations 2017.



18th Floor, Block C1, Nanshan iPark, No. 1001 Xueyuan Avenue,
Nanshan District, Shenzhen, Guangdong, 518055, China 22522 29th Dr SE, Ste 101 Bothell, WA 98021 United States

Toll-free: (844) MY AUTEL or (844) 692-8835 www.autelrobotics.com

©2022 Autel Robotics Co., Ltd. All Rights Reserved



A TRADITION IN PRECISION

Seattle 425-771-7776 | Tacoma 253-922-6087 | Portland 503-641-3388
Salt Lake City 801-878-9763 | Las Vegas 702-586-1152 | Boise 800-537-6848
www.KukerRanken.com

AUTEL

ROBOTICS

www.autelrobotics.com

©2022 Autel Robotics Co., Ltd. All Rights Reserved

Documents / Resources



[AUTEL EVO II RTK Series V3 Drone Plus Software Bundle](#) [pdf] User Guide
EVO II RTK Series V3 Drone Plus Software Bundle, EVO II RTK Series V3, Drone Plus Software Bundle, Software Bundle, Bundle

References

- [Autel Robotics Enterprise Drone, Quadcopter & UAV for Sale | Leader in Drones](#)
- [Kuker-Ranken \(KR\) – The Largest Construction and Land Surveying Supplier in the Northwest.](#)

[Manuals+](#)