



AUTLED LC-002-061 LED RF Controller RGBW Set User Manual

[Home](#) » [AUTLED](#) » AUTLED LC-002-061 LED RF Controller RGBW Set User Manual 

outlet

LED RF Controller RGBW Set – User Manual



Item No.: LC-002-061

Contents

- [1 Product Description](#)
- [2 Performance Parameter](#)
- [3 Features](#)
- [4 Operation Manual](#)
- [5 Wire Diagram](#)
- [6 Safety warning](#)
- [7 Remarks](#)
- [8 Documents / Resources](#)
- [9 Related Posts](#)

Product Description

The remote and its receiver is a one-zone RF wireless RGB Controller. The Controller can also, work with a data repeater to expand output unlimitedly.

Performance Parameter

Remote:

| | |
|----------------------|--|
| Operation Voltage | 3x 1,5 VDC Batteries (3xAAA Batteries) |
| Operation Frequency | 434MHz/868MHz/915MHz |
| Dimensions (L x W H) | 120 x 48 x 17,6mm |
| Operation mode | RF Wireless |

Receiver:

| | |
|----------------------|--|
| Input Voltage | 12V-24VDC, Constant Voltage |
| Max. Output Power | 4 Channels x 5A (240W/12V) or (480W/24V) |
| Dimensions IL x W H) | 145 x 46,5 x 16mm |
| weight | 70g |

Features

1. Power on and power off
2. Activate a desired color by the color wheel
3. Activation of 10 different fix-stored color gradients
4. Activation of 3 fixed stored RGB white colors
5. Dimming of desired colour and color gradients

6. Speed changing and freeze of color gradients
7. Switch on/off and dimming of the 4 channels RGBW and total dimming of the adjusted RGB color.
8. One receiver can be paired with max. 8 different remote controls

Operation Manual

4.1. Connection of Remote with the Receiver:

- a) Do wiring according to the wiring diagram
- b) Wake up the remote control by pressing the ON/OFF button.
- c) press shortly the „RF Pairing Key“ button on the receiver.
- d) Touch the color wheel on the remote.
- e) Connected LED light will flash to confirm matching was successful.
- f) If you wish to delete the learned ID, please press the „RF Pairing Key“ button on the receiver for 5 seconds until the LED light flashes up, the learned ID is deleted.

4.2. Description of the remote buttons:



