

automatic TECHNOLOGY GDO-12Hir High Rolling Door Opener Instruction Manual

Home » automatic TECHNOLOGY » automatic TECHNOLOGY GDO-12Hir High Rolling Door Opener Instruction

Manual




GDO-12Hir High Rolling Door Opener Quick Operation Guide

Contents

- 1 USER OPERATING CONTROLS
- **2 MANUAL DOOR OPERATION**
- 3 CODING A REMOTE CONTROL
- **4 CHANGING A BATTERY**
- **5 SMART PHONE CONTROL**
- **6 TROUBLESHOOTING**
- **7 CARING FOR YOUR OPENER**
- **8 NEED A SERVICE CALL?**
- 9 Documents / Resources
 - 9.1 References
- **10 Related Posts**

USER OPERATING CONTROLS

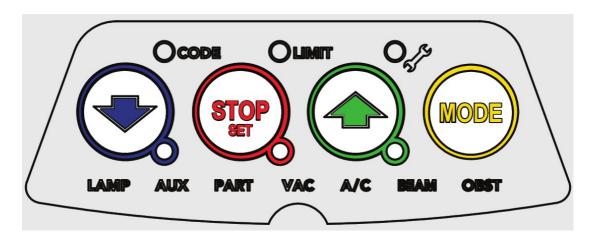

Button	Function
1	Close
2	Stop / Set Button
3	Open
4	Mode

MANUAL DOOR OPERATION

TO DISENGAGE THE OPENER


tip

It is recommended to disengsgre the door with the door in the closed position.



CAUTION: When the opener is manually disengaged, the door is no longer locked. To lock the door manually, re-engage the opener after the door is closed.


TO ENGAGE THE OPENER

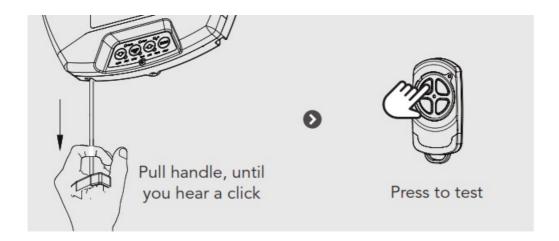


WARNING! Please test the manual release mechanism to ensure that the manual release is easy to operate. No more than 20kg of force should be required to disengage the door using the manual release cord. IF excessive force is required, contact your dealer.

CODING A REMOTE CONTROL

The opener can only be operated from remote controllers that have been programmed into its memory. Up to 64 remotes can be programmed.

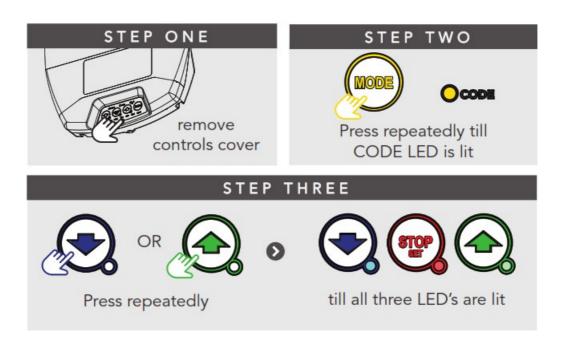


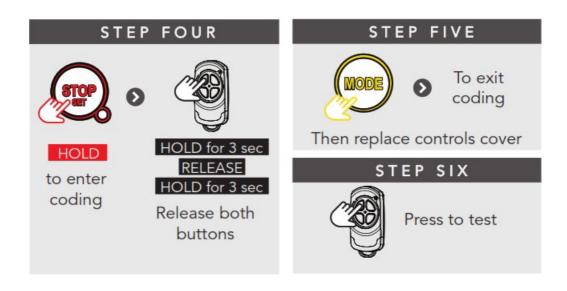

REMOTELY CODING A REMOTE CONTROL



Remotely coding works when you have a pre-coded remote control and are in range of the opener.

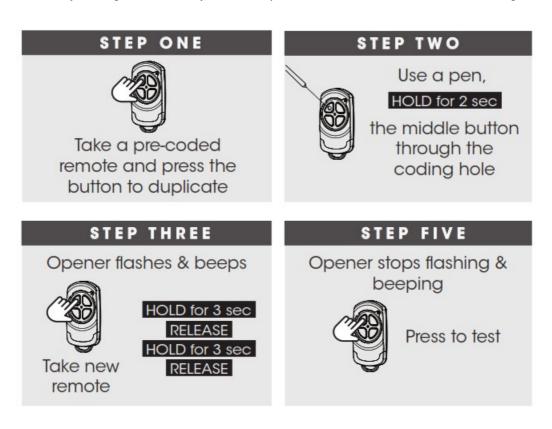

CHANGING A BATTERY



Battery Type: 1 x CR2032.



Light Status	Battery
Solid	OK
Flashing	Replace
No light	Replace





WARNING!: The battery is hazardous and must be kept out of reach of children. The battery can cause severe of fatal injuries within 2 hours or less if swallowed or placed inside any part of the body. If you suspect the battery has be swallowed or placed inside any part of the body, SEEK IMMEDIATE medical attention.

SMART PHONE CONTROL


(require Smart Hub)


The Smart Phone Control works via your home's WiFi network. Initial setup involves linking your phone app and smart opener to your home network.

WARNING!: This device allows for operation of the door when not in line-of-sight of the door and opener. The door may operate unexpectedly, therefore do not allow anything to stay in or near the path of the door.

BEFORE YOU START



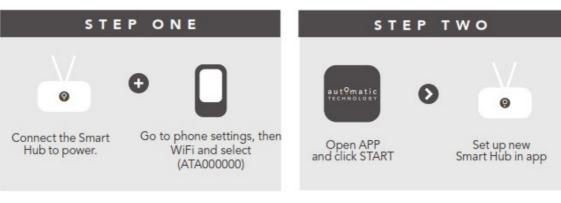

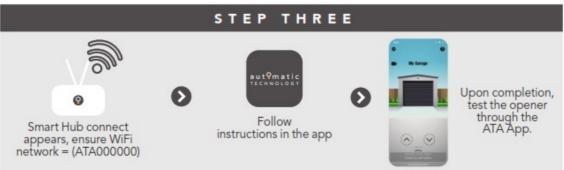

TROUBLESHOOTING

Symptom	Possible cause	Remedy
The opener does not work fro m the remote	The opener does not have power The battery in the remote control is flat The remote button is not programmed to operate the door. Door Code LED is flashing yet the opener is not working.	Replace the battery Plug a device of similar voltage (e.g. a hairdryer) into the power point and check it is OK. Code in the remote control button Ensure the correct button on the trans mitter is being pressed.
One remote works but the oth er/s do not	Faulty remote control Flat battery	Replace remote control Replace batte ry
The motor is running but the door remains stationary	The opener is disengaged	Re-engage the opener
The remote range varies or is restricted	Variations are normal depending on co nditions e.g. temperature or external i nterference The battery life is exhausted	Make sure you can see the door when you use the remote control Check the battery status as per section 4 of this guide
The door reverses for no app arent reason	If Safety beams are installed they may be partially obstructed	Ensure the beam path is not obstructe d. Check the alignment of the beams
The Open LED and Close LE D are flashing alternatively	Opener is overloaded	Discontinue use and contact 1300 133 944 for support
The Open LED continues to fl ash	Door obstructed when opening	Clear away any obstructions and test door opens correctly. (if door is damaged, contact a door professional)
The Close LED continues to fl ash	Limits may be cleared	Remove all power sources. Wait (10-15 secs), then reconnect power. If Blue LED is flashing, limits ar e not set. Contact 1300 133 944.

CARING FOR YOUR OPENER

Preventative servicing of your garage door and opener is important. Your garage door is made up of numerous moving parts designed to lift and lower your door safely and efficiently.

Ongoing preventative servicing ensures that your door continues to function within factory specifications, greatly reduces the risk of failure and repair bills down the track, and ensure you maintain your Warranty. Refer to your Owners Opener Handbook for your service schedule available HERE.

Refer to the installation manual for monthly testing procedures in Section 12 to ensure garage door is fit for use available HERE.

Online warranty details are available HERE.

NEED A SERVICE CALL?

If the opener needs a service please call the dealer who installed the garage door opener (their contact details are usually on a sticker on the back of your garage door).

For product assistance, general enquiry or more information, please visit: <u>ata-aust.com.au</u> or call 1300 133 944.

Documents / Resources



<u>automatic TECHNOLOGY GDO-12Hir High Rolling Door Opener</u> [pdf] Instruction Manual GDO-12Hir, High Rolling Door Opener, GDO-12Hir High Rolling Door Opener, Opener, Opener

References

Automatic Garage Door Openers and Gate Openers - Repairs - ATA

Manuals+,