

 **AutomatikCentret**
AutomatikCentret
ETR2 Power Module



AutomatikCentret ETR2 Power Module Instructions

[Home](#) » [AutomatikCentret](#) » **AutomatikCentret ETR2 Power Module Instructions** 

Contents

- [1 AutomatikCentret ETR2 Power Module](#)
- [2 INSTALLATION INSTRUCTION](#)
- [3 ABOUT COMPANY](#)
- [4 Documents / Resources](#)
 - [4.1 References](#)




AutomatikCentret ETR2 Power Module



INSTALLATION INSTRUCTION


- Push power module into wallbox with mains wiring to the rear.

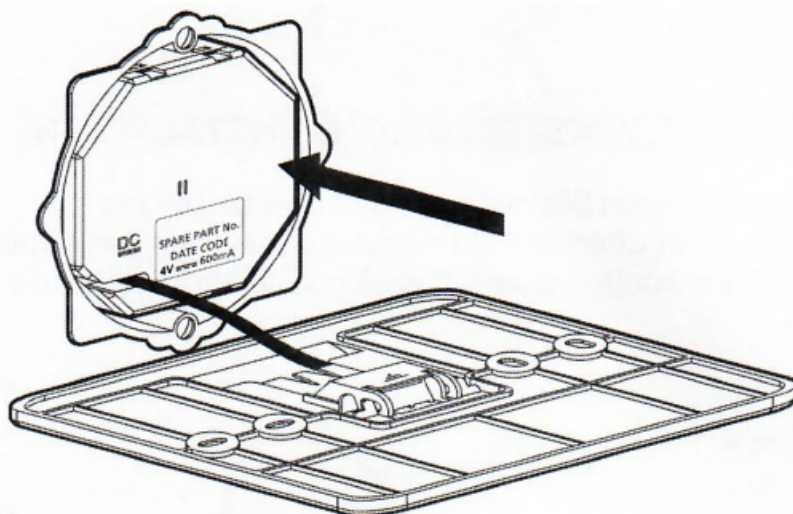


- The power supply can be installed in a different location from the evotouch unit. Observe correct polarity Red (+), Black (-). X Y not used.

Cable length:

- **max. 5m** 0.5 mm²
- **max 10m** 10 mm²

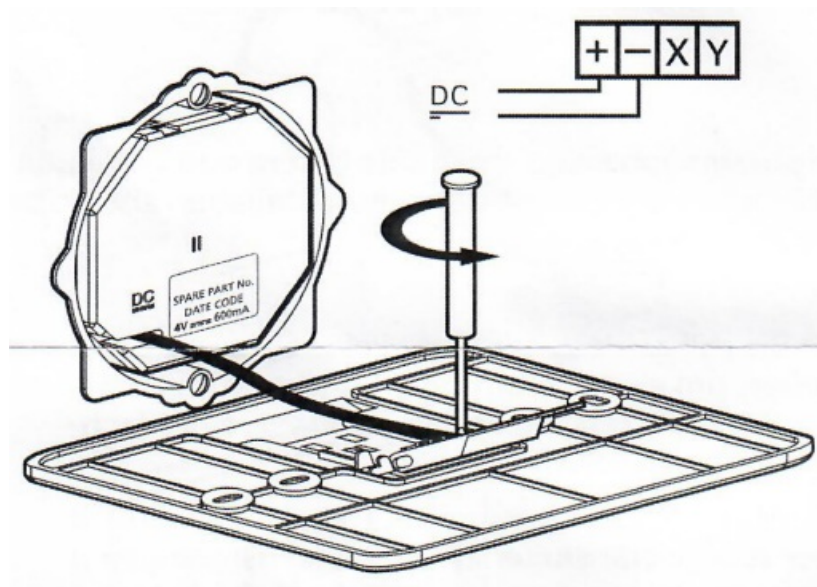

- Attach wallplate to wall box or surface (power module remote).

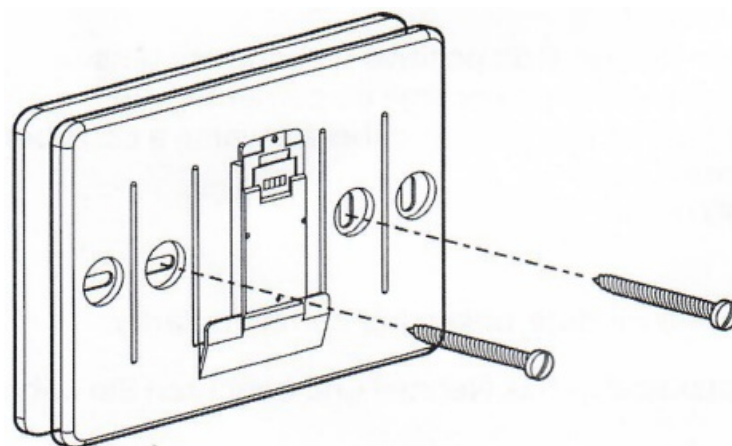

ABOUT COMPANY

- Strandvejen 42
- Saksild
- 8300 Odder
- 86 62 63 64
- www.automatikcentret.dk
- info@automatikcentret.dk

Documents / Resources

	AutomatikCentret ETR2 Power Module [pdf] Instructions ETR2 Power Module, ETR2, Power Module, Module
--	--

References

- [User Manual](#)

[Manuals+](#), [Privacy Policy](#)

This website is an independent publication and is neither affiliated with nor endorsed by any of the trademark owners. The "Bluetooth®" word mark and logos are registered trademarks owned by Bluetooth SIG, Inc. The "Wi-Fi®" word mark and logos are registered trademarks owned by the Wi-Fi Alliance. Any use of these marks on this website does not imply any affiliation with or endorsement.