



AUTOMATIONDIRECT StrideLinux Remote Access Solution Instructions

[Home](#) » [AUTOMATIONDIRECT](#) » **AUTOMATIONDIRECT StrideLinux Remote Access Solution Instructions** 

AUTOMATIONDIRECT StrideLinux Remote Access Solution Instructions

Contents

- [1 WARNING](#)
- [2 Trademarks](#)
- [3 Documents / Resources](#)
- [4 Related Posts](#)

WARNING

Thank you for purchasing automation equipment from [AutomationDirect.com](#)®, doing business as, Automation Direct. We want your new automation equipment to operate safely. Anyone who installs or uses this equipment should read this publication (and any other relevant publications) before installing or operating the equipment.

To minimize the risk of potential safety problems, you should follow all applicable local and national codes that regulate the installation and operation of your equipment. These codes vary from area to area and usually change with time. It is your responsibility to determine which codes should be followed, and to verify that the equipment, installation, and operation is in compliance with the latest revision of these codes.

At a minimum, you should follow all applicable sections of the National Fire Code, National Electrical Code, and the codes of the National Electrical Manufacturer's Association (NEMA). There may be local regulatory or government offices that can also help determine which codes and standards are necessary for safe installation and operation.

Equipment damage or serious injury to personnel can result from the failure to follow all applicable codes and standards. We do not guarantee the products described in this publication are suitable for your particular application, nor do we assume any responsibility for your product design, installation, or operation.

Our products are not fault-tolerant and are not designed, manufactured or intended for use or resale as on-line

control equipment in hazardous environments requiring fail-safe performance, such as in the operation of nuclear facilities, aircraft navigation or communication systems, air traffic control, direct life support machines, or weapons systems, in which the failure of the product could lead directly to death, personal injury, or severe physical or environmental damage (“High Risk Activities”). Automation Direct specifically disclaims any expressed or implied warranty of fitness for High Risk Activities.

For additional warranty and safety information, see the Terms and Conditions section of our catalog. If you have any questions concerning the installation or operation of this equipment, or if you need additional information, please call us at 770-844-4200.

This publication is based on information that was available at the time it was published. At Automation Direct we constantly strive to improve our products and services, so we reserve the right to make changes to the products and/or publications at any time without notice and without any obligation. This publication may also discuss features that may not be available in certain revisions of the product.


Trademarks

This publication may contain references to products produced and/or offered by other companies. The product and company names may be trademarked and are the sole property of their respective owners. Automation Direct disclaims any proprietary interest in the marks and names of others.

Copyright 2017, AutomationDirect.com® Incorporated All Rights Reserved

No part of this manual shall be copied, reproduced, or transmitted in any way without the prior, written consent of AutomationDirect.com® Incorporated. Automation Direct retains the exclusive rights to all information included in this document.

Documents / Resources

	<p>AUTOMATIONDIRECT StrideLinx Remote Access Solution [pdf] Instructions StrideLinx, Remote Access Solution, StrideLinx Remote Access Solution</p>
---	--