



# Autonics BYD3M-TDTP BYD Series Photoelectric Sensors with Built In Timer Instruction Manual

[Home](#) » [Autonics](#) » Autonics BYD3M-TDTP BYD Series Photoelectric Sensors with Built In Timer Instruction Manual

# Autonics

Photoelectric Sensors with Built-in Timer  
Ordering Information  
BYD Series  
INSTRUCTION MANUAL  
TCD210050AB

## Contents [ [hide](#) ]

- 1 BYD3M-TDTP BYD Series Photoelectric Sensors with Built In Timer
- 2 Safety Considerations
- 3 Cautions during Use
- 4 Product Components
- 5 Ordering Information
- 6 Cautions during Installation
- 7 Timer Setting
- 8 Operation Timing Chart
- 9 Connections
- 10 Circuit
- 11 Sensitivity Adjustment
- 12 Dimensions
- 13 Specifications
- 14 Documents / Resources
  - 14.1 References
- 15 Related Posts

Thank you for choosing our Autonics product.

Read and understand the instruction manual and manual thoroughly before using the product.

For your safety, read and follow the below safety considerations before using.

For your safety, read and follow the considerations written in the instruction manual, other manuals and Autonics website.


Keep this instruction manual in a place where you can find easily.

The specifications, dimensions, etc. are subject to change without notice for product improvement. Some models may be discontinued without notice.

Follow Autonics website for the latest information.

## Safety Considerations

- Observe all 'Safety Considerations' for safe and proper operation to avoid hazards.

-  symbol indicates caution due to special circumstances in which hazards may occur.



**Warning** Failure to follow instructions may result in serious injury or death.

1. Fail-safe device must be installed when using the unit with machinery that may cause serious injury or substantial economic loss. (e.g., nuclear power control, medical equipment, ships, vehicles, railways, aircraft, combustion apparatus, safety equipment, crime/disaster prevention devices, etc.) Failure to follow this instruction may result in personal injury, economic loss or fire.
2. Do not use the unit in the place where flammable/explosive/corrosive gas, high humidity, direct sunlight, radiant heat, vibration, impact or salinity may be present.  
Failure to follow this instruction may result in explosion or fire.
3. Do not disassemble or modify the unit.  
Failure to follow this instruction may result in fire.
4. Do not connect, repair, or inspect the unit while connected to a power source.  
Failure to follow this instruction may result in fire.
5. Check 'Connections' before wiring.  
Failure to follow this instruction may result in fire.




**Caution** Failure to follow instructions may result in injury or product damage.

1. Use the unit within the rated specifications.  
Failure to follow this instruction may result in fire or product damage.
2. Use a dry cloth to clean the unit, and do not use water or organic solvent.  
Failure to follow this instruction may result in fire.

## Cautions during Use

- Follow instructions in 'Cautions during Use'. Otherwise, It may cause unexpected accidents.
- When connecting an inductive load such as DC relay or solenoid valve to the output, remove surge by using diodes or varistors.
- Use the product after 0.5 sec of the power input. When using a separate power supply for the sensor and load,

supply power to the sensor first.

- 12-24 VDC  power supply should be insulated and limited voltage/current or Class 2, SELV power supply device.
- Wire as short as possible and keep it away from high voltage lines or power lines to prevent surge and inductive noise.
- When using switching mode power supply (SMPS), ground F.G. terminal and connect a condenser between 0V and F.G. terminal to remove noise.
- When using a sensor with a noise-generating equipment (e.g., switching regulator, inverter, and servo motor), ground F.G. terminal of the equipment.
- This unit may be used in the following environments.
  - Indoors (in the environment condition rated in ‘Specifications’)
  - Altitude max. 2,000 m
  - Pollution degree 3
  - Installation category II

## Product Components

Sensing type	Through-beam	Diffuse reflective	Convergent reflective
Product components	Product, instruction manual		
Adjustment screwdriver	—	x 1	x 1
Bracket A	x 2	x 1	x 1
M3 bolt/ nut	x4	x2	x2

## Ordering Information

This is only for reference, the actual product does not support all combinations.  
For selecting the specified model, follow the Autonics website.

BYD ❶ – ❷ D T – ❸ – ❹

### ❶ Sensing distance

Number: Sensing distance (unit: mm)

Number+M: Sensing distance (unit: m)

### ❷ Sensing type

T: Through-beam

D: Diffuse reflective

D: Convergent reflective

### ❸ Control output

No mark: NPN open collector output

P: PNP open collector output (Through-beam type)

### ❹ Feature of convergent reflective type

No mark: Front operation indicator

U: Upper operation indicator



T: Built-in timer (OFF delay mode)

## Sold Separately

- Bracket B
- Slit for through-beam type: BYD3M-ST (sticker)

## Cautions during Installation

- Be sure to install this product by following the usage environment, location, and specified ratings. Consider the listed conditions below.
  - Installation environment and background (reflected light)
  - Sensing distance and sensing target
  - Direction of target's movement
  - Feature data
- When installing multiple sensors closely, it may result in malfunction due to mutual interference.
- For installation, tighten the screw with a torque of 0.5 N m. Mount the brackets correctly to prevent the twisting of the sensor's optical axis.
- Do not impact with a hard object or bend the cable excessively. That could decrease the product's water resistance.
- Use this product after the test. Check whether the indicator works appropriately for the positions of the detectable object.

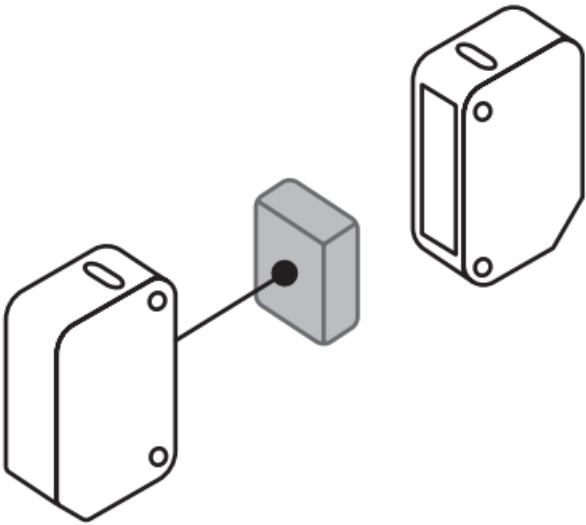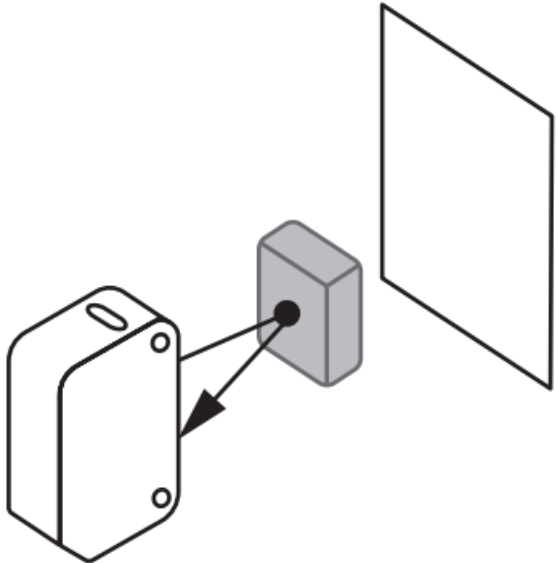Through-beam	Reflective
	
<p>Emitter – Receiver: Install to face each other</p>	<p>Sensor – Sensing target: Install to face each other (parallel with the sensing side of the unit)</p>

Timer Setting

- In case of the built-in timer model, you can set the OFF Delay timer.  
(adjustable time: 0.1 to 2 sec)
- Use the offered adjustment screwdriver. Do NOT turn with excessive force to prevent product damage.



Operation Timing Chart

■ Standard type

Operation mode	Light ON		Dark ON	
Received light	Received		Received	
	Interrupted		Interrupted	
Operation indicator (red)	ON		ON	
	OFF		OFF	
Transistor output	ON		ON	
	OFF		OFF	

- In case of the through-beam type, to prevent malfunction, output of units keeps the state of OFF for 0.5 sec after power ON.


■ Built-in timer type

Operation mode	Light ON	
Received light	Received	
	Interrupted	
Operation indicator (red)	ON	
	OFF	
Transistor output	ON	
	OFF	



- T: Setting time by the adjuster (setting time: 0.1 to 2 sec)
- $t \leq 3 \text{ ms}$  (When the adjuster is set to Min (0.1 sec))
- If the interrupted time ( $T_a$ ) after receiving the light is shorter than the setting time (T), the transistor output maintains the ON state.

## Connections

### ■ Emitter

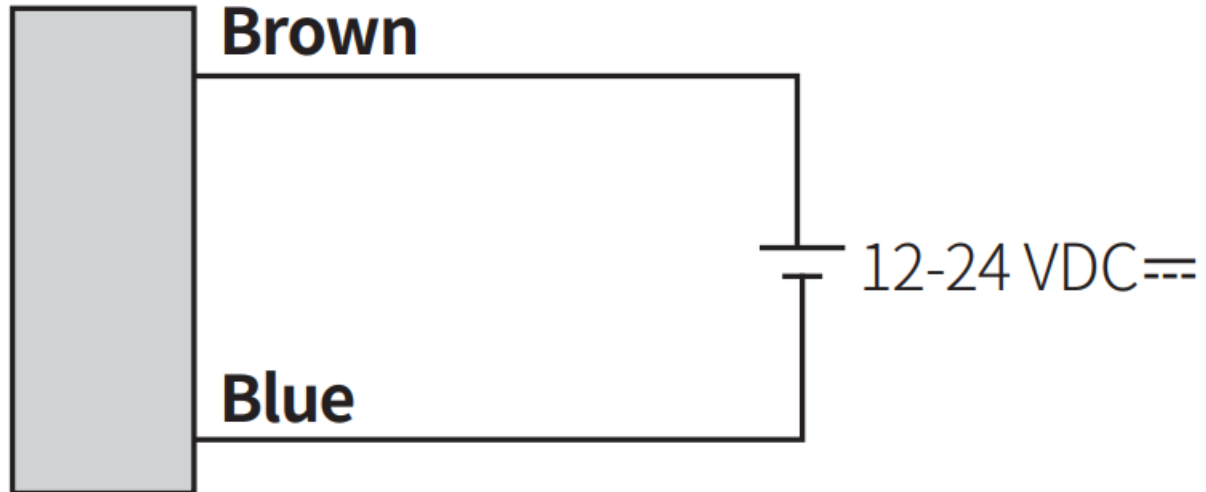


### ■ Receiver, Diffuse reflective, Convergent reflective type

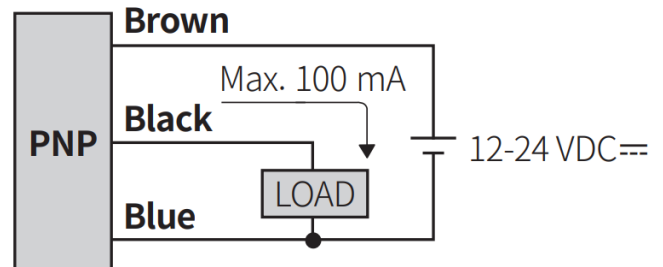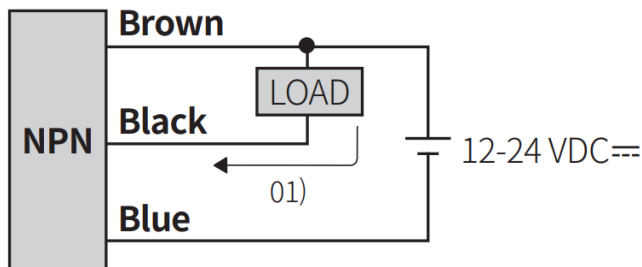


01) Through-beam type: max. 100 mA, diffuse reflective or convergent reflective type: max. 50 mA

## Circuit

### ■ NPN open collector output

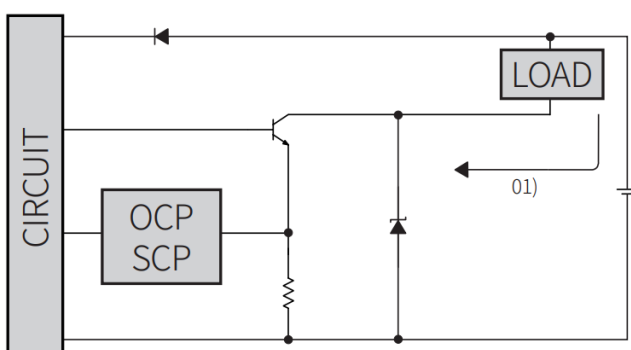

### ■ PNP open collector output

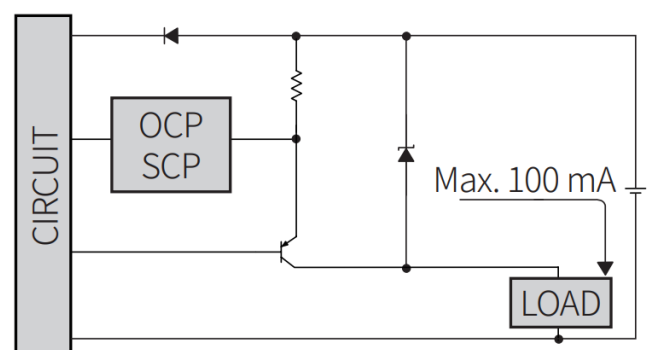




01) Through-beam type: max. 100mA, diffuse reflective or convergent reflective type: max. 50 mA

- OCP (over current protection), SCP (short circuit protection)
- If short-circuit the control output terminal or supply current over the rated specification, normal control signal is not output due to the protection circuit.


## Sensitivity Adjustment

- Set the adjuster for stable Light ON area, minimizing the effect of the installation environment.
- Use the offered adjustment screwdriver. Do NOT turn with excessive force to prevent product damage.
- The steps below are based on Light ON mode.

STEP	Status	Description	
1	Received		Turn the adjuster from MIN to MAX sensitivity and check the position (A) where the operation indicator activates under the light ON area.
2	Interrupted		Turn the adjuster from (A) to MAX and check the position (B) where the operation indicator activates under the light OFF area. If the operation indicator does NOT activate at the MAX (maximum sensitivity): MAX = (B).
3	—		Set the adjuster at the mid position between (A) and (B) for optimal sensitivity.

## Dimensions

- Unit: mm, For the detailed drawings, follow the Autonics website.

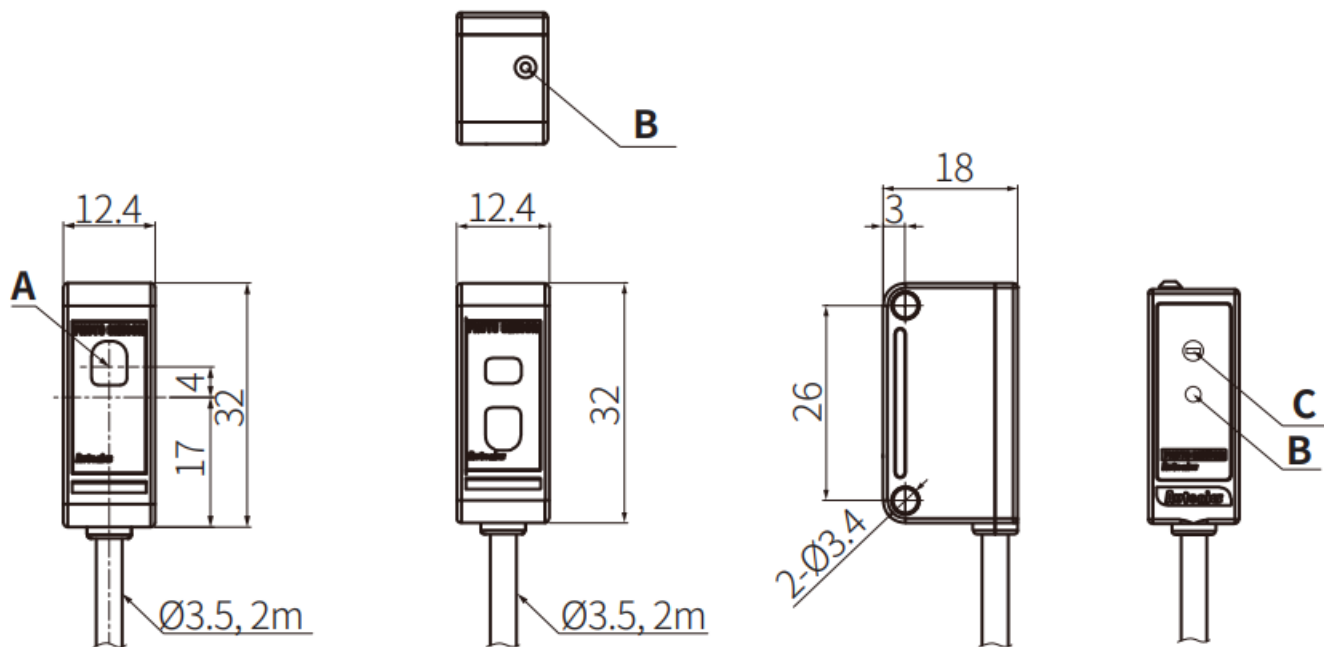


Through-beam

Diffuse reflective,  
Convergent reflective




A	Optical axis
B	Upper operation indicator of convergent reflective type (red)
C	Sensitivity adjustment adjuster or timer adjuster of built-in timer model
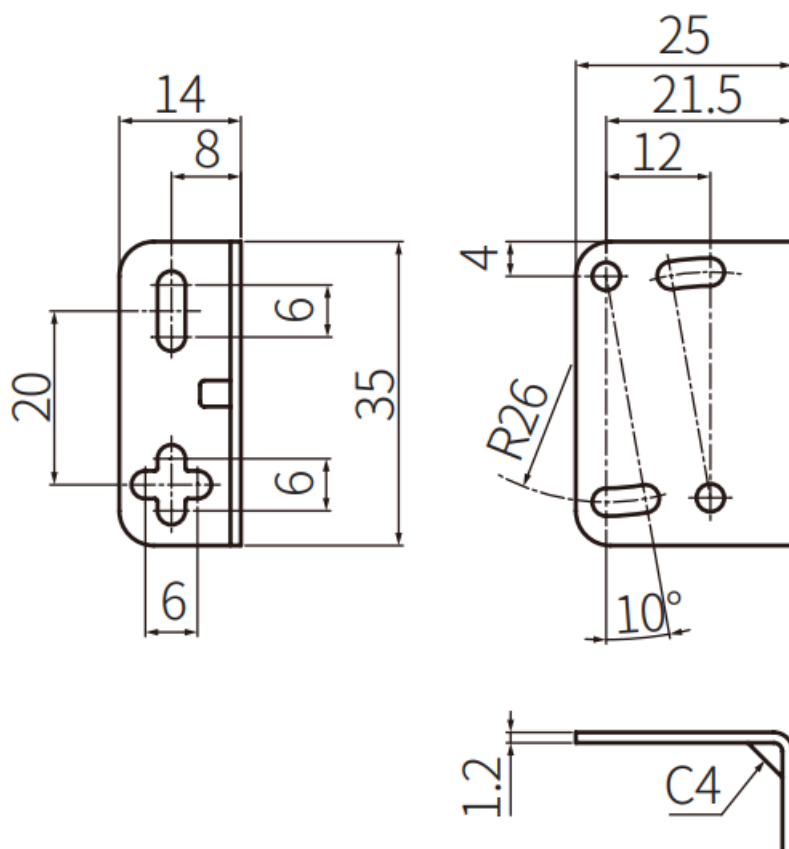
#### ■ Bracket A








#### Specifications



Model	BYD3M-TDT– :	BYD100-DDT	BYD • DDT-1:1	
Sensing type	Through-beam	Diffuse reflective	Convergent reflective	
Sensing distance	3m	100 mm°1'	10 to 30 mm +1046 0	10 to 50 +1046Dm m
Sensing target	Opaque materials	Opaque materials, tr anslucent materials	Opaque materials, translucent material s	
Min. sensing target	≤ Ø6 mm	–	–	
Hysteresis		≤25% of sensing dist ance	10% of sensing d stance	
Response time	≤ 1 ms	Operation: ≤ 3 ins R eturn: ≤ 100 ms	Operation: ≤ 3 ms Return: ≤ 100 ms 02	
Light source	Infrared	Infrared	Infrared	
Sensitivity adjustment	–	YES (Adjuster)	–	
Timer function	–	–	OFF delay mode: 0.1 to 2 sec (Adjuster)	
Operation mode	Dark ON mode	Light ON mode	Light ON mode	
Indicator	Front	Front	Front / Upper opera ion indicator model	
	Operation indicator (red)			
Approval				
Unit weight (packaged)	≈ 80 g (≈ 105 g)	≈ 38 g (≈ 75 g)	≈ 38 g (≈ 75 g)	

01) Non-glossy white paper 50 × 50 mm

02) When the timer adjuster is set to min (0.1 sec).

Power supply	12-24 VDC  ± 10 % (ripple P-P: ≤10%)
Current consumption	It depends on the sensing type
Through-beam	Emitter: ≤ 30 mA, receiver: ≤ 30mA
Reflective	≤ 35 mA
Control output	Through-beam type : NPN open collector output / PNP open collector output model Diffuse reflective, convergent reflective type : NPN open collector output
Load voltage	≤30VDC 
Load current	Through-beam type : ≤100 mA Diffuse reflective, convergent reflective type : ≤50 mA
Residual voltage	NPN: ≤ 1 VDC  , PNP: ≤ 2.5 VDC 
Protection circuit	Reverse power protection circuit, output short overcurrent protection circuit
Insulation resistance	≥ 20 MΩ (500 VDC  megger)
Noise immunity	± 240 VDC= the square wave noise (pulse width: 1 ps) by the noise simulator
Dielectric strength	1,000 VAC– 50/60 Hz for 1 min
Vibration	1.5 mm double amplitude at frequency of 10 to 55 Hz (for 1 min) in each X, Y, Z direction fort hours
Shock	500 m/s' ("– 50 G) in each X, Y, Z direction for 3 times
Ambient illuminance (receiver)	Sunlight: ≤11,000 lx, incandescent lamp: ≤3,000 lx
Ambient temperature	-20 to 65 °C, storage: -25 to 70 °C (no freezing or condensation)
Ambient humidity	35 to 85 %RH, storage: 35 to 85 %RH (no freezing or condensation)
Protection rating	Through-beam, convergent reflective type (front operation indicator model) : IP64 ( IEC standard), Others: IPSO (IEC standard)
Connection	Cable type
Cable spec.	Ø 3.5 mm, 3-wire (Emitter: 2-wire), 2 m
Wire spec.	AWG24 (0.08 mm, 40-core), insulator outer diameter: 01 mm
Material	Case: ABS, sensing part: Acrylic, bracket: SPCC, bolt: SCM, nut: SCM, sleeve: Brass, Ni-plate

# Autonics

18, Bansong-ro 513Beon-gil, Haeundae-gu, Busan, Republic of Korea, 48002  
[www.autonics.com](http://www.autonics.com) | +82-2-2048-1577 | [sales@autonics.com](mailto:sales@autonics.com)

**Documents / Resources**



[Autonics BYD3M-TDTP BYD Series Photoelectric Sensors with Built In Timer](#) [pdf] Instruction Manual  
BYD3M-TDTP BYD Series Photoelectric Sensors with Built In Timer, BYD3M-TDTP BYD Series  
, Photoelectric Sensors with Built In Timer, Built In Timer

References

- [Autonics.com](#)