



Autonics T3-T4 Series 1-Channel Digital Temperature Indicators Instruction Manual

[Home](#) » [Autonics](#) » Autonics T3-T4 Series 1-Channel Digital Temperature Indicators Instruction Manual 

Autonics

1-Channel Digital Temperature Indicators
T3 / T4 Series
INSTRUCTION MANUAL

Contents

- [1 T3-T4 Series 1-Channel Digital Temperature Indicators](#)
- [2 Safety Considerations](#)
- [3 Ordering Information](#)
- [4 Specifications](#)
- [5 Dimensions](#)
- [6 Connections](#)
- [7 Crimp Terminal Specifications](#)
- [8 Documents / Resources](#)
 - [8.1 References](#)
- [9 Related Posts](#)

T3-T4 Series 1-Channel Digital Temperature Indicators

Thank you for choosing our Autonics product.

Read and understand the instruction manual and manual thoroughly before using the product.

For your safety, read and follow the below safety considerations before using.


For your safety, read and follow the considerations written in the instruction manual, other manuals and Autonics website.

Keep this instruction manual in a place where you can find easily.

The specifications, dimensions, etc are subject to change without notice for product improvement Some models may be discontinued without notice.

Follow Autonics website for the latest information.

Safety Considerations

- Observe all 'Safety Considerations' for safe and proper operation to avoid hazards.
-  symbol indicates caution due to special circumstances in which hazards may occur.



Warning Failure to follow instructions may result in serious injury or death

1. Fail-safe device must be installed when using the unit with machinery that may cause serious injury or substantial economic loss.(e.g. nuclear power control, medical equipment, ships, vehicles, railways, aircraft, combustion apparatus, safety equipment, crime/disaster prevention devices, etc.) Failure to follow this instruction may result in personal injury, economic loss or fire.
2. Do not use the unit in the place where flammable/explosive/corrosive gas, high humidity, direct sunlight, radiant heat, vibration, impact or salinity may be present. Failure to follow this instruction may result in explosion or fire.
3. Install on a device panel to use.
Failure to follow this instruction may result in electric shock.
4. Do not connect, repair, or inspect the unit while connected to a power source.
Failure to follow this instruction may result in fire or electric shock.
5. Check 'Connections' before wiring.
Failure to follow this instruction may result in fire.
6. Do not disassemble or modify the unit.
Failure to follow this instruction may result in fire or electric shock.



Caution Failure to follow instructions may result in injury or product damage

1. When connecting the power input and relay output, use AWG 20 (0.50 mm²) cable or over and tighten the terminal screw with a tightening torque of 1.0 N m.
When connecting the sensor input and communication cable without dedicated cable, use AWG 28 to 16 cable and tighten the terminal screw with a tightening torque of 1.0 N m.
Failure to follow this instruction may result in fire or malfunction due to contact failure.
2. Use the unit within the rated specifications.
Failure to follow this instruction may result in fire or product damage
3. Use a dry cloth to clean the unit, and do not use water or organic solvent.
Failure to follow this instruction may result in fire or electric shock.
4. Keep the product away from metal chip, dust, and wire residue which flow into the unit.
Failure to follow this instruction may result in fire or product damage.

Cautions during Use

- Follow instructions in 'Cautions during Use'. Otherwise, it may cause unexpected accidents.
- Check the polarity of the terminals before wiring the temperature sensor. For RTD temperature sensor, wire it as 3-wire type, using cables in same thickness and length.
For thermocouple (TC) temperature sensor, use the designated compensation wire for extending wire.

- Keep away from high voltage lines or power lines to prevent inductive noise. In case installing power line and input signal line closely, use line filter or varistor at power line and shielded wire at input signal line. Do not use near the equipment which generates strong magnetic force or high frequency noise.
- Install a power switch or circuit breaker in the easily accessible place for supplying or disconnecting the power.
- Do not use the unit for other purpose (e.g. voltmeter, ammeter), but temperature controller.
- 12-24 VDC \equiv power supply should be insulated and limited voltage/current or Class 2, SELV power supply device.
- Make a required space around the unit for radiation of heat. For accurate temperature measurement, warm up the unit over 20 min after turning on the power.
- Install a surge absorber at each end of inductive load coil when controlling high-capacity power relay or inductive load (e.g. magnet).
- Make sure that power supply voltage reaches to the rated voltage within 2 sec after supplying power.
- Do not wire to terminals which are not used.
- This unit may be used in the following environments.
 - Indoors (in the environment condition rated in ‘Specifications’)
 - Altitude Max. 2,000 m
 - Pollution degree 2
 - Installation category II

Ordering Information

This is only for reference, the actual product does not support all combinations.
For selecting the specified model, follow the Autonics website .



1. Digit

3: 3 digit

4: 4 digit

2. Size

N: DIN W 48 × H 24 mm

Y: DIN W 72 × H 36 mm

W: DIN W 96 × H 48 mm

S: DIN W 48 × H 48 mm (8 pin plug type)

M: DIN W 72 × H 72 mm

H: DIN W 48 × H 96 mm

L: DIN W 96 × H 96 mm

3. Power supply

X: 12-24 VDC \equiv

4: 100-240 VAC \equiv 50/60 Hz

4. Input type and using range

PN	Input		Using range	T3NI	T4YI T4WI	T3SI	T3HI	T4MI T4LI
K2	Thermo -couple	K(CA)	0 to 200 °C	○		—	—	—
K4			0 to 400 °C	○	—	—	—	—
K8			0 to 800 °C	○	—	○	—	—
KA			0 to 999 °C	○	—	—	○	—
KC			0 to 1200 °C	—	○	—	—	—
J2		J(IC)	0 to 200 °C	○	—	—	—	—
J4			0 to 400 °C	○	—	○	○	○
J5			0 to 500 °C	○	○	—	—	—
RF		R(PR)	600 to 1600 °C	—	—	—	—	○
PO	RTD	DPt100C)	-99.9 to 99.9 °C	○	—	—	—	—
PO			-99.9 to 199.9 °C	—	○	—	—	○
PO			-99 to 199 °C	—	—	—	○	—
P1			0 to 99.9 °C	○	—	○	—	—
P2			0 to 200 °C	○	—	—	—	—
P4			0 to 400 °C	○	○	○	○	○

- Contact us for temperature unit °F model.

Product Components

- Product (+ bracket)
[T4YI] Product, bracket × 2
- Instruction manual

Sold Separately




- 8 pin socket: PG-8, PS-8 (N)
- Terminal protection cover: RMA / RHA / RLA Cover

Initial Display When Power is ON


When power is supplied, all display parts turn ON for 1 sec. After displaying model type, it returns to RUN mode.

1. All display	2. Digit, alarm/option out put	3. Control output, input and temperature range	4. RUN mode
8.8.8.8	t3ni	nP4C	200

Errors

Display	Description	Troubleshooting
	Flashes when input sensor is disconnected or sensor is not connected.	Check input sensor status.
	Flashes when PV is higher than input range.	When input is within the rated input range, this display disappears.
	Flashes when PV is lower than input range.	

Specifications

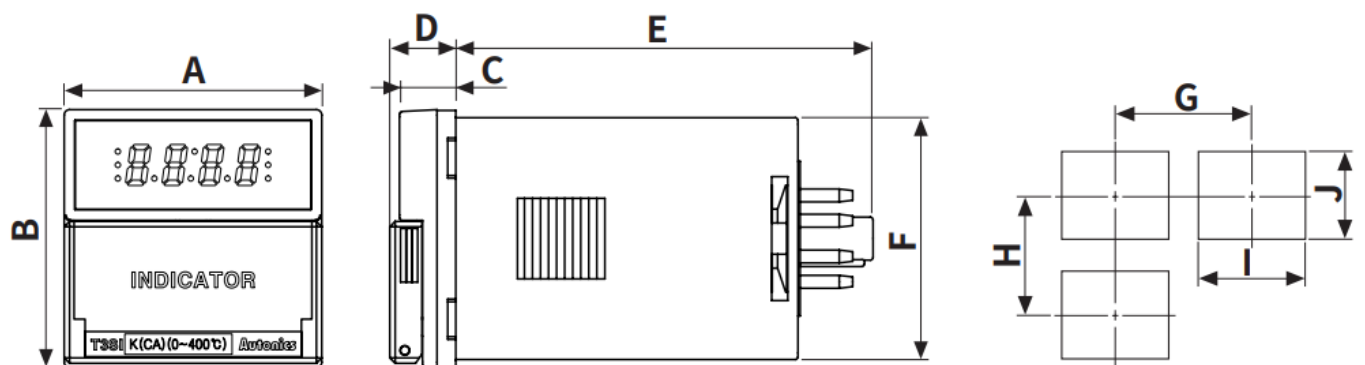
Series	T3, T4 Series
Power supply	100 – 240 VAC~ 50/60 Hz $\pm 10\%$ (T3NI: 12 -24 VDC $\pm 10\%$)
Power consumption	≤ 5 VA (T3NI: ≤ 1 W)
Input specification	Refer to 'Ordering Information: Input type and using range'.
Display accuracy 01)	<ul style="list-style-type: none"> At room temperature (23 °C ± 5 °C): (PV $\pm 0.5\%$ or ± 1 °C higher one) ± 1 digit Out of room temperature range: (PV $\pm 0.5\%$ or ± 2 °C higher one) ± 1 digit
Display type	7 Segment (red), LED type
Dielectric strength	Between input terminal and power terminal: 2,000 VAC~ 50/60 Hz for 1 min
Vibration	0.75 mm amplitude at frequency of 10 to 55 Hz (for 1 min) in each X, Y, Z direction for 2 hours
Insulation resistance	≥ 100 M Ω (500 VDC \approx megger)
Noise immunity	± 2 kV square shaped noise (pulse width 1 μ s) by noise simulator R-phase, S-phase
Ambient temperature	-10 to 50 °C, storage: -20 to 60 °C (no freezing or condensation)
Ambient humidity	35 to 85%RH, storage: 35 to 85%RH (no freezing or condensation)
Accessory	Bracket
Approval	
Unit weight (packaged)	<ul style="list-style-type: none"> T3NI: ≈ 25 g (≈ 48 g) T4WI: ≈ 140 g (≈ 231 g) T3HI: ≈ 137 g (≈ 203 g) T4LI: ≈ 185 g (≈ 274 g) T4YI: ≈ 123 g (≈ 181 g) T3SI: ≈ 80 g (≈ 120 g) T4MI: ≈ 137 g (≈ 202 g)

01) In case of T3NI, T3SI Series and the decimal point display models
At room temperature (23 °C ± 5 °C): (PV $\pm 0.5\%$ or ± 2 °C higher one) ± 1 digit
Out of room temperature range: (PV $\pm 0.5\%$ or ± 3 °C higher one) ± 1 digit

Dimensions






- Unit: mm, For the detailed drawings, follow the Autonics website.
- Below is based on T3SI Series.

■ Panel cut-out




	Body						Panel cut-out			
	A	B	C	D	E	F	G	H	I	J
T3NI	48	24	4	—	48	21	≥ 55	≥ 37	$45^{+0.5}_0$	$22.2^{+0.3}_0$
T4YI	72	36	7	—	93	30	≥ 91	≥ 40	$68^{+0.7}_0$	$31.5^{+0.6}_0$
T4WI	96	48	12	—	100	45	≥ 116	≥ 52	$92^{+0.8}_0$	$45^{+0.6}_0$
T3SI	48	48	10.5	12.3	77.8	□ 45	≥ 65	≥ 65	$45^{+0.5}_0$	$45^{+0.5}_0$
T3HI	48	96	13	—	70	91.5	≥ 65	≥ 115	$45^{+0.6}_0$	$92^{+0.8}_0$
T4M1	72	72	11.8	14.3	75	□ 67.5	≥ 90	≥ 90	$68^{+0.7}_0$	$68^{+0.7}_0$
T4LI	96	96	12.5	—	70	□ 91.5	≥ 115	≥ 115	$92^{+0.8}_0$	$92^{+0.8}_0$

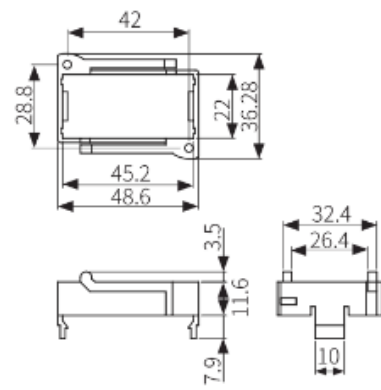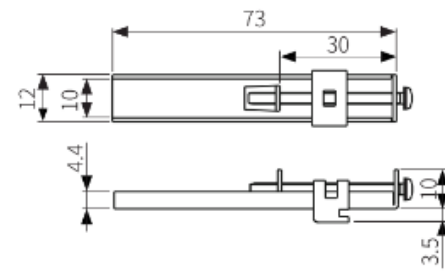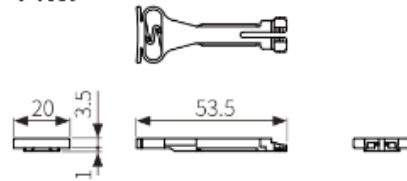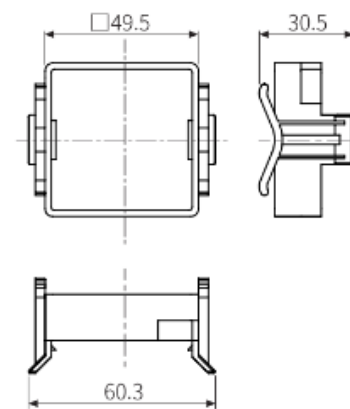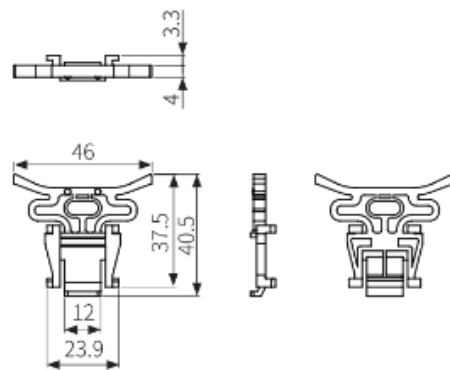■ Bracket


T3NI**T4YI****T4WI****T3SI****T3HI/T4MI/T4LI**

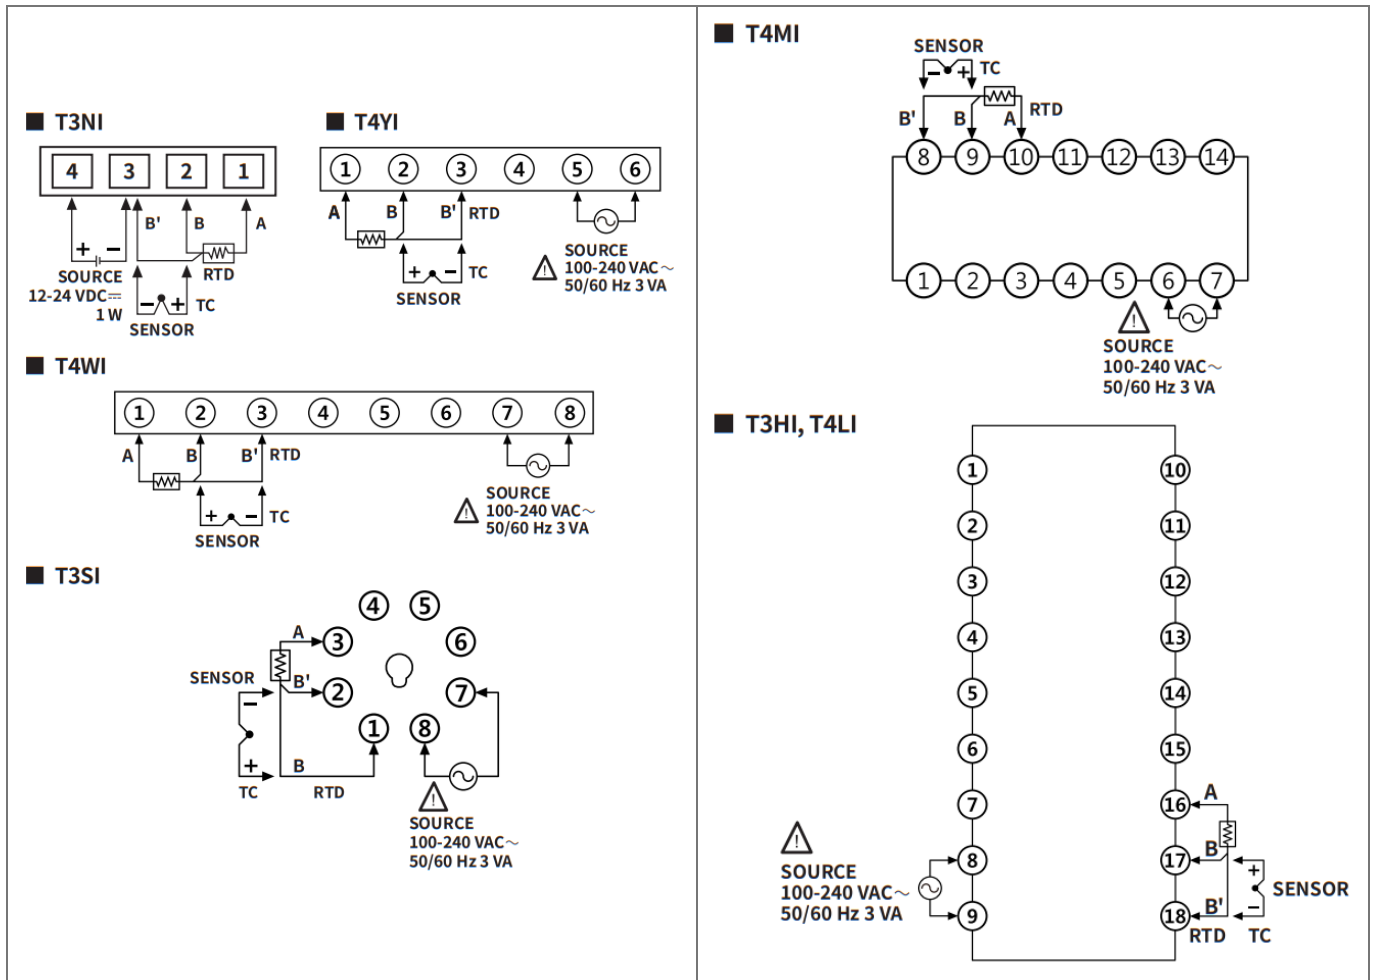Connections



Crimp Terminal Specifications

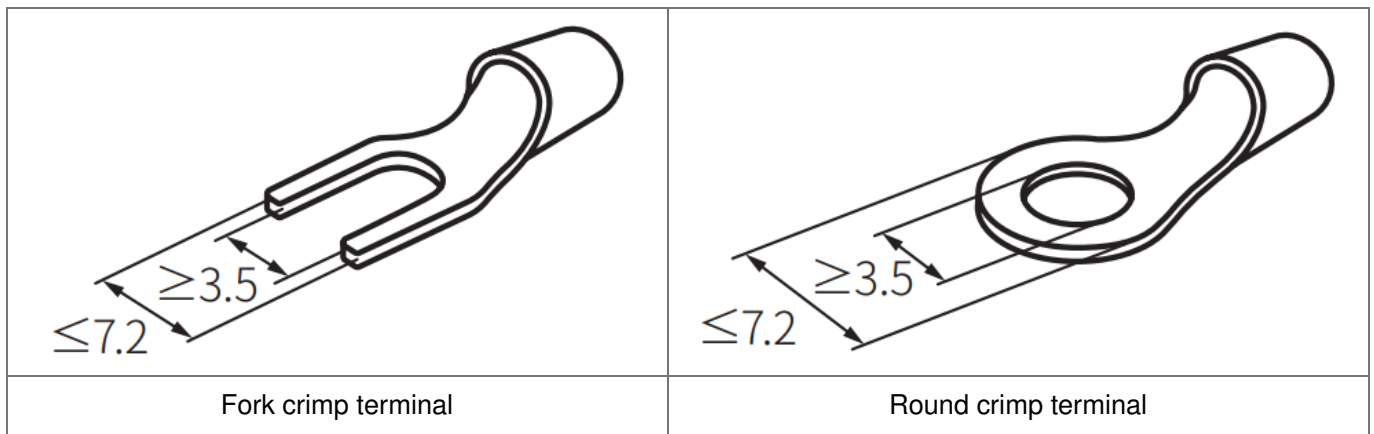- Unit: mm, Use the crimp terminal of follow shape.



Autonics

18, Bansong-ro 513Beon-gil, Haeundae-gu, Busan,
Republic of Korea, 48002

www.autonics.com

+82-51-519-3232

sales@autonics.com

DRW170783AB

Documents / Resources



[Autonics T3-T4 Series 1-Channel Digital Temperature Indicators](#) [pdf] Instruction Manual
T3-T4 Series 1-Channel Digital Temperature Indicators, T3-T4 Series, 1-Channel Digital Temperature Indicators, Digital Temperature Indicators, Temperature Indicators, Indicators

References

- [A autonics.com](#)

Manuals+.