



# Autonics TCD210019AA E40 Series 40 mm Diameter Incremental Rotary Encoders Instruction Manual

[Home](#) » [Autonics](#) » Autonics TCD210019AA E40 Series 40 mm Diameter Incremental Rotary Encoders Instruction Manual

# Autonics

40 mm Diameter Incremental Rotary Encoders

E40 Series

INSTRUCTION MANUAL

TCD210019AA

## Contents [ [hide](#) ]

- [1 TCD210019AA E40 Series 40 mm Diameter Incremental Rotary Encoders](#)
- [2 Safety Considerations](#)
- [3 Cautions during Use](#)
- [4 Cautions during Installation](#)
- [5 Ordering Information](#)
- [6 Product Components](#)
- [7 Sold Separately](#)
- [8 Connections](#)
- [9 Inner Circuit](#)
- [10 Output Waveform](#)
- [11 Specifications](#)
- [12 Dimensions](#)
- [13 Documents / Resources](#)
  - [13.1 References](#)
- [14 Related Posts](#)

## TCD210019AA E40 Series 40 mm Diameter Incremental Rotary Encoders

Thank you for choosing our Autonics product.

Read and understand the instruction manual and manual thoroughly before using the product.

For your safety, read and follow the below safety considerations before using.

For your safety, read and follow the considerations written in the instruction manual, other manuals and Autonics website.


Keep this instruction manual in a place where you can find easily.

The specifications, dimensions, etc. are subject to change without notice for product improvement. Some models may be discontinued without notice.

Follow Autonics website for the latest information.

## Safety Considerations

- Observe all 'Safety Considerations' for safe and proper operation to avoid hazards.

-  symbol indicates caution due to special circumstances in which hazards may occur.



**Warning** Failure to follow instructions may result in serious injury or death.

1. Fail-safe device must be installed when using the unit with machinery that may cause serious injury or substantial economic loss. (e.g. nuclear power control, medical equipment, ships, vehicles, railways, aircraft, combustion apparatus, safety equipment, crime / disaster prevention devices, etc.) Failure to follow this instruction may result in personal injury, economic loss or fire.
2. Do not use the unit in the place where flammable / explosive / corrosive gas, high humidity, direct sunlight, radiant heat, vibration, impact or salinity may be present.  
Failure to follow this instruction may result in explosion or fire.
3. Install on a device panel to use.  
Failure to follow this instruction may result in fire.
4. Do not connect, repair, or inspect the unit while connected to a power source.  
Failure to follow this instruction may result in fire.
5. Check 'Connections' before wiring.  
Failure to follow this instruction may result in fire.
6. Do not disassemble or modify the unit.  
Failure to follow this instruction may result in fire.





**Caution** Failure to follow instructions may result in injury or product damage.

1. Use the unit within the rated specifications.  
Failure to follow this instruction may result in fire or product damage.
2. Do not short the load.  
Failure to follow this instruction may result in fire.
3. Do not use the unit near the place where there is the equipment which generates strong magnetic force or high frequency noise and strong alkaline, strong acidic exists.  
Failure to follow this instruction may result in product damage.

## Cautions during Use

- Follow instructions in 'Cautions during Use'. Otherwise, It may cause unexpected accidents.

- 5 VDC  , 12 – 24 VDC  power supply should be insulated and limited voltage / current or Class 2, SELV power supply device.
- For using the unit with the equipment which generates noise (switching regulator, inverter, servo motor, etc.), ground the shield wire to the F.G. terminal.
- Ground the shield wire to the F.G. terminal.
- When supplying power with SMPS, ground the F.G. terminal and connect the noise canceling capacitor between the 0 V and F.G. terminals.
- Wire as short as possible and keep away from high voltage lines or power lines, to prevent inductive noise.
- For Line driver unit, use the twisted pair wire which is attached seal and use the receiver for RS-422A communication.
- Check the wire type and response frequency when extending wire because of distortion of waveform or residual voltage increment etc. by line resistance or capacity between lines.
- This unit may be used in the following environments.
  - Indoors (in the environment condition rated in ‘Specifications’)
  - Altitude max. 2,000 m
  - Pollution degree 2
  - Installation category II

## Cautions during Installation

- Install the unit correctly with the usage environment, location, and the designated specifications.
- Do not load overweight on the shaft.
- Do not put strong impact when insert a coupling into shaft. Failure to follow this instruction may result in product damage.
- When fixing the product or coupling with a wrench, tighten under 0.15 N m.
- If the coupling error (parallel misalignment, angular misalignment) between the shaft increases while installation, the life cycle of the coupling and the encoder can be shorten.
- Do not apply tensile strength over 30 N to the cable.

## Ordering Information

This is only for reference, the actual product does not support all combinations. For selecting the specified model, follow the Autonics website.

<b>E40</b>	<b>①</b>	<b>②</b>	-	<b>③</b>	-	<b>④</b>	-	<b>⑤</b>	-	<b>⑥</b>	-	<b>⑦</b>
------------	----------	----------	---	----------	---	----------	---	----------	---	----------	---	----------

### 1. Shaft type

S: Shaft type

H: Hollow type

HB: Hollow Built-in type

### 2. Shaft outer diameter / Shaft inner diameter

6: Ø 6 mm

8: Ø 8 mm

10: Ø 10 mm

12: Ø 12 mm

3. Resolution

Number: Refer to resolution in 'Specifications'

4. Output phase

2: A, B

3: A, B, Z

4: A, A, B, B

6: A, A, B, B, Z, Z

5. Control output

T: Totem pole output

N: NPN open collector output

V: Voltage output

L: Line driver output

6. Power supply

5: 5 VDC  ±5%

24: 12 – 24 VDC  ±5%

7. Connection

No mark: Radial cable type

C: Radial cable connector type

## Product Components

Shaft type	Shaft type	Hollow type	Hollow Built-in type
<b>Product Components</b>	Product, Instruction manual	Product (+ bracket), Instruction manual	
<b>Bolt</b>	× 4	× 2	× 2
<b>Coupling</b>	× 1	—	—

## Sold Separately

- Connector cable: CID6S-□, CID9S-□


## Connections

- Unused wires must be insulated.
- The metal case and shield cable of encoders must be grounded (F.G.).
- F.G. (Frame Ground) must be grounded separately.

## Totem pole / NPN open collector / Voltage output

Pin	Color	Function	Pin	Color	Function
1	Black	OUT A	4	Brown	+V
2	White	OUT B	5	Blue	GND
3	Orange	OUT Z	6	Shield	F.G.


- M17 6-pin layout

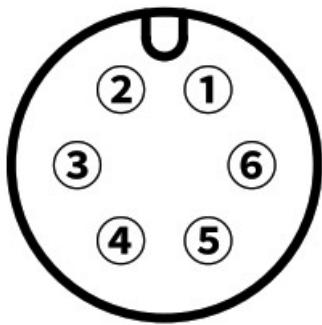

**Line driver output**

Pin	Color	Function	Pin	Color	Function
1	Black	OUT A	5	White	OUT B
2	Red	OUT A	6	Gray	OUT B
3	Brown	+V	7	Orange	OUT Z
4	Blue	GND	8	Yellow	OUT Z
—			9	Shield	F.G.


- M17 9-pin layout

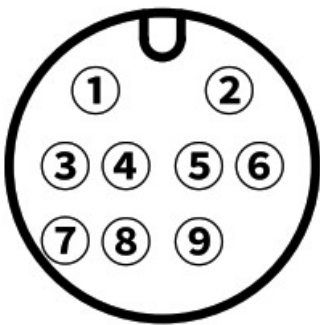


**Inner Circuit**

- Output circuits are identical for all output phase.


### ■ Totem pole output

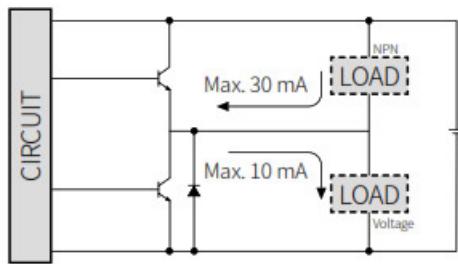


### ■ NPN open collector output

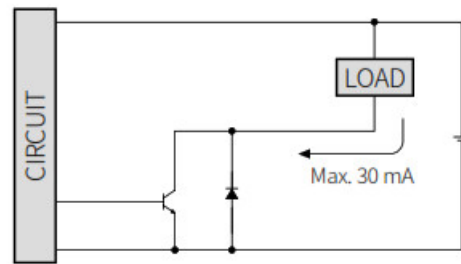

### ■ Voltage output

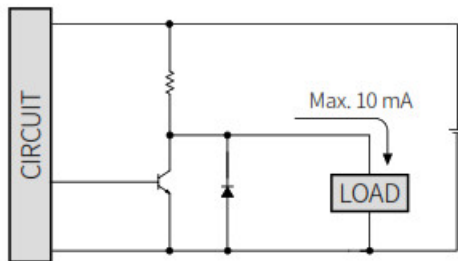


### ■ Line driver output

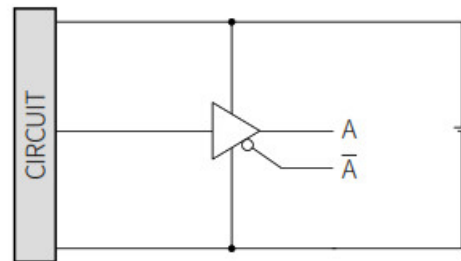


## Output Waveform

- The rotation direction is based on facing the shaft, and it is clockwise (CW) when rotating to the right.
- Phase difference between A and B:  $\frac{T}{4} \pm \frac{T}{8}$  ( $T = 1$  cycle of A)

### ■ Totem pole / NPN open collector / Voltage output

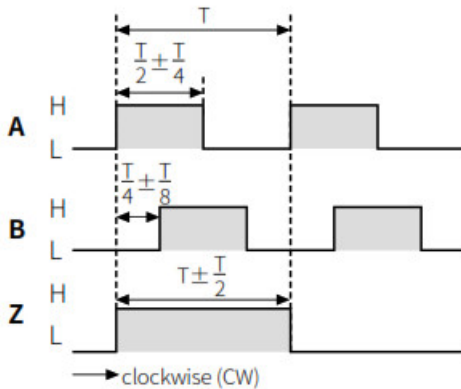



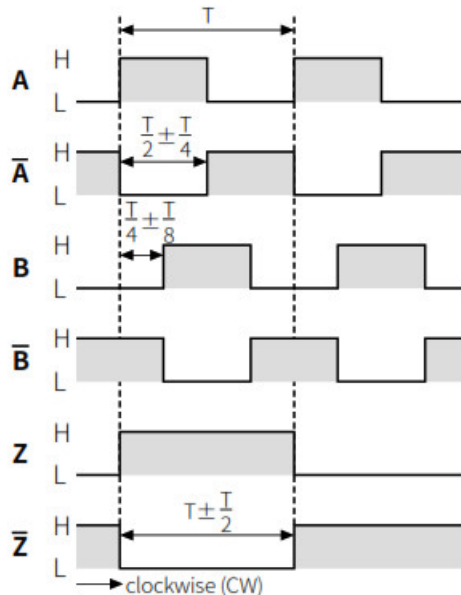



### ■ Line driver output



## Specifications

Model	E40□□-□-□ □-T-□-□	E40□□-□-□ □-N-□-□	E40□□-□-□ □-V-□-□	E40□□-□-□ □-L-□-□
-------	----------------------	----------------------	----------------------	----------------------

<b>Resolution</b>	1 / 2 / 5 / 12 PPR <sup>01)</sup> 10 to 5,000 PPR model			
<b>Control output</b>	Totem pole output	NPN open collector output	Voltage output	Line driver output
Output phase	A, B, Z	A, B, Z	A, B, Z	A, A, B, B, Z, Z
Inflow current	≤ 30 mA	≤ 30 mA	–	≤ 20 mA
Residual voltage	≤ 0.4 VDC 	≤ 0.4 VDC 	≤ 0.4 VDC 	≤ 0.5 VDC 
Outflow current	≤ 10 mA	–	≤ 10 mA	≤ -20 mA
Output voltage (5 VDC )	≥ (power supply -2.0) VDC 	–	–	≥ 2.5 VDC 
Output voltage (12 – 24 VDC )	≥ (power supply -3.0) VDC	–	–	≥ (power supply -3.0) VDC
<b>Response speed <sup>02)</sup></b>	≤ 1			≤ 0.5
<b>Max. response freq.</b>	300 kHz			
<b>Max. allowable revolution <sup>03)</sup></b>	5,000 rpm			
<b>Starting torque</b>	E40S: ≤ 0.004 N m E40H, E40HB: ≤ 0.005 N m			
<b>Inertia moment</b>	≤ 40 g·cm <sup>2</sup> (4 × 10 <sup>-6</sup> kg·m <sup>2</sup> )			
<b>Allowable shaft load</b>	Radial: ≤ 2 kgf, Thrust: ≤ 1 kgf			

Unit weight	≈ 120 g			
Approval				

01) Depending on the control output, only A, B or A, A, B, B are output.

02) Based on cable length: 2 m, I sink: 20 mA

03) Select resolution to satisfy Max. allowable revolution  $\geq$  Max. response revolution [max. response revolution

(rpm) =  $\frac{\text{max. response frequency}}{\text{resolution}} \times 60 \text{ sec}$



<b>Power supply</b>	5 VDC $\overline{\text{---}}$ $\pm 5\%$ (ripple P-P: $\leq 5\%$ ) / 12 – 24 VDC $\overline{\text{---}}$ $\pm 5\%$ (ripple P-P: $\leq 5\%$ ) model
<b>Current consumption</b>	Totempole, NPN open collector, Voltage output: $\leq 80$ mA (no load) Line driver output: $\leq 50$ mA (no load)
<b>Insulation resistance</b>	Between all terminals and case: $\geq 100$ M $\Omega$ (500 VDC $\overline{\text{---}}$ megger)
<b>Dielectric strength</b>	Between all terminals and case: 750 VAC $\overline{\text{---}}$ 50 / 60 Hz for 1 minute
<b>Vibration</b>	1 mm double amplitude at frequency 10 to 55 Hz (for 1 minute) in each X, Y, Z direction for 2 hours
<b>Shock</b>	$\leq 50$ G
<b>Ambient temp.</b>	-10 to 70 °C, storage: -25 to 85 °C (no freezing or condensation)
<b>Ambient humid.</b>	35 to 85%RH, storage: 35 to 90%RH (no freezing or condensation)
<b>Protection rating</b>	IP50 (IEC standard)
<b>Connection</b>	Radial cable type / cable connector type model
<b>Cable spec.</b>	Ø 5 mm, 5-wire (Line driver output: 8-wire), shield cable cable type: 2 m, cable connector type: 250 mm
<b>Wire spec.</b>	AWG24 (0.08 mm, 40-core), insulator diameter: Ø 1 mm
<b>Connector spec.</b>	Totempole, NPN open collector, Voltage output: M17 6-pin socket type Line driver output: M17 9-pin socket type


## Dimensions

- Unit: mm, For the detailed drawings, follow the Autonics website.




	A	B	C
E40H6	Ø6	Ø15	7.5
E40H8	Ø8	Ø15	7.5
E40H10	Ø10	Ø17	6.3
E40H12	Ø12	Ø17	6.3

### Hollow Built-in type

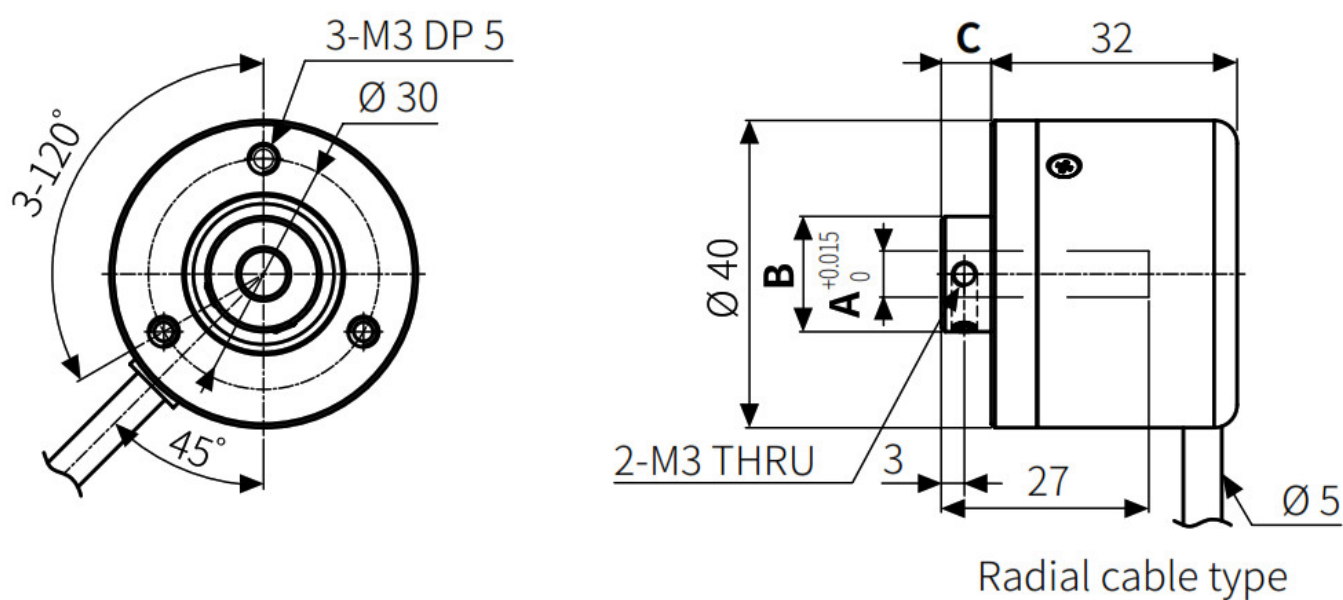


	A	B	C
E40HB6	Ø6	Ø15	6.5
E40HB6	Ø8	Ø15	6.5
E40HB6	Ø10	Ø17	6.3
E40HB6	Ø12	Ø17	6.3

### Bracket

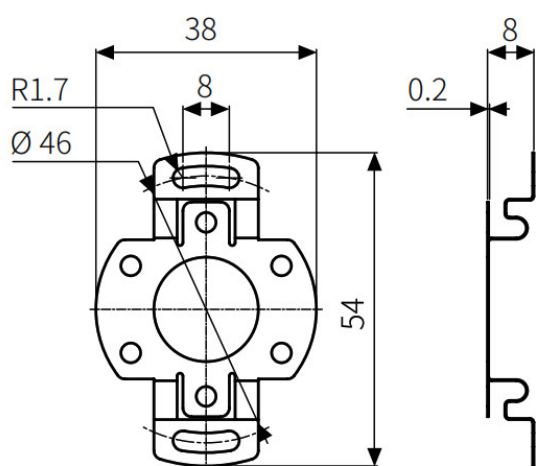

### Coupling

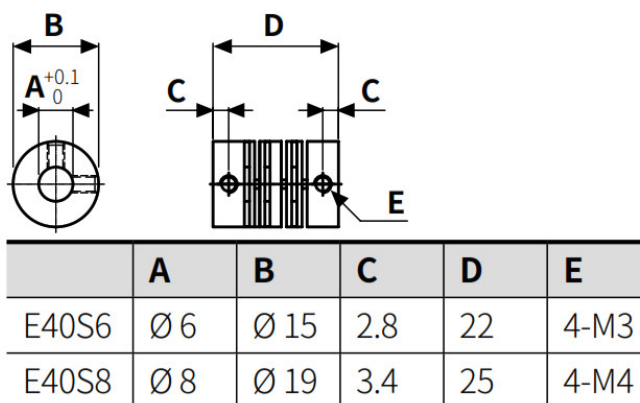

- Parallel misalignment:  $\leq 0.25\text{ mm}$
- Angular misalignment:  $\leq 5^\circ$
- End-play:  $\leq 0.5\text{ mm}$

# Autonics


18, Bansong-ro 513Beon-gil, Haeundae-gu, Busan, Republic of Korea, 48002

[www.autonics.com](http://www.autonics.com)

+82-2-2048-1577

[sales@autonics.com](mailto:sales@autonics.com)

## Documents / Resources

	<p><a href="#">Autonics TCD210019AA E40 Series 40 mm Diameter Incremental Rotary Encoders</a> [pdf] Instruction Manual</p> <p>TCD210019AA E40 Series 40 mm Diameter Incremental Rotary Encoders, TCD210019AA, E40 Series 40 mm Diameter Incremental Rotary Encoders, 40 mm Diameter Incremental Rotary Encoders, Diameter Incremental Rotary Encoders, Incremental Rotary Encoders, Rotary Encoders, Encoders</p>
---	---

## References

-  [www.autonics.com](http://www.autonics.com)