



AUTOOL AS505 Transmission Fluid Tester User Manual

[Home](#) » [AUTOOL](#) » AUTOOL AS505 Transmission Fluid Tester User Manual 

Contents

- [1 AUTOOL AS505 Transmission Fluid Tester](#)
- [2 Product Structure](#)
- [3 Interface Display](#)
- [4 Operations Instruction](#)
- [5 Warranty](#)
- [6 Documents / Resources](#)
 - [6.1 References](#)
- [7 Related Posts](#)


AUTOOL





AUTOOL AS505 Transmission Fluid Tester

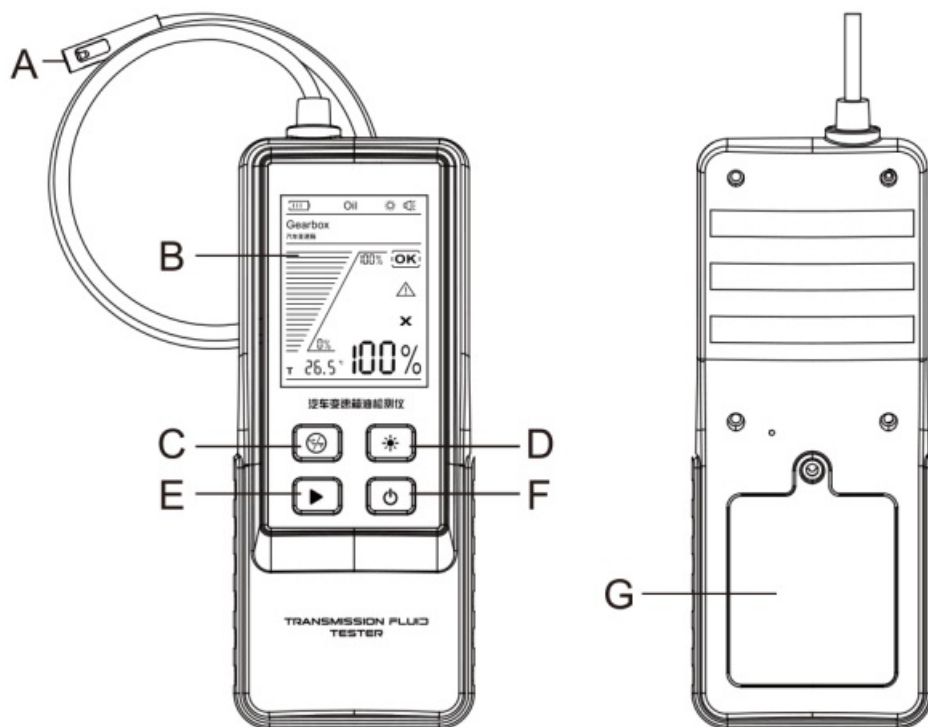

There are still inaccuracies, if in doubt, please contact your dealer or AUTOOL after-service center, we are not responsible for any consequences arising from misunderstandings.

Product Structure



A	Probe tip	B	Display screen
C	[] Press to toggle temperature units		
D	[] Press to turn on / off the backlight		
E	[] Press to test		
F	[] Long press to turn on / off the tester		
G	Battery cover (rear of the tester)		

Interface Display





- Operating temperature -10°C-60°C

- Operating voltage 6V

Display Description






- °C, °F Temperature unit setting

Display	Indication
	Transmittance warning
X	Suggested to replace
	Transmittance is good
100%	Transmittance of transmission fluid
T	Temperature of transmission fluid
Automotive Transmission	Applicable to automotive transmission fluid

Battery Installation Instructions

- Open the battery cover on the back of the device.
- Insert the batteries (4 x 1.5V AAA batteries), paying attention to the correct polarity.
- Close the battery cover securely.

Operations Instruction

- The probe should be wiped clean before each measurement and the temperature of the engine must be below 60°C.
- Press and hold the [] key for more than 2s to power on the tester.
- Press [] to toggle the temperature.
- Submerge the probe in the transmission fluid.
- Press [►] for transmission oil transmittance test.
- The interface will display the transmittance of the transmission fluid.
- Indicates [] when the transmittance is between 100% and 50%, [] when the transmittance is between 50% and 30%, and [X] when it is below 30%. [T] to indicate the current transmission oil measurement temperature.
- After the measurement is completed, press and hold the [] key for 2s for shutdown the tester.
- The instrument will automatically power off after 5 minutes of no activity.

Warranty

From the date of receipt, we provide a three-year warranty for the main unit and all the accessories included are

covered by a one-year warranty.


Warranty access

- The repair or replacement of products is determined by the actual breakdown situation of product.
- If the product fails within 90 days after the customer receives it, the buyer should provide both video and picture, and we will bear the shipping cost and provide the accessories for the customer to replace it free of charge. While the product is received for more than 90 days, the customer will bear the appropriate cost and we will provide the parts to the customer for replacement free of charge.

These conditions below shall not be in warranty range

- The product is not purchased through official or authorized channels.
- The product breakdown because the user does not follow product instructions to use or maintain the product.

Documents / Resources

<div><div>Transmission Fluid Tester</div><div>User Manual</div><div>用户手册</div><div></div></div>	<div><div>AUTOOL AS505 Transmission Fluid Tester [pdf] User Manual</div><div>AS505 Transmission Fluid Tester, AS505, Transmission Fluid Tester, Fluid Tester, Tester</div></div>
--	--

References

- [User Manual](#)