




AUTOPHIX 5150 Car Auto Code Reader User Manual

[Home](#) » [AUTOPHIX](#) » AUTOPHIX 5150 Car Auto Code Reader User Manual 

AUTOPHIX 5150 Car Auto Code Reader User Manual

USER'S MANUAL

5150



Safety precautions

To avoid body injury and damage to the device or your car, please read this manual carefully before using 5150.

1. The testing process described in the manual is generally the experience of technician.
2. Safety precaution is required in most of the process to avoid body injury and damage to the device or your car.
3. Read the vehicle maintenance manual before use this device and follow safety precautions.
4. It generates CO and other poisonous air when engine is running. To avoid this kind of hurt, please repair the car in a well-air-ventilated place.
5. When the engine is running, many parts (such as the coolant fan, pulleys, fan belt etc.) rotate at high speed. To avoid serious injury, always be aware of moving parts. Keep a safe distance from these parts as well as other potentially moving objects.
6. Engine parts become very hot when the engine is running. Don't touch hot engine parts to avoid severe burns.
7. Fuel and battery vapours are highly flammable. To prevent an explosion. keep all sparks, heated items and open flames away from the battery and fuel/ fuel vapours. Do not smoke near the vehicle during testing.

Coverage

1. Supports the vehicles of Ford, Lincoln and Mercury after 1996 with 16PIN Socket, including F150, Transit, VAN.
2. Supports OBDII/EOBD Modes of operation

Product specification

 
2.4'LCD,320 X 240 pixels color screen

Operating Voltage: 8V-18V

Operating Temperature: -0°C-60°C(32-140°F)

Storage Temperature: -20°C-70°C(4-158°F)

Appearance and Key Descriptions

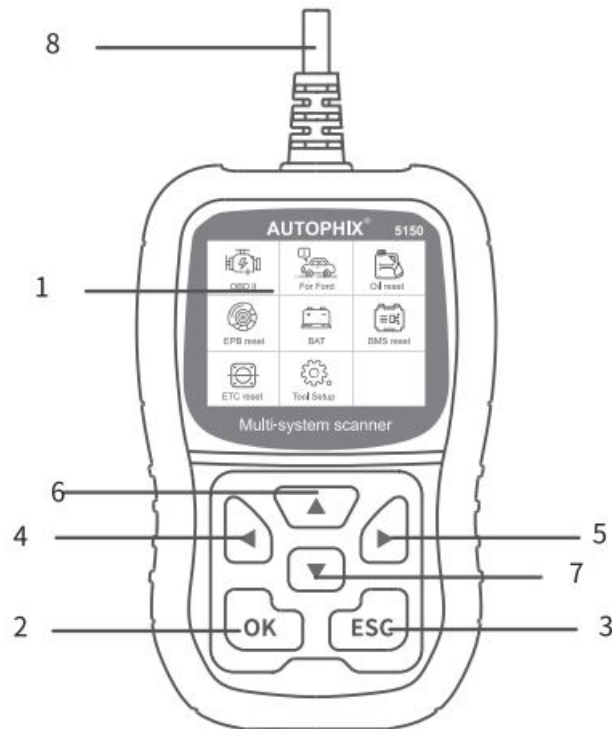

1. LCD DISPLAY – Indicates test results. colourful, 320 x 240 pixels display.
2. OK BUTTON – Confirms a selection (or action) from a menu.
3. ESC BUTTON – Cancels a selection (or action) from a menu or returns to the menu.
4. LEFT SCROLL BUTTON -Move to left menu in main menu mode; When more than one screen of data is retrieved, use the left button could move to previous screens.
5. RIGHT SCROLL BUTTON -Move to right menu in main menu mode; When more than one screen of data is retrieved, use the right button could move to next screen for additional data.
6. UP SCROLL BUTTON -Moves up through menu items in main menu mode; When more than one screen of data is retrieved, use the up button could move to previous screens.
7. DOWN SCROLL BUTTON -Moves down through menu items in main menu mode; When more than one screen of data is retrieved, use the down button could move to next screen for additional data.
8. OBD-16PIN CONNECTOR- Connects the scan tool to vehicle's Data Link Connector (DLC).

OPERATION INSTRUCTIONS

Contents

- 1 1. Connect 5150
 - 1.1 1.1 Turn the ignition on.
 - 1.2 1.2 Locate the vehicle's 16-pin Data Link Connector (DLC).
 - 1.3 1.3 Main menu functions:
- 2 2. 5150 Features
 - 2.1 2.1 Basic Functions
 - 2.1.1 2.1.1 Read Fault Codes
 - 2.1.2 2.1.2 Erase Fault Codes
 - 2.1.3 2.1.3 Read DataStream
 - 2.2 2.2 Main special functions
 - 2.2.1 2.2.1 Reset PCM KAM
 - 2.2.2 2.2.2 BMS Reset
- 3 3 OBDII Diagnose
 - 3.1 3.1 Read Codes
 - 3.2 3.2 Erase Codes
 - 3.3 3.3 I/M Readiness
 - 3.4 3.4 Data Stream
 - 3.5 3.5 Vehicle Information
- 4 4. Tool Setup
 - 4.1 4.1 Language
 - 4.2 4.2 Instructions (Display at start-up)
 - 4.3 4.3 Unit of measure
 - 4.4 4.4 Skin Style
 - 4.5 4.5 Feedback
- 5 5. Update
- 6 6. Warranty
- 7 7. Service Procedures
- 8 Documents / Resources
- 9 Related Posts

1. Connect 5150

1.1 Turn the ignition on.

1.2 Locate the vehicle's 16-pin Data Link Connector (DLC).



(Main interface)



(Main Menu)

1.3 Main menu functions:

[OBDII]: Detect the engine system.

[For Ford]: Test all systems.

 
[Oil reset]: Oil change reset

[EPB reset]: EPB Brake pad reset
[BAT]: To read real Time Battery Voltage
[BMS reset]: Battery management system reset
[ETC reset]: Electric Throttle Control reset
[Tool Setup]: Language I Beeper/Instructions (Display at start-up)/Unit of Measure/Skin Style/Feedback the test result


2. 5150 Features

2.1 Basic Functions

Choose [For Ford] and it displays as follows:

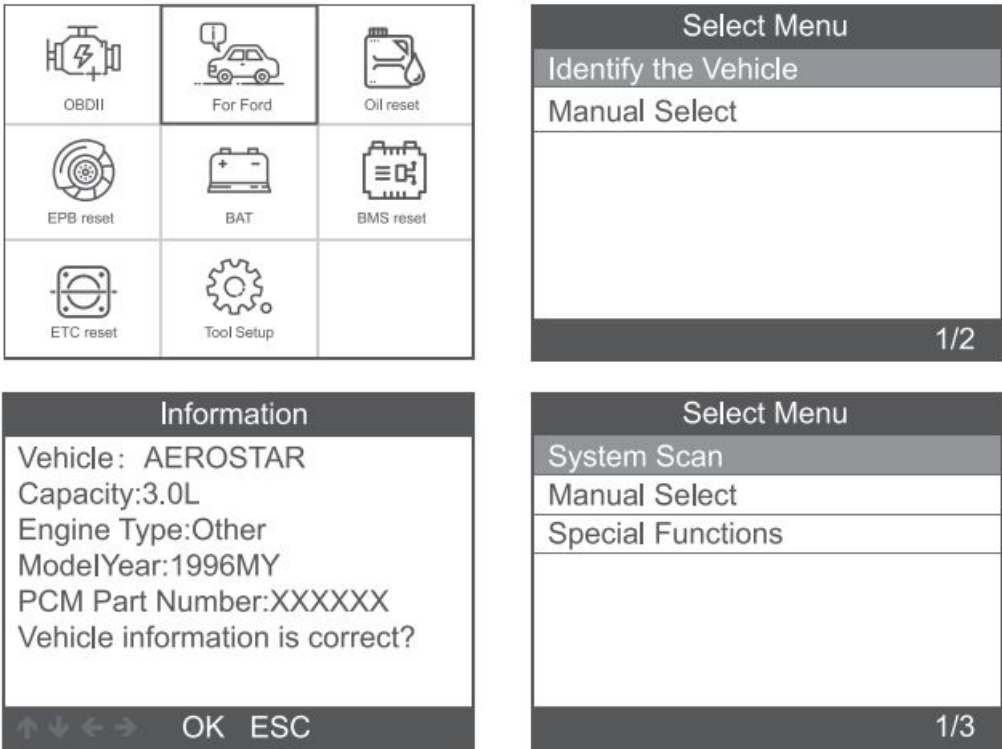

 [System scan] is to scan all vehicle systems. Press [System scan] and it displays as follows :

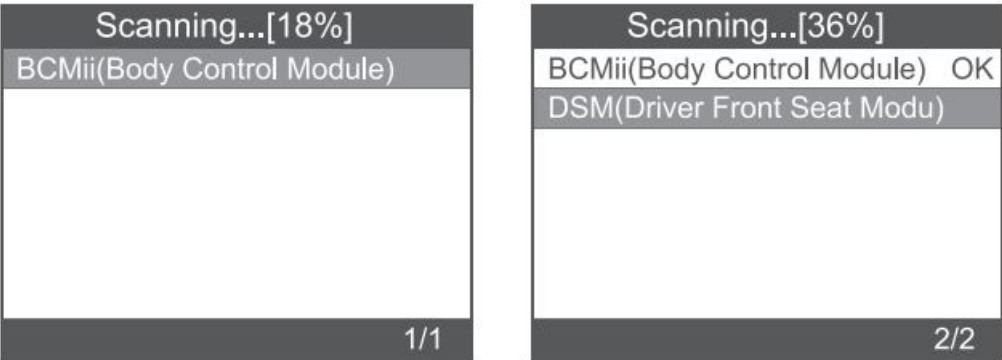

Scanning...[81%]	
BCMii(Body Control Module)	OK
PCM(Power train Control M...	OK
PDM(Passenger Front Door	
3/3	

Select System Diagnose	
BCMii(Body Control Module)	OK
PCM(Power train Control M...	OK
1/2	

[Manual select] is to display all possible systems, select one of the systems to diagnose.

Choose [Manual select] and it displays as follows :

Select Menu	
System Scan	
Manual Select	
Special Functions	
2/3	

Select System Diagnose	
ABS(Antilock braking system)	
BCMii(Body Control Module)	
DDM(Driver Front Door Module)	
DSM(Driver Front Seat Module)	
GWM(Gateway Module A)	
HVAC(Heating Ventiletion Air C..)	
IPC(Intrument Panel Control M...)	
1/11	

Select System Diagnose	
PCM(Power train Control Module)	
PDM(Passenger Front Door Mo...	
PSCM(Power Steering Control...	
RCM(Restraint Control Module)	
8/11	

2.1.1 Read Fault Codes

Choose [Read Fault Codes]. Press up or down button to check each fault code as follows:


Select Function	
Read Fault Codes	
Erase Fault Codes	
Read Datastream	
1/3	

Read Fault Codes	
P01F0	1/55
Coolant Temperature Relapsed Lower Than Diagnostic Monitoring Temperature	
↑ ↓ ← → OK ESC	

2.1.2 Erase Fault Codes


Choose [Erase Fault Codes] then press [OK] button, screen displays as follow:

 Choose [Erase Fault Codes] then press [OK] button, screen displays as follow:

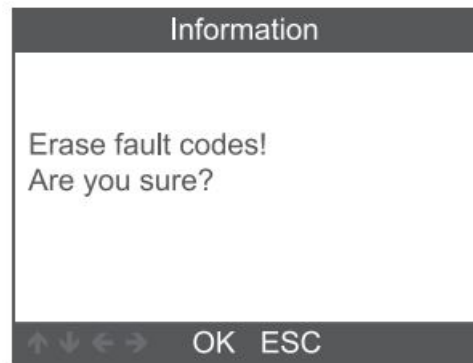

You need to press [OK] again to clear the fault codes.

 It shows as follow after clearing the fault codes.

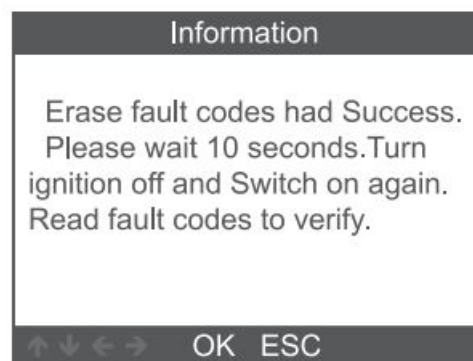

If you give up clearing fault codes, please press [ESC] button.

2.1.3 Read DataStream

Choose [Read Datastream] then press [OK] button, screen displays as follows:

Choose [Read Datastream] then press [OK] button, screen displays as follows:

Select Function	Datastream
Read Fault Codes	View All Items
Erase Fault Codes	Select Items
Read Datastream	
3/3	1/2

Choose [View All Items] then press [OK] button, screen displays as follow:

Datastream	
A/C Pressure Sensor Voltage[Voits]	1.40
A/C clutch output fault detected.	NO Fault
CMP and CKP Synchronized	Yes
o2s11 Status	NO Fault
o2s11 is warm and ready to operate.	Yes
1-5/471	

Choose [Select Items] then press [OK] button, screen displays as follows :

Datastream	Select Datastream
View All Items	[] All Datastream of Page
Select Items	[] A/C Pressure Sensor Voltage
	[] A/C clutch output fault detected.
	[] A/C Pressure sensor
	[] CMP and CKP Synchronized
2/2	1-4/284

Press [LEFT] and [RIGHT] buttons to page.
Press [UP] and [DOWN] buttons to select one by one.

2.2 Main special functions

 
Different car models have different special functions.

(Here are some common special functions. If you want to learn more about the special features of the 5150, please call or email us.)


2.2.1 Reset PCM KAM

Choose [Special Functions] and it displays as follows :

Choose [Special Functions] and it displays as follows :

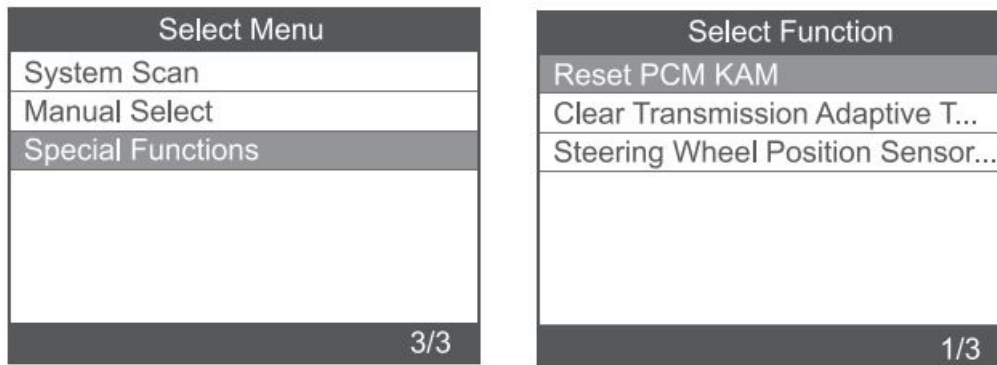

 Choose [Reset PCM KAM] and it displays as follow :

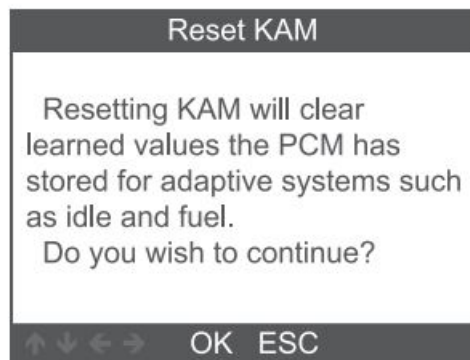

Press [OK] button to next and complete special function operation:



2.2.2 BMS Reset


Choose [Special Functions] and it displays as follows:

Select Menu	Select Function
System Scan	ABS Service Bleed
Manual Select	BMS Reset
Special Functions	EPB Maintenance mode
	Reset PCM KAM
	Clear Transmission Adaptive T...
3/3	2/5


Choose [BMS Reset] and it displays as follow:

Operator Action
Turn ignition to the ON position.
↑ ↓ ← → OK ESC

 Prompt the message and press the confirm button to execute the program;

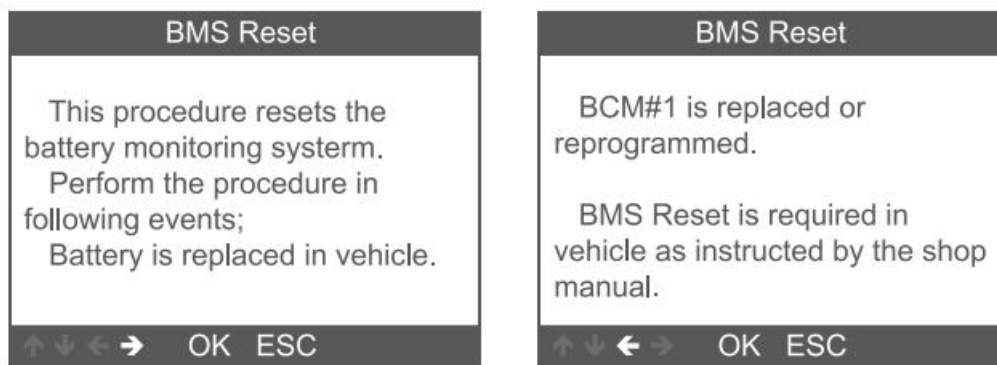


BMS reset is completed.

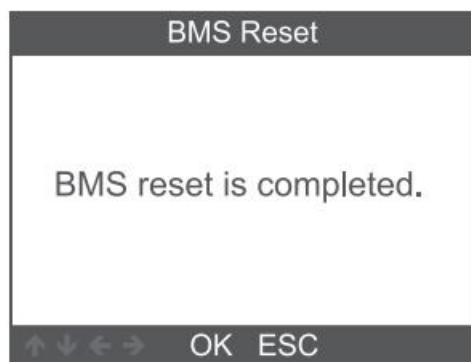 

3 OBDII Diagnose

 Choose [OBDII] and it displays as follows:

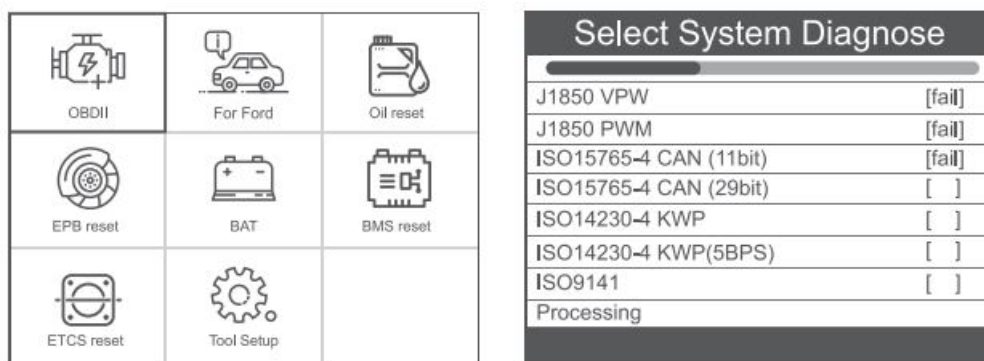

3.1 Read Codes

1. Select [Read Codes], then press [OK]

Diagnostic Menu	
Read Codes	
Erase Codes	
I/M Readiness	
Data Stream	
Vehicle Information	
1/5	

If there are no Diagnostic Trouble Codes present, the display indicates “No (pending) codes are stored in the module!” Wait a few seconds or press any key to return to the Diagnostic Menu.

2.View DTCs and their definitions on screen The control module number; Sequence of the DTCs; Total number of codes detected; Type of codes (Generic of Manufacturer specific)

DTC	
P1113	1/3
FORD	Pending
IAT Sensor Open/Short	
↑ ↓ ← → OK ESC	

3.2 Erase Codes

1. Select [Erase codes] , then press [OK]

Diagnostic Menu	
Read Codes	
Erase Codes	
I/M Readiness	
Data Stream	
Vehicle Information	
2/5	

2. A warning message comes up asking for your confirmation.

Erase Codes	
Clear/Reset Emission-Related Diagnostic Information,Are you sure?	
↑ ↓ ← → OK ESC	

3. Press [OK] to confirm.

Erase Codes	
Please Turn Ignition ON with Engine Off,Press OK key to continue!	
↑ ↓ ← → OK ESC	

Erase Codes	
Emission-Related Diagnostic Information has been Cleared!	
↑ ↓ ← → OK ESC	

3.3 I/M Readiness

Select I/M Readiness option, press [OK], the screen will display as follows:

Diagnostic Menu	
Read Codes	
Erase Codes	
I/M Readiness	
Data Stream	
Vehicle Information	
3/5	

I/M Readiness	
Misfire monitor	OK
Fuel system monitor	OK
Comprehensive component monitor	OK
Catalyst monitor	INC
Heated catalyst monitor	N/A
1-5/10	

3.4 Data Stream

Choose [Data Stream] and it displays as follows:

Diagnostic Menu
Read Codes
Erase Codes
I/M Readiness
Data Stream
Vehicle Information
4/5

Datastream
View All Items
Select Items
1/2

Datastream	
Fuel system 1 status	OL
Fuel system 2 status	OL
Calculated LOAD Value	0.0%
Engine Coolant Temperature	-31°C
Short Term Fuel Trim-Bank 1	0.0%
1-5/19	

3.5 Vehicle Information

Choose [Vehicle Information] and it displays as follows:


Diagnostic Menu
Read Codes
Erase Codes
I/M Readiness
Data Stream
Vehicle Information
5/5

Vehicle Information
Vehicle Identification Number (VIN) LVSFBFAC94F020950
Calibration Identifications(CID) 000007550753
Calibration Venfication Number (CVN) B5073064
↑ ↓ ← → OK ESC

4. Tool Setup

4.1 Language

Choose [Language] and it displays as follows:

 OBDII	 For Ford	 Oil reset
 EPB reset	 BAT	 BMS reset
 ETCS reset	 Tool Setup	

Tool Setup	
Language	
Instructions(Display at startup)	
Unit of Measure	
Skin Style	
Feedback the test result	
Device Information	
	1/6

Language	
English	
Français	
Deutsch	
Español	
Русский	
Português	
Svenska	
	1/10

4.2 Instructions (Display at start-up)

Choose [Instructions (Display at start-up)] and it displays as follows:

Tool Setup	
Language	
Instructions(Display at startup)	
Unit of Measure	
Skin Style	
Feedback the test result	
Device Information	
	2/6

Instructions(Display at startup)	
OFF	
ON	
	1/2

4.3 Unit of measure

Choose Unit of measure and it displays as follows:

Tool Setup	
Language	
Instructions(Display at startup)	
Unit of Measure	
Skin Style	
Feedback the test result	
Device Information	
	3/6

Unit of Measure	
Metric	
Imperial	
	1/2

4.4 Skin Style

Choose Skin Style and it displays as follows:

Tool Setup
Language
Instructions(Display at startup)
Unit of Measure
Skin Style
Feedback the test result
Device Information
4/6

Skin Style
Sky Gray
Gem Blue
1/2

 
4.5 Feedback

If it shows connected error with vehicle or other problem during using, please using the feedback function. Choose [Feedback the test result menu] and it displays as follows:

Tool Setup
Language
Instructions(Display at startup)
Unit of Measure
Skin Style
Feedback the test result
Device Information
5/6

Feedback the test result
Automatic recording is ready, perform the related functions that require feedback.
After the execution,disconnect the car,connect to the computer via USB,use the update.exe tool.
<div> <div>↑</div> <div>↓</div> <div>←</div> <div>→</div> <div>OK</div> <div>ESC</div> </div>


Download upgrade file on the computer from AUTOPHIX website.
Connect device with computer through USB cable.

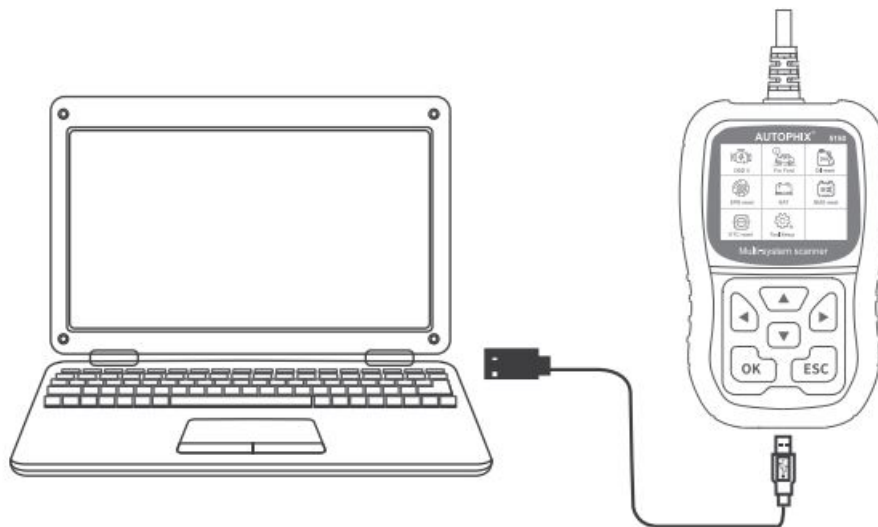


Choose “Update” file and it displays as follow:

bin
driver
README.txt
Update.exe

 Click “Feedback” and it displays as follow:

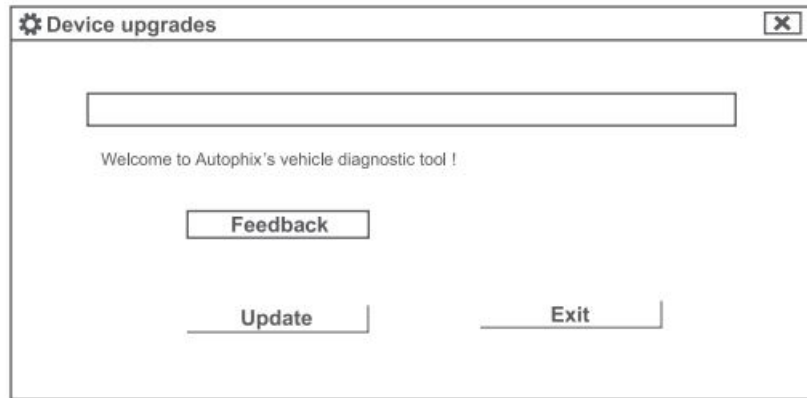

 
Send the Feedback.bin text to support@autophix.com .

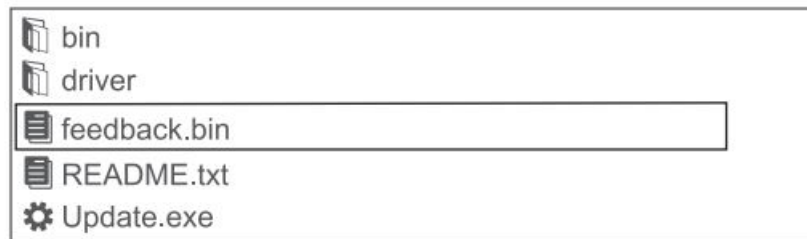

Remark: In the above steps, keep the tool connect with computer.

5. Update

 The device is connected with computer through USB cable.

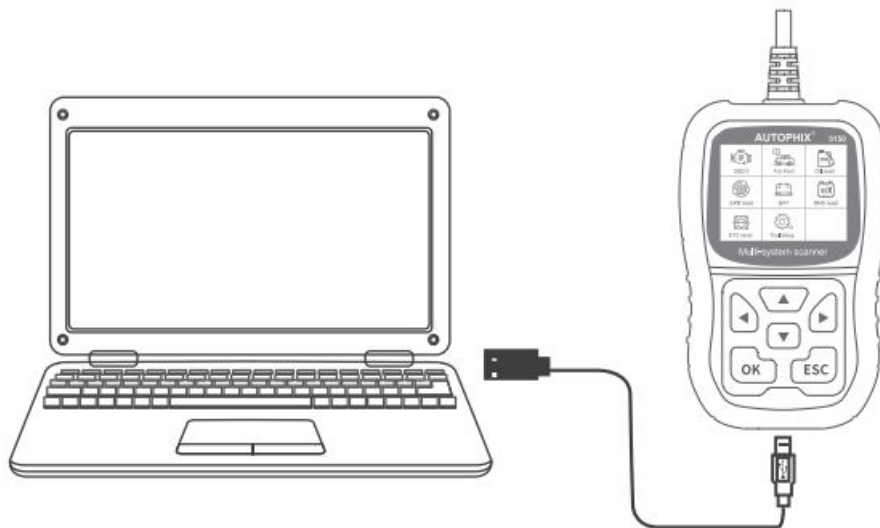

1. When upgrade the device software, it only supports window 7/8/10 system.
2. It can be updated directly on Windows 8 and windows 10 system.
3. When the computer is windows 7 system, the device's software driver is installed on the computer.

6. Warranty

1. This warranty is limited to the person who purchases AUTO PH IX products.
2. AUTOPHIX product is warranted against defects in materials and workmanship for one year (12 months) from

date of delivery to the user.

7. Service Procedures

If you have any questions, please contact your local store distributor or visit our website www.autophix.com .
If it becomes necessary to return the scan tool for repair, contact your local distributor for more information.

AUTOPHIX TECH CO.,LTD

Floor4, Building2, Jinxicheng Industry park, Longhua District, Shenzhen, China

Phone: 0755-8528-1258

E-mail: support@autophix.com

Website: www.autophix.com



Documents / Resources

	<p>AUTOPHIX 5150 Car Auto Code Reader [pdf] User Manual</p> <p>5150 Car Auto Code Reader, 5150, 5150 Reader, Car Auto Code Reader, Auto Code Reader, Code Reader, Car Code Reader, Car Reader, Reader</p>
--	---