



AUTOSLIDE AS086NKP Wireless Numeric Key Pad Instructions

[Home](#) » [AUTOSLIDE](#) » AUTOSLIDE AS086NKP Wireless Numeric Key Pad Instructions 

AUTOSLIDE

Contents

- [1 AUTOSLIDE AS086NKP Wireless Numeric Key Pad](#)
- [2 Keypad Pairing:](#)
- [3 Documents / Resources](#)
- [4 Related Posts](#)

AUTOSLIDE AS086NKP Wireless Numeric Key Pad



This is dual channels security keypad.
Channel 1 is { ◀ } key {Original factory Code is 11}
Channel 2 is { ▶ } key {Original factory Code is 22}

How to change the original factory code

- {11 and 22 is the original factory code. For example, if the combination
- {1234) is the new code for channel 1 and the combination (4567) is the new code for channel 2.)

For Channel 1

1. Press {O) key and hold
2. Press { ◀) key. The keypad should then make a long beeping sound. Keep holding the {O) key at the same time.
3. Release both keys
4. Input the original factory code {11) then press the { ◀) key
5. Input the new code {1234) then press the { ◀) key
6. Input the new code {1234) again then press the { ◀) key.

The keypad will make a long beeping sound. This means the new code modification is successful.

For Channel 2

1. Press {O) key and hold
2. Press { ▶) key. The keypad should then make a long beeping sound. Keep holding the {O) key at the same time.
3. Release both keys
4. Input the original factory code {22) then press the { ▶) key
5. Input the new code {4567) then press the { ▶) key
6. Input the new code {4567) again then press the { ▶) key.

The keypad will make a long beeping sound. This means the new code modification is successful.

Please Note

The new code can't be more than eight numbers long. If the keypad makes 5 short beeps after inputting a code it means that you input is more than eight numbers long, or the input is different from the current code.

Audible Signal	Meaning
1 Short Beep	Keypad tone/ Button tone.
1 Long Beep	Code accepted/Correct pin.
3 Long Beeps	Modification confirmed.
5 Short Beeps	Error during combination input/ Error during combination edit operation. —
10 Rapid Beeps	Battery low warning signal. New batteries required.

The Security Keypad has two channels for communicating with AutoSlide units, each channel having its own combination.

Channel 1: use (◀) on the keypad; original factory code is 11

Channel 2: use (▶) on the keypad; original factory code is 22


Keypad Pairing:

1. Press the Sensor Learn button on your AutoSlide unit's control panel.
2. Enter the current code for the channel you want paired (if no code has been set, this is the original factory code for that channel as listed above) on the keypad.
3. Press the corresponding channel's arrow key (as listed above) on the keypad. The keypad should make a long beeping sound.
4. Repeat Steps 1 through 3, then wait 5 seconds.
5. Repeat Steps 2 and 3 to enter the code. The door should open if properly paired.



Sound Guide and Battery Change:

Audible Signal	Meaning
1 Short Beep	Keypad tone / Button tone
1 Long Beep	Code accepted / Correct pin
3 Long Beeps	Modification confirmed
5 Short Beeps	Error during combination input / Error during combination edit operation
10 Rapid Beeps	Battery low warning signal; new batteries required

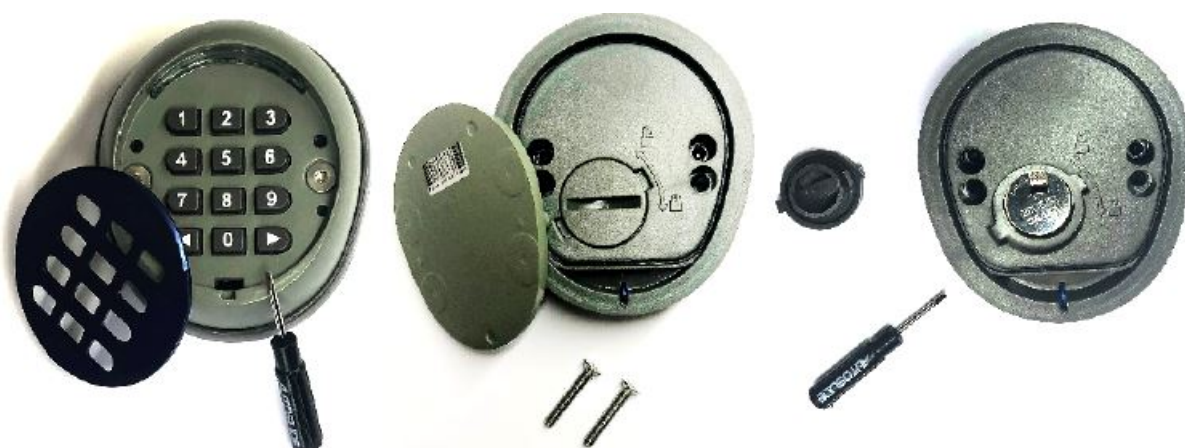

Pry open blue cover

Unscrew back plate

Turn cap to expose battery

*A six-pointed star security drill bit can be used to unscrew the back plate.

Code Customization:


Each channel has its own code that can be set to any number combination fewer than nine digits.

1. While holding down (0) on the keypad, press the arrow key for the channel you want to change. The keypad should make a long beeping sound. Release both keys.
2. Enter the current code on the keypad for the selected channel. If no code has been previously set, this is the original factory code for that channel, as listed above. Press the channel's arrow key (as listed above) to submit the code.
3. Enter the desired new code on the keypad, then press the channel's arrow key (as listed above) to submit the code.
4. Repeat Step 3. The keypad will make a long beeping sound if the modification is successful. If the keypad

makes five short beeps, either the current code entered in Step 2 is invalid or the desired code is more than eight digits long.

autoslide.com
0833-337-5433
info@autoslide.com

Documents / Resources

The thumbnail shows the front cover of the instruction manual. It features the AUTOSLIDE logo at the top left, a small image of the numeric keypad in the center, and various text elements including the product name and model number.

[AUTOSLIDE AS086NKP Wireless Numeric Key Pad](#) [pdf] Instructions
AS086NKP, Wireless Numeric Key Pad

[Manuals+](#).