



AUTOSLIDE Wireless Hand Wave Sensor Installation Guide

[Home](#) » [AUTOSLIDE](#) » AUTOSLIDE Wireless Hand Wave Sensor Installation Guide 

Contents

- [1 AUTOSLIDE Wireless Hand Wave Sensor](#)
- [2 Installation](#)
- [3 Sensor Port Explanation](#)
- [4 FCC Statement](#)
- [5 Documents / Resources](#)
 - [5.1 References](#)
- [6 Related Posts](#)

AUTOSLIDE

AUTOSLIDE Wireless Hand Wave Sensor



Installation

Wireless Installation

1. Slide the panel on the back of the sensor down to release it (note: you don't need to remove the screw at the

top to do this).

2. Insert included batteries into sensor. Each sensor takes 2x CR2032 batteries (one in each slot; “+” side up, negative side down)
3. Slide the back panel back into place (make sure to keep the panel’s rectangular opening above the white port).
4. Press the “Sensor Learn” button on your unit’s control panel. Tap the hand wave sensor (it should flash blue on the front). Then, press “Sensor Learn” again, and tap the hand wave again.
5. The hand wave sensor should now be paired to the unit. Confirm the sensor is active by tapping the front of it – it should flash blue on the front, and open the door.

Hardwired Installation

1. Go to the back of the hand wave sensor and locate the opening showing the white port on the sensor’s circuit board (ref. Diagram 1).
2. Take your included sensor cable and plug it into the white port on the back of the hand wave sensor (ref. Diagram 1).
3. Locate on your unit’s control panel the ports for “Inside Sensor,” “Outside Sensor,” & “Pet Sensor” (labeled on the front, ref. Diagram 3).
4. Take the other end of your sensor cable and plug it into any one of these three ports (see information on which port to use below).
5. The hand wave sensor should now be connected to the unit. Confirm the sensor is active by tapping the front of it – it should flash blue on the front, and open the door.

Sensor Port Explanation

1. Connecting the hand wave sensor to the Inside Sensor port will enable it in Green, Red, and Pet Mode.
2. Connecting the hand wave sensor to the Outside Sensor port will enable it in Green and Pet Mode.
3. Connecting the hand wave sensor to the Pet Sensor port will enable it in Pet Mode only.
4. Connecting the hand wave sensor to the Stacker Sensor port will enable it in Blue Mode only.



Diagram 3: Unit sensor ports

* Note that, if you wirelessly connect your hand wave sensor, you have the option of switching between “M” (Inside) and “S” (Outside) channels. Pet Sensor triggering isn’t an option unless the hand wave is hardwired to the Pet Sensor port. If the hand wave is hardwired to a specific sensor port, the hand wave’s channel switch is ineffective.

FCC Statement

This device complies with part 15 of the FCC Rules. Operation is subject to the following two conditions:

1. This device may not cause harmful interference, and
2. This device must accept any interference received, including interference that may cause undesired operation.

Any Changes or modifications not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment.

Note: This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio/TV technician for help.

The device has been evaluated to meet general RF exposure requirements. The device can be used in portable exposure conditions without restriction.

Documents / Resources

	<p>AUTOSLIDE Wireless Hand Wave Sensor [pdf] Installation Guide AS087HWWS, 2ARVQ-AS087HWWS, 2ARVQAS087HWWS, Wired Hand Wave Sensor, Wireless Hand Wave Sensor</p>
---	---

References

- [Autoslide – Autoslide – Automatic Sliding Doors for homes](#)