

# **AV LINK MaitreView 4KLite Multi-Window Video Processor User Guide**

Home » Av:link » AV LINK MaitreView 4KLite Multi-Window Video Processor User Guide 🖫

**Contents** 1 AV LINK MaitreView 4KLite Multi-Window Video **Processor 2 BEFORE YOU BEGIN 3 CONTACT INFORMATION 4 OVERVIEW 5 APPLICATIONS 6 FEATURES 7 PANEL DESCRIPTION** 7.1 Front Panel **8 Led Indicators** 9 Remote Control 10 CONNECTION DIAGRAM 11 PACKAGE CONTENTS 12 INSTALLATION 13 Specifications 14 Documents / Resources 15 Related Posts



## AV LINK MaitreView 4KLite Multi-Window Video Processor



#### **BEFORE YOU BEGIN**

- Follow all instructions marked on the device during use.
- Provide proper ventilation and air circulation and do not use near water.
- It is better to keep it in a dry environment.
- Place the device on a stable surface (for example cart, stand, table, etc.).
- The system should be installed indoors only. Install either on a sturdy rack or desk in a well-ventilated place.
- Make sure the rack is level and stable before extending a device from the rack if necessary.
- Make sure all equipment is installed on the rack including power strips and other electrical connectors are
  properly grounded.
- Only use the power cord supported with the device.
- Do not use liquid or aerosol cleaners to clean the device.
- Always unplug the power to the device before cleaning.
- Unplug the power cord during lightning or after a prolonged period of non-use to avoid damage to the equipment.
- Do not stand on any device while installing the device to the rack.
- Do not attempt to maintain the device by yourself, any faults, please contact your vendor.
- Save this manual properly for future reference.

#### **COPYRIGHT AND TRADEMARKS**

All rights reserved by AV LINK GROUP LTD. No part of this document may be reproduced in any form or by any means without written permission from the product manufacturer. Changes are periodically made to the information in this document. They will be incorporated in subsequent editions. The product manufacturer may make improvements and changes in the product described in this document at any time.

(**Note:** If there is any discrepancy with the latest version, please refer official website as the primary source of Information)

#### **CONTACT INFORMATION**

AV LINK GROUP LTD.

Headquarters: 13F.-1, No. 2, Jian 8th Rd., Zhonghe Dist., New Taipei City 235, Taiwan (R.O.C.) TEL: 886-2-8226-

2268

FAX: 886-2-8226-2269 E-mail: sales@cctch.com.tw

Website: https://avlinksystem.com

For Warranty:

Please follow the warranty policy according to AV LINK's local official distributor; during the warranty period, it is recommended to keep your proof of purchase, accessories, and packaging in place.

#### **OVERVIEW**

Thank you for purchasing AV LINK's Multi-window Video Processor: MaitreView™ 4KLite is a true 4K HDMI Video Processor, that can generate powerful uncompressed 4K video algorithms driving on FPGA, it allows up to 4 HDMI inputs and output on 2 HDMI output, where all inputs and output support to uncompressed 4K/60Hz 4:4:4. It can switch up to 6 default layouts and single view modes, it uses seamless switching technology, which independent layouts can display on 2 outputs. It can operate by front panel, remote control and also by Web GUI and Remote control APP (Android tablet & iPad) control. This quick start guide will take you through the necessary steps to get started with MaitreView™ 4KLite.

#### **APPLICATIONS**

MaitreView™ 4KLite is a powerful device that can be used in:

- Corporate
- · Design house
- Education
- Entertainment
- Esport
- Fashion
- Government

•

- Ith Care
- · House of worship
- Retail

And any application which requires seamless switching and powerful video processing.

#### **FEATURES**

- Unparalleled video processing engine
- Uncompressed 4K/60Hz, 4:4:4
- 6 layouts
- · Independent layouts on 2 outputs
- · Seamless switching
- Front panel display (LCM)
- Control by push button on the front panel, remote control or Web GUI and Remote control APP (Android tablet & iPad)

#### PANEL DESCRIPTION

## **Front Panel**

#### A LED INDICATOR

The LED indicator shows system status

• B POWER

Press to power on / off the device

C AV MUTE

Press to enable / mute audio and video

D OUTPUT

Press to choose output to display

• E SINGLE VIEW


Switch to single view /full screen with specific input

• F LAYOUT

Switch to chosen layout

G LCD DISPLAY

#### Shows device information

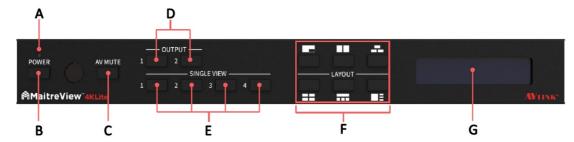

#### **Back Panel**

#### • H IN 1~4

HDMI input port. Associate to input channels 1 to 4, respectively

## • I OUT 1~2

HDMI output port, Associate to output 1 and 2 respectively

## J AUDIO OUT

3.5mm audio output

#### K S/PDIF OUT

S/PDIF audio output

#### • L USB 2.0

For debugging purposes only For debugging purposes only

#### M LAN

For Ethernet connection


(For Web or Remote control APP)

## • N RS-232 (terminal block format)

The order of RS-232 pin is RX, GND, TX (From the left side to the right)

#### • O DC 12V

Power port for DC 12V Power adaptor (included)

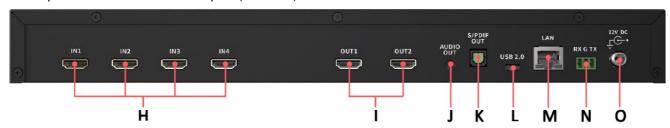

## **Led Indicators**

The following describes LED indicators and their status:

#### • Dim

• NO POWER - No power or power failure

### Blue

- Steady: IDLE Connected, power on but device in standby mode
- Blink: POWER OFF IN PROGRESS Under power off progress

#### Green

- Blink: POWER ON IN PROGRESS Under power on process
- Steady: NORMAL After power on, under normal operation mode

• Blink once: GET IR SIGNAL - Receive IR signal

#### Red

Steady: ERROR/FAILD – Faulty connection, or error occurred, need to check for errorSteady:
 ERROR/FAILD – Faulty connection, or error occurred, need to check for error

#### Orange

• Steady: POWER OFF CONFIRM - Remote control switch off mode confirmation status

#### **Remote Control**

#### • O POWER

On: press once to switch on device Off: press twice to switch off device

#### • P SINGLE VIEW REGION INPUT

Region input to choose from input port 1~4. Associate to input channels 1 to 4, respectively. You can choose from any of the input source 1~4 to display on output 1 or output 2

## Q LAYOUT


Choose any of the 6 layouts to view on output 1 or output 2

#### • R REGION

Press to choose region on output 1 or output 2


#### S MUTE

Press to enable or mute video or audio

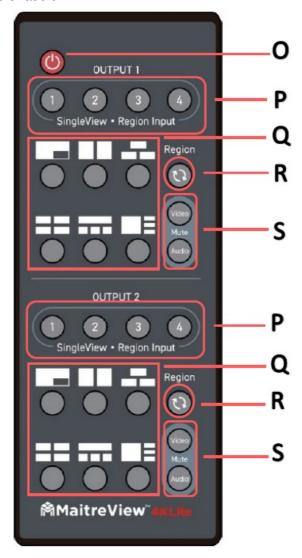

#### **CONNECTION DIAGRAM**

MaitreView<sup>™</sup> 4KLite allows the user to connect up to FOUR 4K/UHD multi-video sources which may simultaneously output on TWO 4K/UHD displays. MaitreView<sup>™</sup> 4KLite allows the user to connect up to FOUR 4K/UHD multi-video sources which may simultaneously output on TWO 4K/UHD displays.

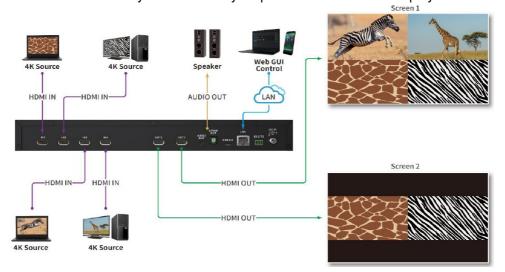

## **PACKAGE CONTENTS**

- MaitreView<sup>™</sup> 4KLite unit
- Rack-Mount Bracket \* 2
- · Screws (for Brackets) \* 6
- Adaptor: IN:100V-240VAC OUT: DC 12V/5A LOCK DC JACK
- · Remote control
- · Quick Start Guide
- SYSTEM REQUIREMENTS

## Minimum:

- 720p/HD input source
- 1080p/FHD output display

#### Recommended:

- 4K/UHD input sources \* 4
- 4K/UHD output displays \* 2
- Ethernet cable (Cat 5e, for Web control and Remote control APP) \* 1
- For Web: Google Chrome
- For Android tablet APP: Android tablet with Android 7.0
- For iPad APP: iPad with latest iPadOS version

## **INSTALLATION**

**Note:** please turn the power off for your displays and video sources before you begin the installation.

- 1. Turn the device to the back, connect each video source to the input ports respectively.
- 2. Connect each display to the output ports respectively.
- 3. Connect the power adapter to the DC 12V power port, and locking the DC power jack. The LED will turn blue after connected successfully.
- 4. Once step1~3 is completed, please turn the device to the front and turn the power on for displays and video sources.
- 5. Power on your device: on your front panel, press the POWER button once, the blue LED will start to blink for around 30 seconds.
- 6. After the LED turn green, then the device is ready to use.
- 7. Power off your device: when you wish to turn off the power, please long press the POWER button for around 3 seconds, the LED will blink in blue for around 20 seconds, and then the device will shut down itself.

#### **REMOTE CONTROL**

#### Single View

Single view allows user to output a single region from any of the HDMI IN 1~4 channels, you can press from 1~4 on output 1 or output 2. To do this you need to:

Press any of input 1~4 on SingleView . Region Input


1. Press 1~4 to choose one region layout from input source 1~4 to display on output 1 or output 2, for example press on output 2, then single view displays selected input on full screen in output 2



#### Layouts

Layout button allows user to choose any of the 6 layouts to show on output 1 or output 2. To do this you need to: Select the layout from either of the 6 layouts pattern


1. Select layout by press the button next to the layout icon you wish to use, for example, press once on layout section, then layout will show on output 2

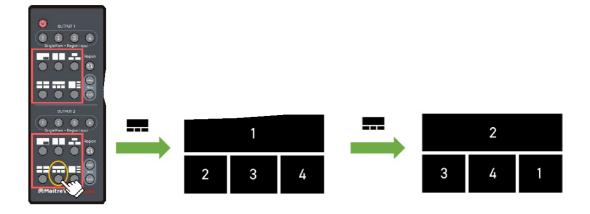

## **Region Source**

Region source allows user to take turns tagging one region clockwise, to do this you need to: Press Region button ► Press any of input 1~4 on SingleView . Region Input

1. Press Region button to tagging a region on output, for example this case, press Region from output 2, a blue border will appear on the Region, you may repletely press Region choose desire region

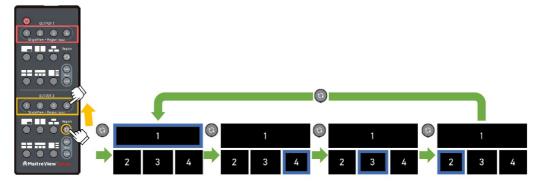

2. Then you may can press any of Single View . Region input button1~4 to select the desired region

# **Specifications**

Video Processing			
Technology	MaitreView™		
Performance	Inputs & Outputs up to 4K/60Hz		
Max. number of the split layer	4 split layers on each output port		
Seamless Switch	Available when changing sources or Presets		
Region	1 per layer, Max 4 layers per output		
Configuration & Control			
Interface	Front panel, Remote Control, Web, Remote control APP (Android ta blet & iPad)		
Front Panel			
LCM	Display IP & device information (status)		
LED	System Status		
Control Ports			
Ethernet	RJ45 Connector		
Speed	10/100/1000M bps		
RS-232	3-pin Terminal Block Header		
Video Inputs			
Input connectors	4 x HDMI – HDMI 1.4~2.0 & HDCP 1.4 & 2.2 compatibility		
Resolution support	4096x2160p, 30/50/60Hz 3840x2160p, 30/50/60Hz 1920x1080p, 60Hz 1280x720p, 60Hz	XGA 1024×768, 60Hz SXGA+ 1400 ×1050, 60Hz UVGA 1600×1200, 60 Hz WXGA 1280×800, 60Hz WSXGA 1680×1050, 60Hz WUXG A 1920×1200, 60Hz	

Video Output	
Output connectors	2 x HDMI – HDMI 1.4~2.0 & HDCP 1.4 & 2.2 compatibility
Resolution support	4096x2160p, 30/50/60Hz
	3840x2160p, 30/50/60Hz
	2560x1080p, 50/60Hz
	1920x1080p, 50/60Hz
Analog Audio Output	
Connector	3.5mm phone Jack
Format	Analog output
Supported sampling rate	48kHz
Sample size	24 bits

Supported channels	1 Stereo pair	
Digital Audio Output		
Connector	Toslink	
Format	Digital output	
Supported sampling rate	48kHz	
Sample size	24 bits	
Supported channels	S/PDIF	
Mechanical		
Dimensions (L x W x H)	383mm x170mm x 43mm	
Weight	2.05Kg	
Housing	SGCC (Galvanized steel plate)	
Environmental		
Operating Temperature	0º to +40ºC (+32º to +104ºF)	
Storage Temperature	-10º to +70º C (+14º to +158º F)	
Power Supply		
External	IN:100V-240VAC OUT: DC 12V/5A	
Connector	Locking	
Power cable	x 1	
Power consumption	40W (Max consumption during machine operation)	
Accessories included	·	
Quick Start Guide	x 1	
MaitreView™ 4KLite unit	x 1	
Power Adapter	IN:100V-240VAC OUT: DC 12V/5A LOCK DC JACK	
Remote Control	x 1	

## **Documents / Resources**



AV LINK MaitreView 4KLite Multi-Window Video Processor [pdf] User Guide MaitreView 4KLite Multi-Window Video Processor, 4KLite Multi-Window Video Processor, Multi-Window Video Processor, Window Video Processor, Processor

