

AVA WSN244059A Table Lamp User Manual

Contents

- [1 AVA WSN244059A Table Lamp](#)
- [2 Product Usage Instructions](#)
- [3 IMPORTANT SAFETY INSTRUCTIONS](#)
- [4 ADDITIONAL SAFETY PRECAUTIONS FOR LIGHTING](#)
- [5 Product Specification](#)
- [6 INSTRUCTIONS FOR INSTALLATION](#)
- [7 Warranty](#)
- [8 CONTACT](#)
- [9 FAQ](#)
- [10 Documents / Resources](#)
 - [10.1 References](#)

AVA

AVA WSN244059A Table Lamp

Product Usage Instructions

- Caution: Assemble the lamp completely before connecting to the electricity supply.
- Loosen the Socket Ring (C).
- Remove the cover of the lamp shade before using.
- Install the Lamp Shade (B) to the Lamp Holder (A) and lock the Socket Ring (C).
- Install the bulb-Max 25W E27 (not included) into the lamp holder.
- Check to ensure that all the components have been assembled correctly.
- Connect to the mains supply.
- Thank you for your purchase. Your new product is warranted to be free from defects in materials and workmanship for the period stated above, from the date of purchase, provided that the product is used according to the accompanying recommendations or instructions where provided.
- This warranty is in addition to your rights under the Australian Consumer Law.
- For New Zealand customers, this warranty is in addition to statutory rights observed under New Zealand legislation.
- We will provide you with your choice of a refund, repair (where possible) or exchange (availability dependent) for this product if it becomes defective within the warranty period.
- The business will bear the reasonable expense of claiming the warranty. This warranty will no longer apply where the defect is a result of alteration, accident, misuse, abuse or neglect.

- Carefully read all instructions for the assembly and use of this product before connecting to an electricity supply.
- Use only the recommended bulb rating, as detailed on the lamp holder and/or label.
- Never use a bulb that is rated more than the recommended capacity.
- Light bulbs become very hot in seconds. Do not attempt to touch the bulb while the lamp is lit, and supervise others accordingly.
- Before cleaning or replacing a defective bulb, switch off the lamp and unplug it from the mains socket. Allow the bulb to cool for at least 10 minutes before touching it and making the change.
- Ensure the new bulb is secure in the holder before reconnecting to the power supply.
- If in doubt, consult a qualified electrician.

IMPORTANT SAFETY INSTRUCTIONS

The following safety precautions should always be followed to reduce the risk of electric shock, personal injury or fire. It is important to read all of these instructions carefully before using the product and to save them for future reference or for new users.

1. This product must only be used as intended by the enclosed operating instructions
2. Do not carry the appliance by the mains cable or pull the cable to remove the plug from the socket.
3. **CAUTION:** Electric shock hazard. The external flexible cable, plug or the switch of this lamp cannot be replaced. If any of these parts are damaged, disconnect from mains power. The lamp should be destroyed.
4. If the lamp stops unexpectedly or appears to malfunction, unplug it from the mains and stop using it immediately. Seek professional advice to rectify the fault or make repairs.
5. Switch off the power supply or unplug from the mains socket when not in use, before cleaning or changing accessories.
6. Avoid positioning the lamp where the power cable might be accidentally trapped or damaged.
7. Keep the lamp and cable away from sources of heat, sharp objects or anything that may cause damage.
8. Ensure the lamp is switched OFF before connecting it to the mains power supply.
9. Be aware that some surfaces may become hot. Do not touch hot surfaces and supervise others accordingly.
10. This product has not been designed for use by children.
11. Children should be closely supervised at all times when they are near any electrical appliance.
12. To protect against electric shock, never allow the lamp, the mains cable or plug to come into contact with water or any other liquid.
13. Never reach for any appliance that has fallen into water. Switch off the power supply at the mains immediately and unplug.
Do not re-use until the product has been inspected and approved by a qualified electrician.
14. Always ensure that hands are dry before operating or adjusting any switch on the product or touching the plug and mains supply connections.
15. To disconnect, first ensure that all controls are in the OFF position, then remove the plug from the electricity supply.
16. Where relevant, keep all ventilation slots, filters, etc., uncovered and clear of debris. Never drop or insert objects into the openings.
17. Do not use outdoors. This lamp has been designed for domestic indoor use only.

ADDITIONAL SAFETY PRECAUTIONS FOR LIGHTING


1. Carefully read all instructions for the assembly and use of this product before connecting to an electricity supply.
2. Use only the recommended bulb rating, as detailed on the lamp holder and/or label.
3. Never use a bulb that is rated more than the recommended capacity.
4. Light bulbs become very hot in seconds. Do not attempt to touch the bulb while the lamp is lit, and supervise others accordingly
5. Before cleaning or replacing a defective bulb, switch off the lamp and unplug it from the mains socket. Allow the bulb to cool for at least 10 minutes before touching it and making the change.
6. Ensure the new bulb is secure in the holder before reconnecting to the power supply.
7. If in doubt, consult a qualified electrician.

Product Specification

- Rated Voltage: 220-240V ~ 50Hz
- Bulb requires: Max 25W E27 Edison Screw (Not Included)
7 – 9W LED recommended for medium brightness

INSTRUCTIONS FOR INSTALLATION

1. Caution: Assemble the lamp completely before connecting to the electricity supply.
2. Loosen the Socket Ring (C).
3. Remove the cover of the lamp shade before using.
4. Install the Lamp Shade (B) to the Lamp Holder (A) and lock the Socket Ring (C).
5. Install the bulb-Max 25W E27 (not included) into the lamp holder.
6. Check to ensure that all the components have been assembled correctly.
7. Connect to the mains supply.

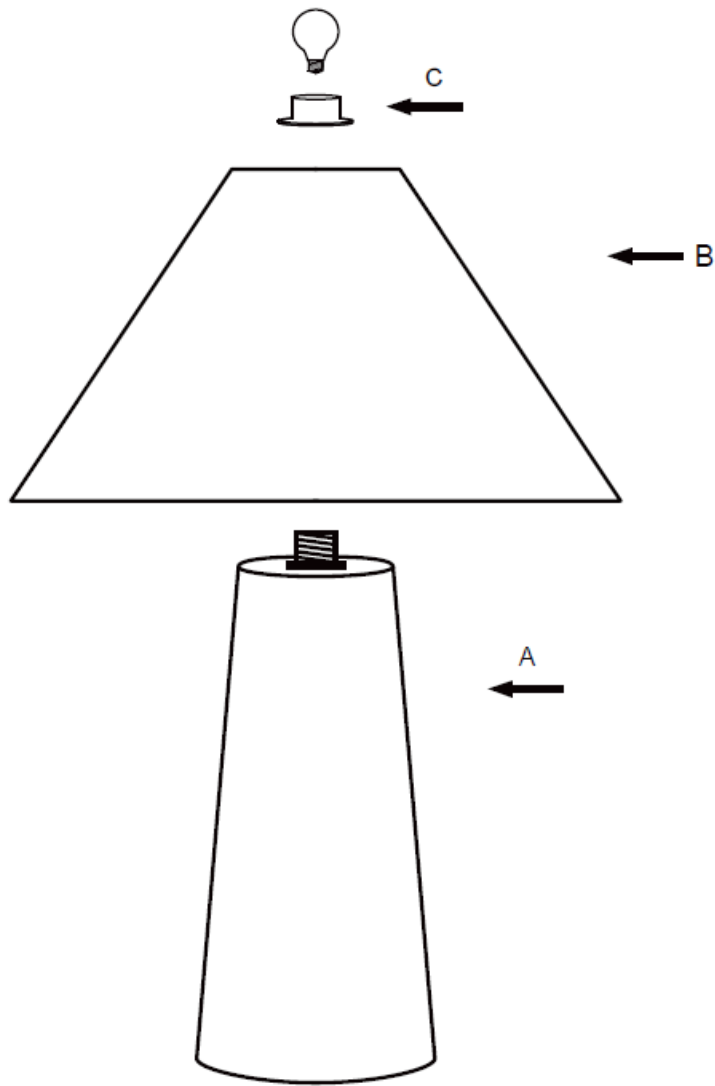

Warranty

12 Month Warranty

Thank you for your purchase.

- Your new product is warranted to be free from defects in materials and workmanship for the period stated above, from the date of purchase, provided that the product is used under accompanying recommendations or instructions where provided. This warranty is in addition to your rights under the Australian Consumer Law.
- For New Zealand customers, this warranty is in addition to statutory rights observed under New Zealand legislation.
- We will provide you with your choice of a refund, repair (where possible) or exchange (availability dependent) for this product if it becomes defective within the warranty period.
- The business will bear the reasonable expense of claiming the warranty.
- This warranty will no longer apply where the defect is a result of alteration, accident, misuse, abuse or neglect.
- Please retain your receipt as proof of purchase and contact our Customer Service
- Centre as listed below for the entity you purchased this product from, for any difficulties with your product.
- Warranty claims and claims for expenses incurred in returning this product can be addressed to the respective Customer Service Centre.
- Our goods come with guarantees that cannot be excluded under the Australian Consumer Law. You are entitled to a replacement or refund for a major failure and compensation for any other reasonably foreseeable loss or

damage.

- You are also entitled to have the goods repaired or replaced if the goods fail to be of acceptable quality and the failure does not amount to a major failure.



CONTACT

Contact for Kmart purchases

- Kmart Australia Ltd.
- C/Customer Service Centre 690 Springvale Road,
- Mulgrave Vic 3170
- Customer Service: 1800 124 125 (Australia) or 0800 945 995 (New Zealand) or via
- Customer Help at [kmart.com.au](https://www.kmart.com.au)

Contact for Target purchases

- Target Australia Pty Ltd
- C/Customer Service Centre
- 2 Kendall Street, Williams Landing, Vic, 3027
- Customer Service: 1300 753 567 or via Customer Help at [target.com.au/help/contact-us](https://www.target.com.au/help/contact-us)

FAQ

Q: What should I do if my lamp stops unexpectedly or malfunctions?

A: Unplug from the mains and stop using immediately. Seek assistance if needed.

Q: Can I use a bulb with a higher wattage than recommended?

A: No, never use a bulb that exceeds the recommended capacity to avoid damage.


Q: How should I clean or replace a defective bulb?

A: Switch off the lamp unplug from the mains, allow the bulb to cool for at least 10 minutes, then replace it ensuring it is securely in place before reconnecting to power.

Q: What should I do if any part of the lamp is damaged?

A: Disconnect from mains power and do not use the lamp. Contact a qualified electrician for inspection and approval before reusing.

Documents / Resources
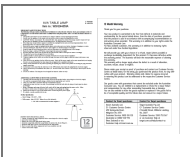
| | |
|---|---|
|  | <p>AVA WSN244059A Table Lamp [pdf] User Manual</p> <p>WSN244059A, WSN244059A Table Lamp, WSN244059A, Table Lamp, Lamp</p> |
|---|---|

References

- [User Manual](#)

[Manuals+](#), [Privacy Policy](#)

This website is an independent publication and is neither affiliated with nor endorsed by any of the trademark owners. The "Bluetooth®" word mark and logos are registered trademarks owned by Bluetooth SIG, Inc. The "Wi-Fi®" word mark and logos are registered trademarks owned by the Wi-Fi Alliance. Any use of these marks on this website does not imply any affiliation with or endorsement.