

avaTar AWS06F Single-Pole Smart Light Switch User Manual

avaTar AWS06F Single-Pole Smart Light Switch User Manual

Contents

[1 Product Introduction](#)

[2 Documents /
Resources](#)

Product Introduction

The lighting fixture controlled by the Wi-Fi in-wall Osmart switch must not exceed 800 watts. The smart switch is designed only for single-pole use and Neutral Wire required.

Indicator description

Red light:

the state of the room light is on

Blue light:

the room light is off (-)

Green light:

Wi-Fi distribution network indicator

Method of restoring factory state

Press and hold the smart switch button for 20 seconds until the smart switch indicator is blinking.

Remote pairing and deletion methods

One smart light switch can be paired with four remotes at most. One remote key can only control one smart light switch.

How to pair the remote with smart switch?:

Step 1: Press and hold the smart switch button for 5 seconds until the switch indicator change to blinking slowly

Step 2: Press and hold the remote key "A" or "B" until the smart switch indicator stop blinking, paired successfully.

How to delete the remote with smart switch?

Press and hold the remote key for 10 seconds until the smart switch indicator flashes rapidly for 2 seconds, release your finger, then the paired key is invaild now.

Smart Light Switch Installation


Tools you need

- Screwdriver
- Pliers
- Electrical Tester

Combined 2gang, 3 gang Switches

The side angle of the sheet metal can be disassembled. 2gang or 3gang switches can be seamlessly connected together, which fully conforms to the size of the home switch box.

Documents / Resources

	avaTar AWS06F Single-Pole Smart Light Switch [pdf] User Manual AWS06F Single-Pole Smart Light Switch, AWS06F, Single-Pole Smart Light Switch, Smart Light Switch, Light Switch, Switch
---	---