




AVCLINK HM-4K44S 4x4 Seamless UHD Matrix User Manual

[Home](#) » [AVCLINK](#) » AVCLINK HM-4K44S 4x4 Seamless UHD Matrix User Manual 

Contents

- 1 AVCLINK HM-4K44S 4x4 Seamless UHD Matrix
- 2 Introduction
 - 2.1 Key Features
- 3 Front Panel Control
- 4 Rear Panel
- 5 RS232/LAN Control
- 6 PC tool user guide
 - 6.1 CEC control page
- 7 Control via Web
- 8 Electrical parameters
- 9 Package Contents
- 10 Documents / Resources

AVCLINK

AVCLINK HM-4K44S 4x4 Seamless UHD Matrix



Product Information:

- High-performance seamless UHD matrix switcher with 4x HDMI inputs and 4x HDMI outputs
- Supports audio extract or insert

- IR matrix routing for video and audio
- Independent audio matrix
- Supports CEC manager and video wall processor
- Key Features:
 - Supports HDMI 2.0/HDCP 2.2
 - Supports seamless switching
 - Supports video wall
 - Supports CEC manager
 - Supports Rotation 180 degree
 - Supports audio matrix
 - Supports HDMI audio extract
 - Supports external LR audio insert on HDMI stream
 - Supports EDID management
 - HDMI video output resolution up to 3840×2160@60
 - Front panel, RS232, TCP/IP (LAN 10M/100M) control

Product Usage Instructions:

Front Panel Control:

- LCD Panel: Displays the current video selections
- COM LOCK: Power LED (also indicates control commands)
- OUTPUT: Output selection buttons 1~4
- INPUT: Input selection buttons 1~4
- ALL: Set all outputs to the next input selection
- RES: Set the output scaler resolution
- EDID: Set the EDID options for the next input selection
- NEXT: Select the next available option
- SAVE: Save the current matrix setting as a preset
- RECALL: Set the matrix setting from a saved preset
- CLEAR: Cancel the current command function
- ENTER: Set the displayed option

To switch input m to all the outputs, press buttons ALL + INPUT m + TAKE by sequence.

To save current routing/video wall scene as scene n, press button SAVE + OUTPUT n. The maximum available scene No. is 8.

To recall routing scene n as current routing, press button RECALL + OUTPUT n.

To change output resolution of OUTPUT n, press buttons RES + OUTPUT n + NEXT + TAKE.

Output Resolution Options:

Number	Output Resolution Setting
1	3840x2160p 60Hz
2	3840x2160p 50Hz
3	3840x2160p 30Hz
4	3840x2160p 25Hz
5	1920x1200 60Hz
6	1920x1080p 60Hz
7	1920x1080p 50Hz
8	1600x1200 60Hz
9	1440x1050 60Hz
10	1366x768 60Hz
11	1360x768 60Hz
12	1280x1024 60Hz
13	1280x768 60Hz
14	1280x720p 60Hz
15	1280x720p 50Hz
16	1024x768 60Hz

To change the EDID mode of port INPUT m, press buttons EDID + INPUT m + NEXT + TAKE.

EDID Options:

Number	EDID Mode
1	Manual
2	3840x2160 60Hz
3	3840x2160 30Hz
4	1920x1200 60Hz
5	1920x1080 60Hz
6	1280x1024 60Hz
7	1280x720p 60Hz
8	1024x768 60Hz

Please note that Manual EDID is loaded by PC Tool.

Rear Panel:

- IR IN/OUT: IR routing follows video matrix routing, no separate control required for IR matrix
- IR extender connectors (not included as accessories)
- Audio Input: 4 3-way Phoenix connectors to input external analog LR audio, user can select this audio to replace the corresponding embedded HDMI audio

AVCLINK HM-4K44S
4×4 Seamless UHD matrix
User manual

Warning

- Do not expose this device to Rain, Moisture, and Dripping
- Only use accessories specified by the manufacture
- Unplug this device during Lightning Storms
- Product specifications may be subject to technical upgrades without further notice


Introduction

is a high-performance seamless UHD matrix switcher with 4x HDMI inputs and 4x HDMI outputs. Audio extract or insert can also be enabled on this device. IR matrix routing on this video matrix is followed with video routing. has independent audio matrix, support CEC manager and strong video wall processor

Key Features

- Support HDMI 2.0/HDCP 2.2
- Support seamless switching
- Support video wall
- Support CEC manager
- Support Rotation 180 degree
- Support audio matrix Support HDMI audio extract
- Support external LR audio insert on HDMI stream
- Support EDID management HDMI video output resolution up to 3840×2160@60
- Front panel, RS232, TCP/IP (LAN 10M/100M) control

Front Panel Control

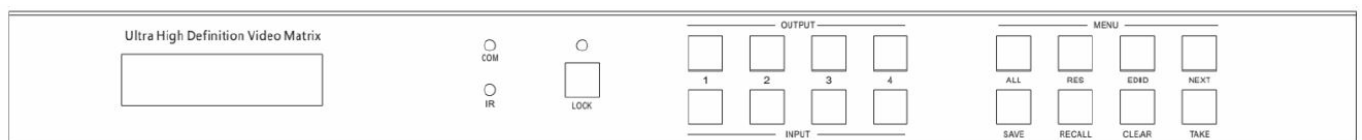

Item	Description
LCD Panel	Displays the current video selections
COM	Power LED (also indicates control commands)
LOCK	Front panel lock/unlock
OUTPUT	Output selection buttons 1~4
INPUT	Input selection buttons 1~4
ALL	Set all outputs to the next input selection
RES	Set the output scaler resolution
EDID	Set the EDID options for the next input selection
NEXT	Select the next available option
SAVE	Save the current matrix setting as a preset
RECALL	Set the matrix setting from a saved preset
CLEAR	Cancel the current command function
ENTER	Set the displayed option

- Press buttons ALL + INPUT m + TAKE by sequence, to switch input m to all the outputs
- Press button SAVE + OUTPUT n to save current routing/video wall scene as scene n. The maximum available scene No. is 8
- Press button RECALL + OUTPUT n to recall routing scene n as current routing
- Press button RES + OUTPUT n + NEXT + TAKE, to change output resolution of OUTPUT n Resolution options:

Number	Output Resolution Setting	Number	Output Resolution Setting
1	3840x2160p 60Hz	9	1440×1050 60Hz
2	3840x2160p 50Hz	10	1366×768 60Hz
3	3840x2160p 30Hz	11	1360×768 60Hz
4	3840x2160p 25Hz	12	1280×1024 60Hz
5	1920×1200 60Hz	13	1280×768 60Hz
6	1920x1080p 60Hz	14	1280x720p 60Hz
7	1920x1080p 50Hz	15	1280x720p 50Hz
8	1600×1200 60Hz	16	1024×768 60Hz

- Press buttons EDID + INPUT m + NEXT + TAKE, change the EDID mode of port INPUT m EDID options:

Number	Output Resolution Setting	Number	Output Resolution Setting
1	Manual	5	1920×1080 60Hz
2	3840×2160 60Hz	6	1280×1024 60Hz
3	3840×2160 30Hz	7	1280×720p 60H
4	1920×1200 60z	8	1024×768 60Hz

Manual EDID is loaded by PC Tool

- Front Lock button


The front panel control buttons can be locked to prevent accidental use or operation by unauthorized persons. Press the LOCK button for two seconds to lock or unlock the front panel. When the panel is locked, all buttons except the LOCK button will not function until the front panel is unlocked. The LOCKED/UNLOCKED state is shown on the LCD panel and by the LED above the LOCK button, which is lit when the front panel is fully LOCKED. When the unit is UNLOCKED, press and hold down the LOCK button for six seconds – The LCD panel will show the following (any exiting numbers indicates that those buttons are already locked):

Output: ——

Input: ——

Pressing any of the numbered Output or Input buttons will toggle the lock status of that button. The button will become locked when the respective button number is shown on the LCD panel. When all selections are done, press the ENTER button to set the new LOCK/UNLOCK states of those buttons. Whenever a locked Output or Input button is activated, the LCD panel will show that the button is locked. In this mode, the LOCK LED is not lit. To unlock those buttons, repeat the above steps to remove the button numbers from the LCD panel before pressing ENTER to accept the changes.

Rear Panel

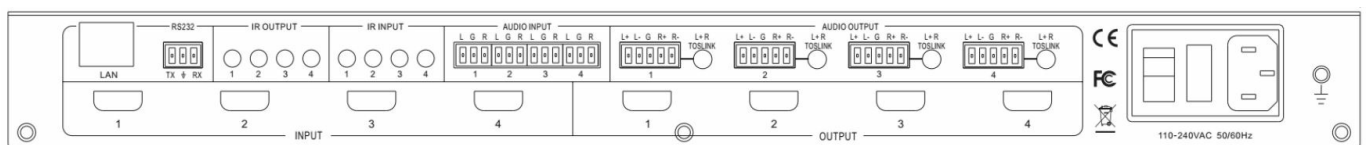

- LAN (10M/100M), RS232 are for PC control
- Analog Audio IN/OUT ports bind to corresponding HDMI ports.


For example: If HDMI 1 audio source is selected with External LR, then analog AUDIO IN LR1 (with phoenix connector) will be selected to replace the embedded audio of the HDMI input 1 data stream. If HDMI 1 audio source is selected with AUTO by PC TOOL or command, then will use the original embedded audio of input HDMI 1 as its audio data stream. If the input is DVI signal, no matter how it is set up, system will get external analog audio input. Analog AUDIO OUT n will always output the same audio content with HDMI OUTPUT n

Analog Audio IN/OUT connection

- IR IN and IR OUT

IR IN/OUT routing follows video matrix routing, no need to separately control IR matrix

IR extender connectors (not as accessories)

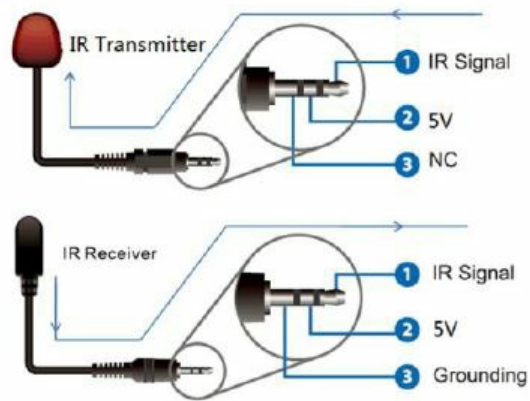


- Audio Input
4 3-way Phoenix connectors to input external analog LR audio, user can select this audio to replace the corresponding embedded HDMI audio
- Audio Output
4 5-way Phoenix connectors to output balanced LR audio, and 4 mini Toslink jackets to output analog LR audio and digital S/Pdif audio. The 4 Audio output (LR and Toslink) channels can be independent of video and switched by PC Tool or commands

RS232/LAN Control

RS232 connector

- RS-232 control, baud rate 9600, 3-PIN Phoenix connector

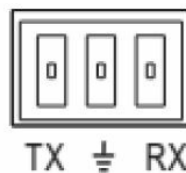

TX Pin, Matrix--->PC
RX Pin, Matrix<---PC

Ethernet control and connection

Note Factory default network setting

The screenshot shows a network configuration window with the following settings:

IP Type	Static IP
Static IP	192 . 168 . 0 . 247
Subnet Mask	255 . 255 . 255 . 0
Gateway	192 . 168 . 0 . 1


PC tool user guide

Account's authentication

When you run the PC tool, there needs password to authenticate. Default password of Administrator access to all features 111111 Default password of User access to all features, except OSD function 000000


Connect with PC tool

1. The default PC tool's UI style as bellow

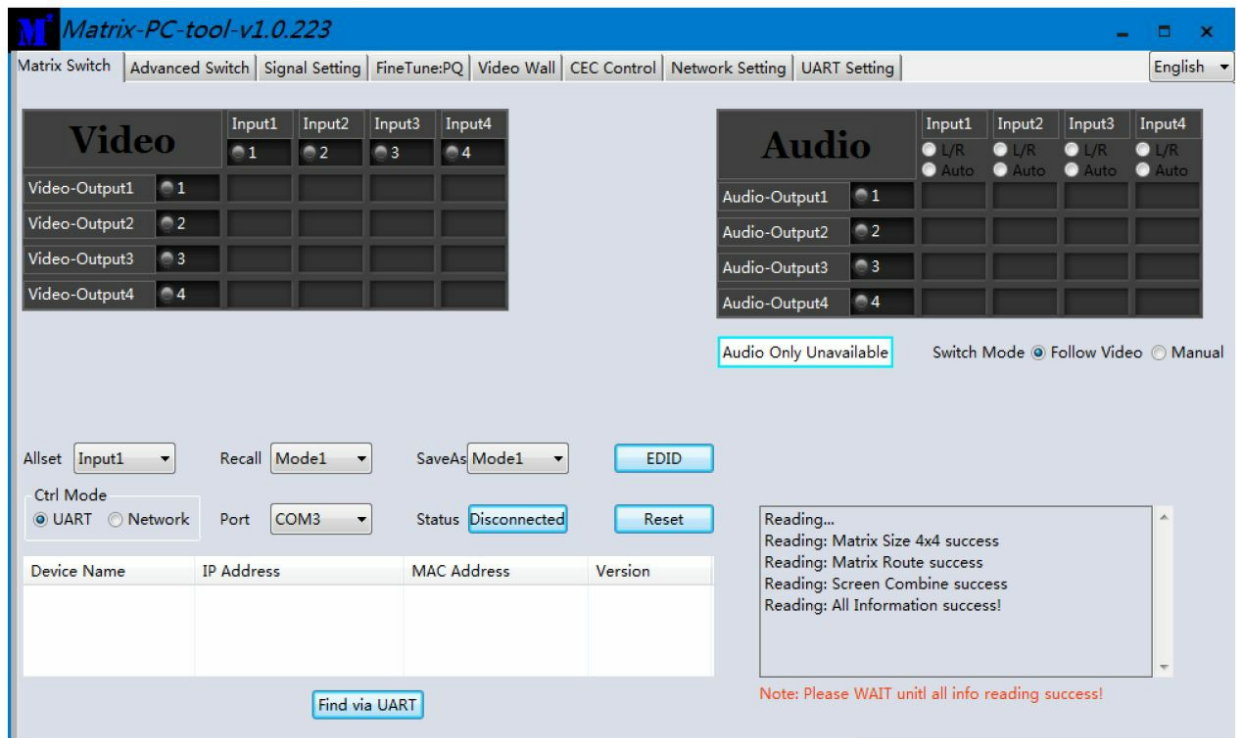


2. User can select UART (with RS232 cable) or Network to connect, baud rate is 9600 bps
3. Default IP address, 192.168.0.247

Matrix Switch tab

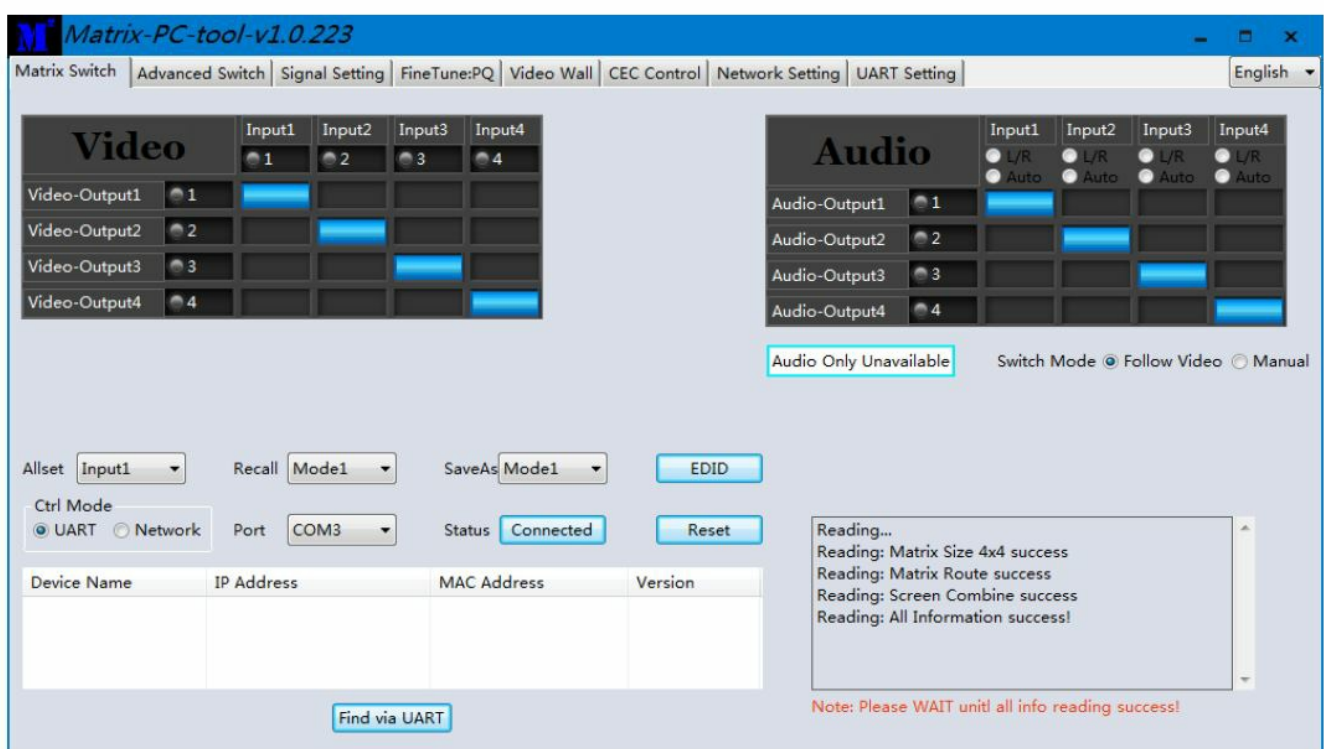

1. There is a shortcut button to switch one input port to all output ports, that is Allset, For example, switch input 1 to all outputs, user can select.

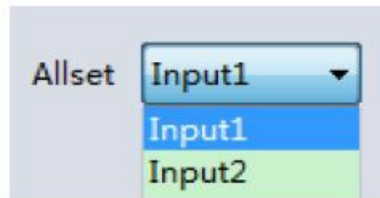

2. Recall mode: Recall an inputs/outputs routing scene which already be saved before. The device supports maximum 8 scenes.
3. Save mode: Save current inputs /outputs routing in one index. Maximum 8 modes supported. Note: Save/Recall button here works the same with front panel save/recall control and also the same with Save/Load function on video wall page
4. System reset: The PC tool support reset system to recover to factory configuration.
5. Audio Switch mode: Follow Video mode or Manual mode
When select Manual mode, user can separately switch L/R (Phoenix interface) and Toslink output. User also can select to use HDMI embedded or corresponding external LR audio
6. EDID Control: Click the 'EDID' button on Matrix Switch page, then opens a EDID control window, then user can do follow activity
 - Read EDID of one output port
 - Open one existing EDID file
 - Write EDID to one input port

Signal setting tab

 A screenshot of the 'Signal Setting' tab in a software interface. The tab is part of a larger window with other tabs like 'Matrix Switch', 'Advanced Switch', 'FineTune', 'TV Wall', and 'Network Setting'. The 'Signal Setting' tab is active and shows a table with four rows, each representing an input/output channel. The table has columns for 'Label', 'Input Type', 'Input Format', 'Audio Select', 'Output Type', and 'Output Format'. Each row has a 'Read' button next to the 'Output Format' column.

Label	Input Type	Input Format	Audio Select	Output Type	Output Format	
1	UHD-HDMI	No Signal	Auto	UHD-HDMI	4K2Kp30	Read
2	UHD-HDMI	No Signal	Auto	UHD-HDMI	4K2Kp30	Read
3	UHD-HDMI	No Signal	Auto	UHD-HDMI	4K2Kp30	Read
4	UHD-HDMI	No Signal	Auto	UHD-HDMI	4K2Kp30	Read

1. Audio Select: There are two options for input Audio Select
 1. Auto: If the input source is HDMI signal, system will get the embedded audio, and if the input source is DVI signal, the system will get the corresponding analog audio
 2. External: System will get the corresponding analog audio
2. Output type
There are four options for input Output Type:
 - A. UHD-HDMI (HDCP OFF): HDCP Off
 - B. UHD-DVI
 - C. UHD-HDCP-1.4,
 - D. UHD-HDCP-2.2


- E.

3. Output Resolution: Same to the description on Front Panel page


Fine Tune tab

User can read and set the brightness/contrast/saturation/sharpness of each output.
If none special occasions, do not change the default settings

Video Wall tab

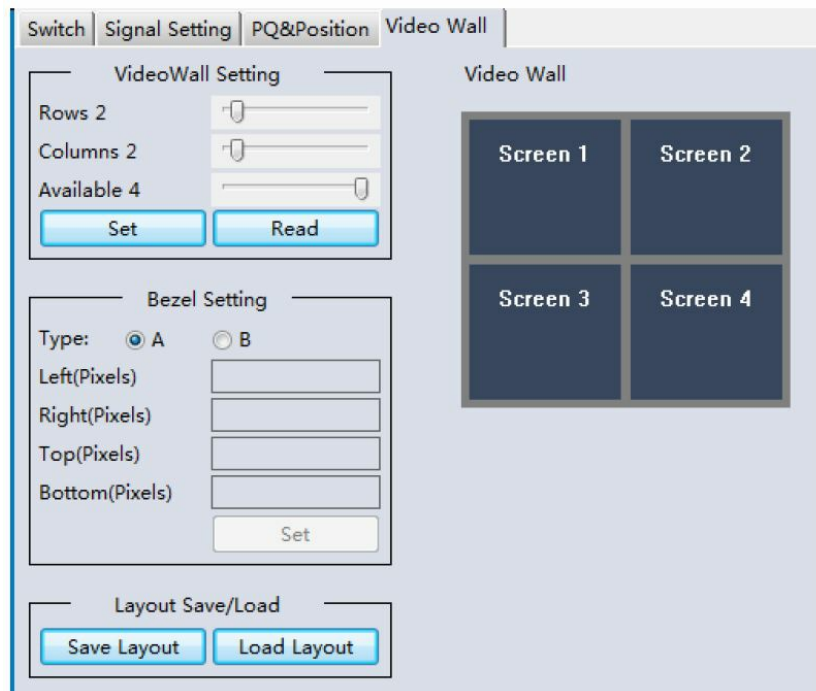



1. Use the Video Wall Setting controls to change how the displays are arranged on the Video Wall tab:
 - a. Adjust the Rows and Columns sliders to change the displayed screen arrangement to permit proper Drag-and-Select of the desired screens for the video wall.
 - b. Change the Available slider to set how many outputs will be used for the Video Wall.
 - c. Click the Set button to change the Screen configuration on the Video Wall tab.
2. Use the left mouse button to drag-select the screens that will be set for video wall mode. The selected screens will be shown as bright blue.
3. Use the right mouse button to open a menu. 4. Select Screen Stitching from the menu to program the video wall mode. The selected screens will now be shown as bright green.
4. To change the displayed image: either use the methods detailed in the section ! ., or right-click to open the pop-up menu and select the desired input from the Input Select menu option.
5. Repeating steps 2 to 5 above with a different set of outputs allows the creation of a second video wall. However, changing the Rows, Columns and Available sliders will automatically delete the current video wall set up when the Set button is clicked. The following example shows a more unusual video wall setup of two video walls with two 2×1 configurations:

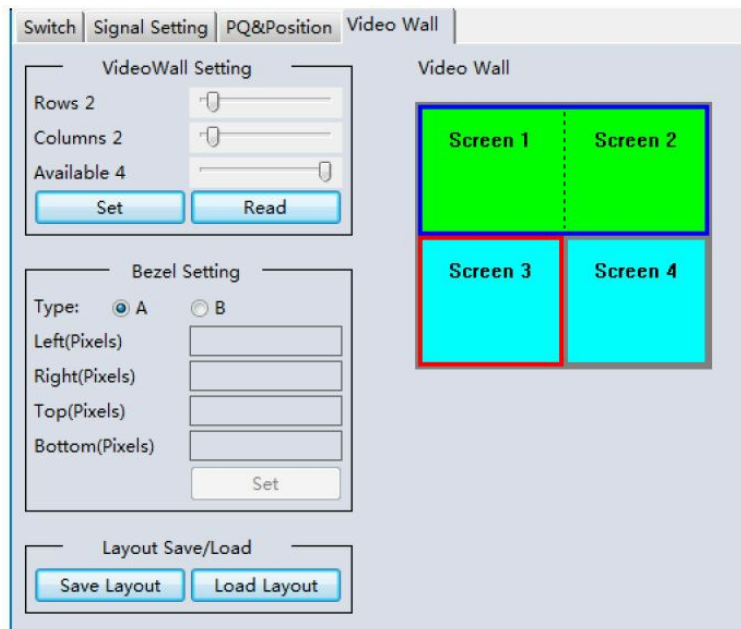

Video Wall Context Menu

Right clicking on any of the screen icons will display the following context menu:

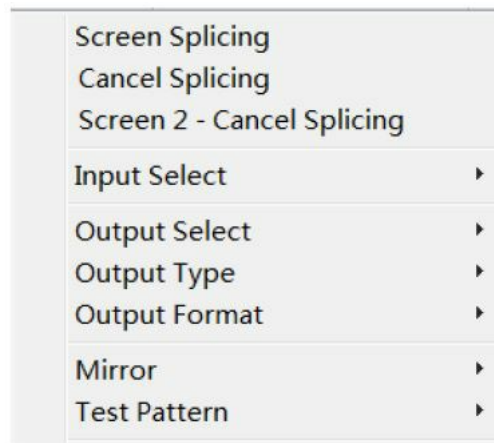

Screen Stitching	This option connects the selected screens into a video wall configuration.
Cancel Stitching	Return the Video Wall configuration to normal outputs.
Screen x – Cancel S titching	<p>Removes the single screen x from the video wall to allow the displaying another full fra me image within the video wall configuration, as shown in this example:</p>  <p>Video Wall display with bezel compensation and different full frame image on display 3</p>
Input Select	<p>Use the sub-menu to select the input to display on the video wall or the secondary input image shown in the above example.</p>

Output Select	This option is only available for any screen that is not assigned to a video wall mode.
Output Type	<p>This option is only available for any screen that is not assigned to a video wall mode. It allows setting of the selected screen output mode as described in the Ошибка! Источ ник ссылки не найден. section on page.</p>
Output Format	<p>This option is only available for any screen that is not assigned to a video wall mode. It allows setting of the output resolution for the selected screen output.</p>
Mirror	<p>Two sub options: OFF (default), ON (H+V Mirror)</p> <p>When select ON, you can make 180° rotation with the selected screen</p>
Test Pattern	When enable Test Pattern, the output will display Color Bar pattern

Screen Stitching Cancel Stitching

This option connects the selected screens into a video wall configuration. Return the Video Wall configuration to normal outputs. Removes the single screen x from the video wall to allow the displaying another full frame image within the video wall configuration, as shown in this example:

- Bezel Setting

The Bezel Setting section allows the entry of values to compensate for the display bezel thickness. These values may be entered either as pixels (Type A) or as milli meter (Type B).

- Type A Bezel Settings

The image size will be adjusted to allow for the number of pixels entered in each of the entry boxes. Click the Set button view the effect of the new values.

- Type B Bezel Settings

The image size will be adjusted to allow for the Inner and Outer display dimensions as entered in each of the entry boxes. Click the Set button view the effect of the new values.

- Bezel Compensation

The following images demonstrate the effect of not having bezel compensation and what a correctly configured bezel compensation settings should produce:




No Bezel Compensation

Correct Bezel Compensation

Layout Save/Load

The Save Scene/Layout and Load Scene/Layout buttons allow a video wall configuration to be saved or recalled at any time. Up to 8 configurations, each with their own name can be saved or recalled. When saving, each Scene can optionally be given a name to identify that video wall scene setup.


CEC control page

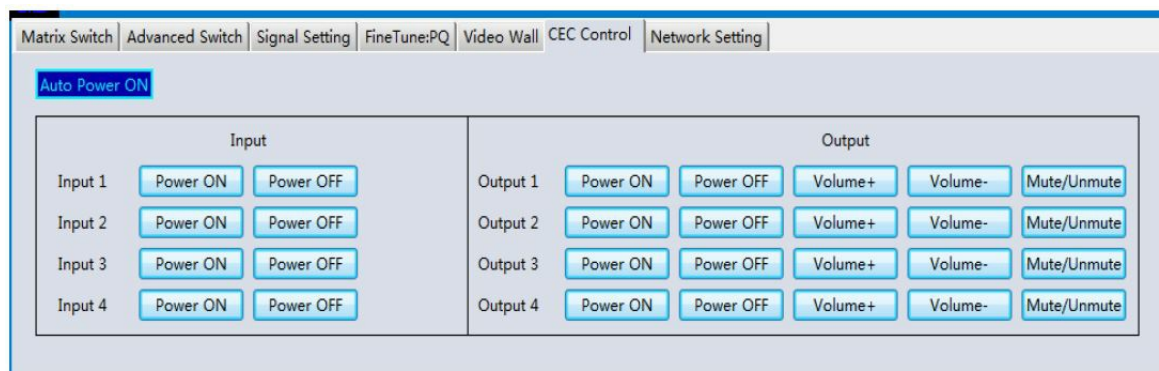

When Auto Power On is enabled, every time when turned on, it will turn on all the sources and displayers which connected to it and support CEC function CEC function include Power on/off, Volume+/-, Mute/Unmute

Control via Web

The built-in WebGUI interface provides only basic control of the matrix switcher and access to the network settings. The following will be displayed when the web interface is access each time:

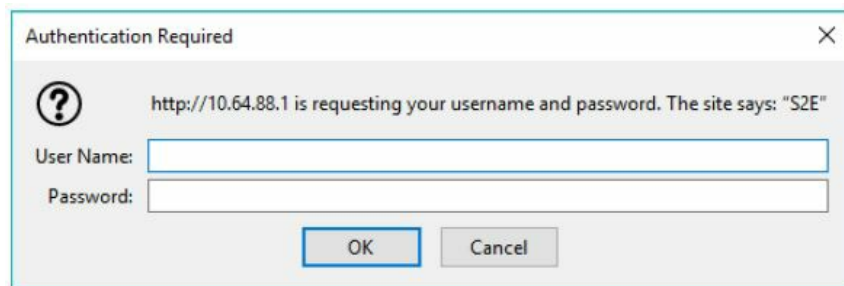

Authentication Required

http://10.64.88.1 is requesting your username and password. The site says: "S2E"


User Name:

Password:

OK Cancel

- The default User Name is: admin
- The default Password is: admin

After entering the User Name and Password a screen similar to the following will be displayed:

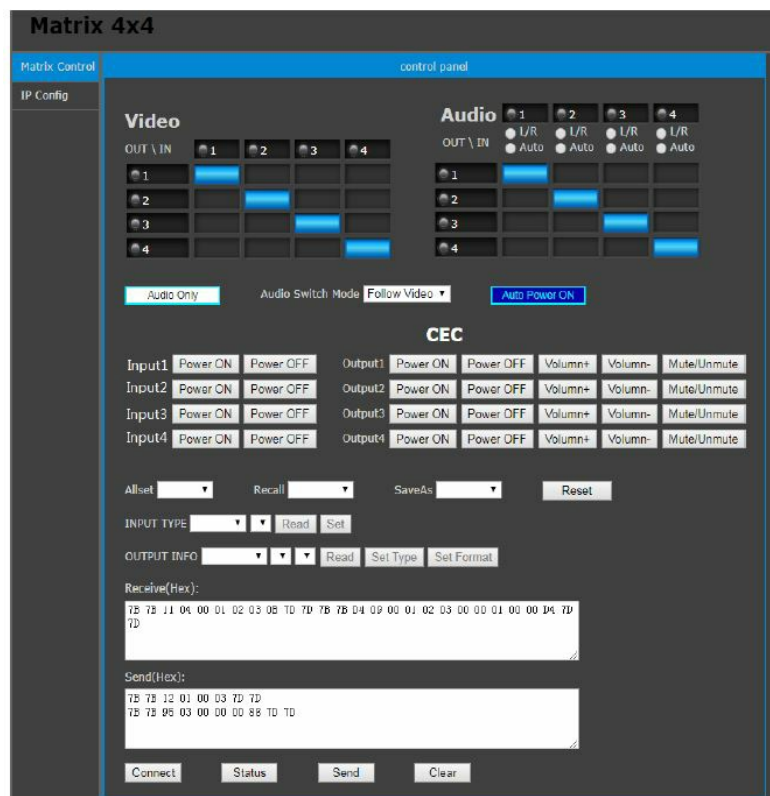

Matrix 4x4

Matrix Control control panel

IP Config

Video

OUT \ IN 1 2 3 4

1 2 3 4

Audio

OUT \ IN 1 2 3 4

1 2 3 4

Audio Only Audio Switch Mode Follow Video Auto Power ON

CEC

Input1 Power ON Power OFF Output1 Power ON Power OFF Volume+ Volume- Mute/Unmute

Input2 Power ON Power OFF Output2 Power ON Power OFF Volume+ Volume- Mute/Unmute

Input3 Power ON Power OFF Output3 Power ON Power OFF Volume+ Volume- Mute/Unmute

Input4 Power ON Power OFF Output4 Power ON Power OFF Volume+ Volume- Mute/Unmute

Allset Recall SaveAs Reset

INPUT TYPE Read Set

OUTPUT INFO Read Set Type Set Format

Receive(Hex):

75 75 11 04 00 01 02 03 05 7D 7D 75 75 04 09 00 01 02 03 00 00 01 00 04 7D 7D


Send(Hex):

75 75 12 01 00 03 7D 7D

75 75 05 03 00 00 00 88 7D 7D

Connect Status Send Clear

IP Config

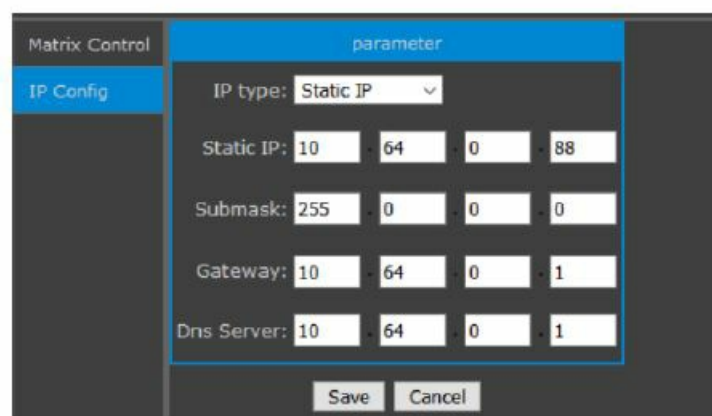

Matrix Control parameter

IP Config

IP type: Static IP

Static IP: 10 64 0 88

Submask: 255 0 0 0

Gateway: 10 64 0 1

Dns Server: 10 64 0 1

Save Cancel

The IP Config tab is used to change the IP settings of the matrix switcher. Enter any necessary changes and click Save to program the switcher to the new settings, or Cancel to reject the changes.


Electrical parameters

Electrical parameter	
Interface	HDMI-A
HDMI Version	HDMI2.0, HDCP2.2
Bandwidth	18Gbps
HDMI Amplitude	T.M.D.S +/- 0.4Vpp
Differential impedance	100±15ohm
RS232/Ethernet control	
Baud rate and protocol	Baud rate 9600, data bit 8 stop bit 1, no parity checking
Ethernet	IE10.0 + HTML5
Power	
Max Consumption	60W, 110-240VAC
Matrix Mechanical dimensions	
Size(mm)	430(L)X220(W)X44 (H)
Weight	5Kg
Operating temperature	0 to 40°C
Storage temperature	-20 to 70°C
Permissible humidity	10%-50%

Package Contents

Item	Quantity
unit	1
User Manual	1
AC Power Cord	1

Documents / Resources

	<p>AVCLINK HM-4K44S 4x4 Seamless UHD Matrix [pdf] User Manual</p> <p>HM-4K44S 4x4 Seamless UHD Matrix, HM-4K44S, 4x4 Seamless UHD Matrix, Seamless UHD Matrix, UHD Matrix</p>
---	---

