



 
AVIATOR Dual-Output / Multi-Spectrum LED Flashlight User Manual

[Home](#) » [AVIATOR](#) » AVIATOR Dual-Output / Multi-Spectrum LED Flashlight User Manual 

AVIATOR[®]

DUAL-OUTPUT / MULTI-SPECTRUM
LED FLASHLIGHT
AVIATOR-RD
AVIATOR-YG

available at BrightGuy.com

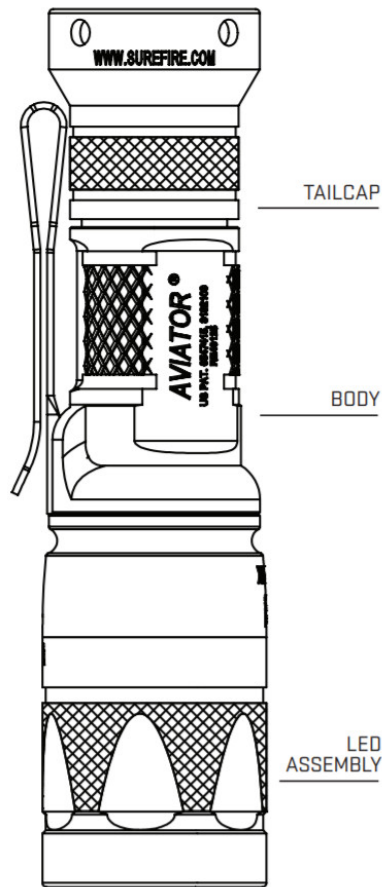

USER MANUAL

 
Contents

- [1 LOCKOUT TAIL CAP](#)
- [2 LIGHT OPERATION](#)
- [3 BATTERY REPLACEMENT](#)
- [4 MAINTENANCE](#)
- [5 ACCESSORIES](#)
- [6 THE SUREFIRE NO-HASSLE GUARANTEE](#)
- [7 STANDARD DISCLAIMER](#)
- [8 WARRANTY CLAIMS](#)
- [9 Documents / Resources](#)
- [10 Related Posts](#)

LOCKOUT TAIL CAP

The Aviator features a lockout tailcap, which prevents accidental activation during storage or transport. The tail cap may need to be enabled prior to light operation.

To enable, rotate tailcap clockwise until light activates when tail cap pushbutton is pressed, providing momentary-on light output.

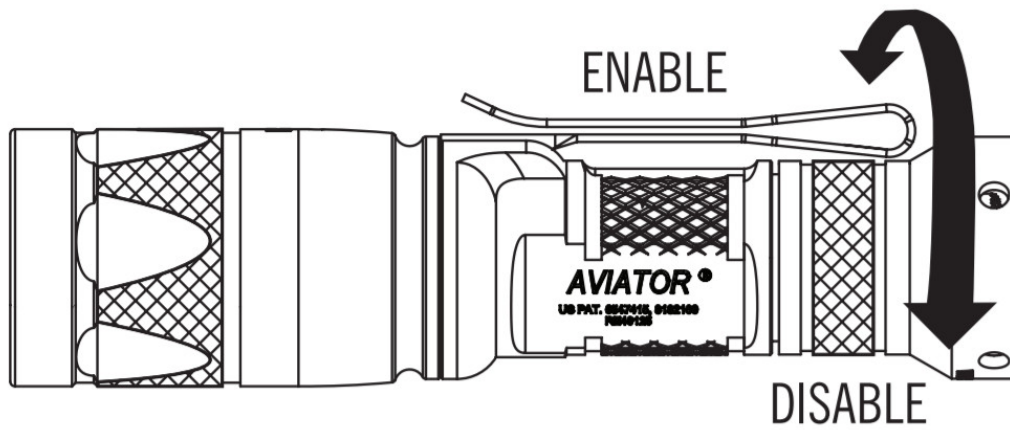

To lock out tail cap, rotate counterclockwise until the light will not activate when the pushbutton is depressed.

LIGHT OPERATION

NOTE: Unit is shipped in the “OFF” position to prevent activation of the light.

1. To select a white (WH) light LED, rotate a knurled portion of the bezel clockwise (with the bezel pointed away from you) until the indicator dot aligns with WH and the head clicks into position (Fig. 1).
2. To select a colored LED, rotate a knurled portion of the bezel counterclockwise (with bezel pointed away from you) until the indicator dot aligns with the color engraving and the head clicks into position (Fig. 2).

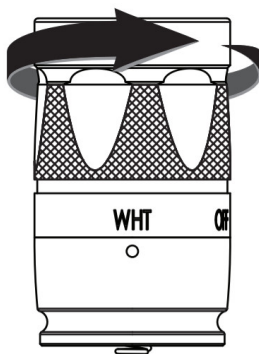 


FIGURE 1

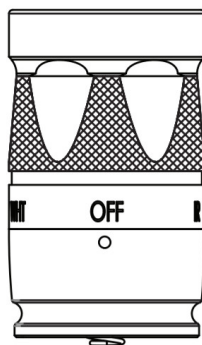 


FIGURE 2

Light Activation

 
 
Press or click the pushbutton tail-cap switch once for low output. Return to off and press or click on again, within two seconds, for high output.

BATTERY REPLACEMENT



WARNING

The use of substandard batteries can cause injury or property damage. Visit www.surefire.com/batterysafety. Most SureFire illumination tools ship preloaded with batteries. To load or replace batteries:

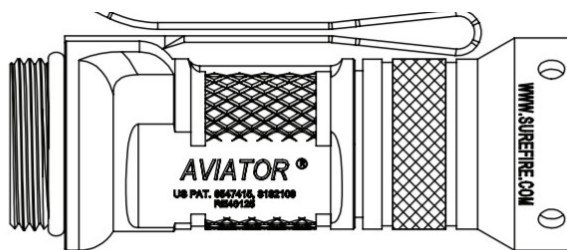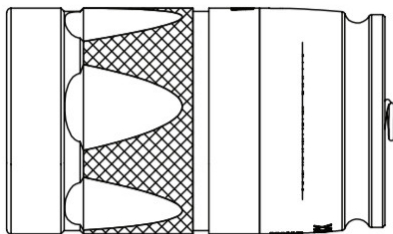

1. Unscrew head and remove.
2. Remove old batteries and dispose of them properly.
3. Insert the new battery with positive (+) terminals oriented forward.
4. Replace the head and screw on until hand tight.



BATTERY INFORMATION & WARNING

Before replacing batteries, read the enclosed BATTERY INFORMATION/ WARNING insert in your original packaging. For additional battery safety, handling, and product information, visit www.surefire.com/batteries.

MAINTENANCE

Use a clean, dry cloth to wipe off the body and window. Periodically clean and lubricate threads. Apply a thin coat of non-migrating, silicon-based lubricant to O-rings (do not use petroleum-based lubricants which can harm O-rings). For additional tips on maintaining your SureFire illumination tool, visit www.surefire.com/faqs-maintenance.

ACCESSORIES

SureFire makes a full line of accessories for most of its illumination tools.

For a complete listing, visit www.surefire.com/parts-accessories

AVIATOR SPECIFICATIONS		
LED COLOR	OUTPUT (lumens)	RUNTIME (hours
WHITE	High: 250 Low: 5	High: 1.5 Low: 20.5
RED (635 nm)	High: 39 (240 mW) Low: 1 (1.3 mW)	High: 3 Low: 57
YELLOW GREEN (568nm)	High: 39 (85 mW) Low: 3 (7 mW)	High: 12 Low: 58
PEAK BEAM INTENSITY	9,300 candela (white LED only)	
DISTANCE	190 meters (white LED only)	
CONSTRUCTION	Aluminum	
FINISH	Hard-Anodized (MIL-A-8625 Type III, Class 2)	
WEIGHT (w/batteries)	3.1 oz (88 g)	
LENGTH	4.18 in (10.6 cm)	
BEZEL DIAMETER	1.06 in (2.7 cm)	
BATTERIES	One 123A lithium (incl.)	
SWITCHING	Click tailcap	

THE SUREFIRE NO-HASSLE GUARANTEE

We'll do what it takes to keep your SureFire gear running smoothly. SureFire warrants that if you — our customer — purchase one of our products, and we determine that it is defective in material and/or workmanship during your lifetime, we will repair or replace it — no hassle!

Our warranty does not cover consumables or normal wear-and-tear — things like batteries draining, headbands and headbands wearing out, ink cartridges running out, and switches wearing out — or damage resulting from abuse, alterations, unauthorized repairs, or use contrary to SureFire's user manuals.

Should you need a replacement product, SureFire reserves the right to replace an obsolete product with current production, like model. In the event that any issue with a SureFire product is not covered under this warranty, SureFire can arrange to have the product repaired for a reasonable fee.

STANDARD DISCLAIMER

Except as specified above or prohibited by applicable law: all express or implied conditions and warranties, including, without limitation, any implied warranty or condition of merchantability or fitness for a particular purpose, or accuracy of any informational content, are hereby excluded and disclaimed by SureFire; and in no event will SureFire be liable for any special, direct, indirect, consequential, incidental or punitive damages howsoever arising and regardless of the theory of liability, even if advised of the possibility of such damages. Products, prices, availability, specifications, and offers are subject to change or cancellation at any time without notice.

WARRANTY CLAIMS

For claims, contact Customer Service at 714-545-9444 to obtain a Return Merchandise Authorization number (RMA#). Then package the unit carefully and send to (no CODs):

SureFire, LLC.
Repairs Department, RMA# _____
17680 Newhope Street, Suite B
Fountain Valley, CA 92708

SureFire will pay any reasonable shipping costs to return the unit to you.




Revision E 1-2021
71-01-1010
AVIATOR-RD AVIATOR-YG
18300 MT. BALDY CIRCLE
FOUNTAIN VALLEY, CA 92708-6122

SUREFIRE.COM

Patents: RE40125, 8,182,109



Documents / Resources

	AVIATOR Dual-Output / Multi-Spectrum LED Flashlight [pdf] User Manual AVIATOR, Dual-Output, Multi-Spectrum, LED, Flashlight, AVIATOR-RD, AVIATOR-YG
---	--