



## avide 24 Rgb Party String Instruction Manual

[Home](#) » [Avide](#) » avide 24 Rgb Party String Instruction Manual 



### Contents

- [1 Safety instructions](#)
- [2 IR Wireless Remote:](#)
- [3 Documents / Resources](#)
  - [3.1 References](#)
- [4 Related Posts](#)

### Safety instructions

Before using the string, read the instruction / safety manual carefully and keep it for future reference.

Risk of electric shock and overheating!

Improper use of the light string may result in electric shock or fire.

1. Place and insert the string at the required place.
2. Check that the network voltage corresponds to the the power adapter' input voltage.
3. Connect the string to a well accessible socket so that you can immediately disconnect it from the network in the

event of a problem.

4. Do not operate the string while it is still in the packaging.
5. Do not operate the string while it is still rolled up.
6. Be careful not to damage the insulation.
7. Use the light string only with the included AC adapter.
8. Do not operate the string with an external dimmer.
9. Do not operate the light string if it is damaged or if the power cord or adapter is defective.
10. If the string's cable is damaged, it must be replaced by the manufacturer or a professional in order to avoid a hazard.

Improper use of the light string can result in injury or short circuit. Never immerse the product in water or any other liquid!

Linkability: With the help of the waterproof connector at the end of the string of lights, the product can be classified, can be connected with a maximum of 3 units. Loosen the waterproof connector at the end of the string, then remove the AC adapter from the string you want to connect , by loosening the connector in front of it. After this, you can connect the strings. Tighten the connector firmly to keep the product waterproof.

Clean the string at regular intervals with a detergent-free (dry) cloth.



Waste equipment must not be collected separately or disposed of with household waste because it may contain components hazardous to the environment or health. Used or waste equipment may be dropped off free of charge at the point of sale, or at any distributor which sells equipment of identical nature and function. Dispose of product at a facility specializing in the collection of electronic waste. By doing so, you will protect the environment as well as the health of others and yourself. If you have any questions, contact the local waste management organization. We shall undertake the tasks pertinent to the manufacturer as prescribed in the relevant regulations and shall bear any associated costs arising.


## **Function Description of IR Wireless Remote Controller (32 Keys)**

### **IR Wireless Remote:**



Number of buttons	Function	Function description
1	OFF:	Turn on the lights (start with the last setting before OFF)
2	ON:	Turn off the lights and also the timer.
3	AUTO:	Run automatically from JUMP, FADE, IN WAVE, STROBE, TWINKLE, ASYN JUMP, to ASYN FADE.
4	SPEED:	Four adjustable speeds for dynamic mode "AUTO, FADE, JUMP, ASYN FADE, or ASYN JUMP, In WAVES, STROBE, and TWINKLE", from slow to faster per click circularly (1-2-3-4-1). The default speed is the third speed once turn on the lights. There are 16 single colors. 1 multi-color and 1 triple-color select, by pressing color representing keys.
6-May	Multicolor	<ul style="list-style-type: none"> <li>– Multicolor steady on</li> <li>– Red white blue steady on</li> </ul> (To Switch the color mode, press this button again)
7	FADE:	Lights fade in synchronous mode.
8	JUMP:	Lights jump in synchronous mode.
9	ASYN FADE:	Lights fade in asynchronous mode.
10	ASYN JUMP:	Lights jump in asynchronous mode.
11	IN WAVES:	Lights change from dim to bright, then from brights to dim.
12	STROBE:	Strobe light flash on one or two background colors, press key change.
13	TWINKLE:	Two or three colors flash, press key to change.
14	Color	16 colors
15	Timer	4H: Lights for work for 4 hours, then off for 20 hours. 6H: Lights for work for 6 hours, then off for 18 hours. 8H: Lights for work for 8 hours, then off for 16 hours. 24H: Lights for work for all day long. The light will flash white one when timer key pressed.

#### IR Remote:

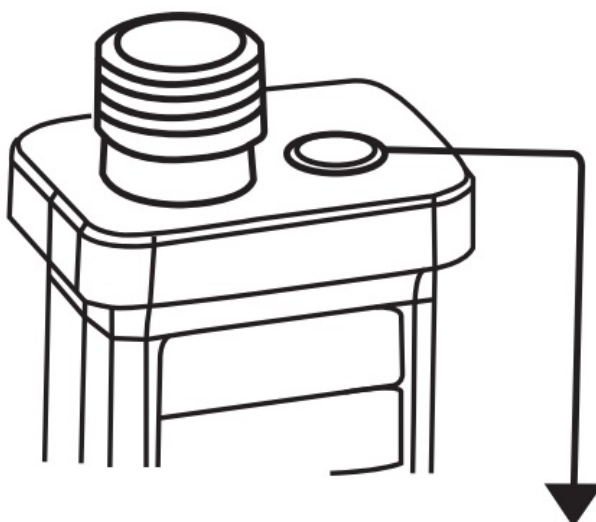

1. Control Button: Press button to change between 25 different modes
2. To set and reset timer press button for 3 seconds Green light ON means timer is ON (default 6H in ON/18H OFF)

#### IR Remote Modes:

1. Auto • 2. RED • 3. Green • 4. Blue • 5. White • 6-18. Multi-mode • 19. Fade • 20. Jump • 21. ASYN FADE • 22. In WAVE • 23. Strobe • 24. TWINKLE • 25. ASYN JUMP

**Timer:** 4H-4H ON/20H OFF • 6H-6H ON/18H OFF • 8H-8H ON/16H OFF • 24H-24H ON

For technical or warranty support, please contact the authorised representative:

**Bramcke GmbH**  
**52353 Düren**  
**An Gut Nazareth 18A**  
**Germany**

[www.bramcke.de](http://www.bramcke.de)



---

## Documents / Resources

	<p><a href="#">avide 24 Rgb Party String</a> [pdf] Instruction Manual</p> <p>24 Rgb Party String, 24, Rgb Party String, Party String, String</p>
--	--------------------------------------------------------------------------------------------------------------------------------------------------

## References

- [B Bramcke](#)
- [User Manual](#)

[Manuals+](#), [Privacy Policy](#)

This website is an independent publication and is neither affiliated with nor endorsed by any of the trademark owners. The "Bluetooth®" word mark and logos are registered trademarks owned by Bluetooth SIG, Inc. The "Wi-Fi®" word mark and logos are registered trademarks owned by the Wi-Fi Alliance. Any use of these marks on this website does not imply any affiliation with or endorsement.