



AVM 7590AX fritzbox Support mesh wifi User Guide

[Home](#) » [AVM](#) » AVM 7590AX fritzbox Support mesh wifi User Guide 



 
**FRITZ!Box
7590 AX
Quick Start Guide**



Contents

- [1 Package Contents](#)
- [2 Safety Instructions](#)
- [3 Frequencies](#)
- [4 Documents / Resources](#)
 - [4.1 References](#)
- [5 Related Posts](#)

Package Contents

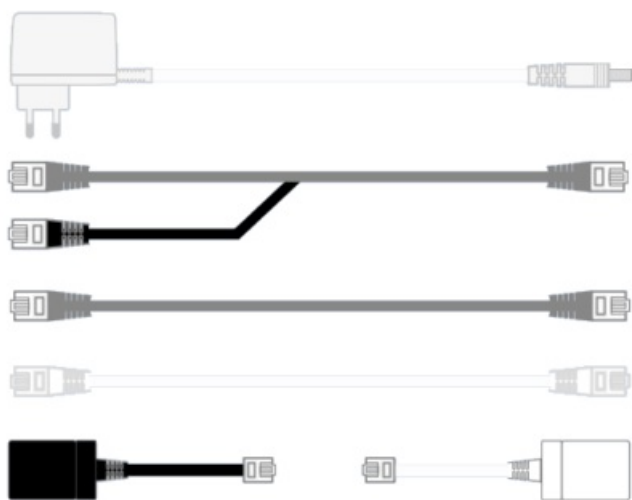


Safety Instructions

- Do not operate the FRITZ! Box during an electrical storm.
- The ventilation slits of the FRITZ! Box must never be obstructed.
- Do not place the FRITZ! Box on overly heat-sensitive surfaces.
- Connect the FRITZ! Box to an easily accessible outlet.
- The FRITZ! The box is intended only for indoor operation.

See also the security instructions in your FRITZ! Box manual.

 Connect to Electrical Power

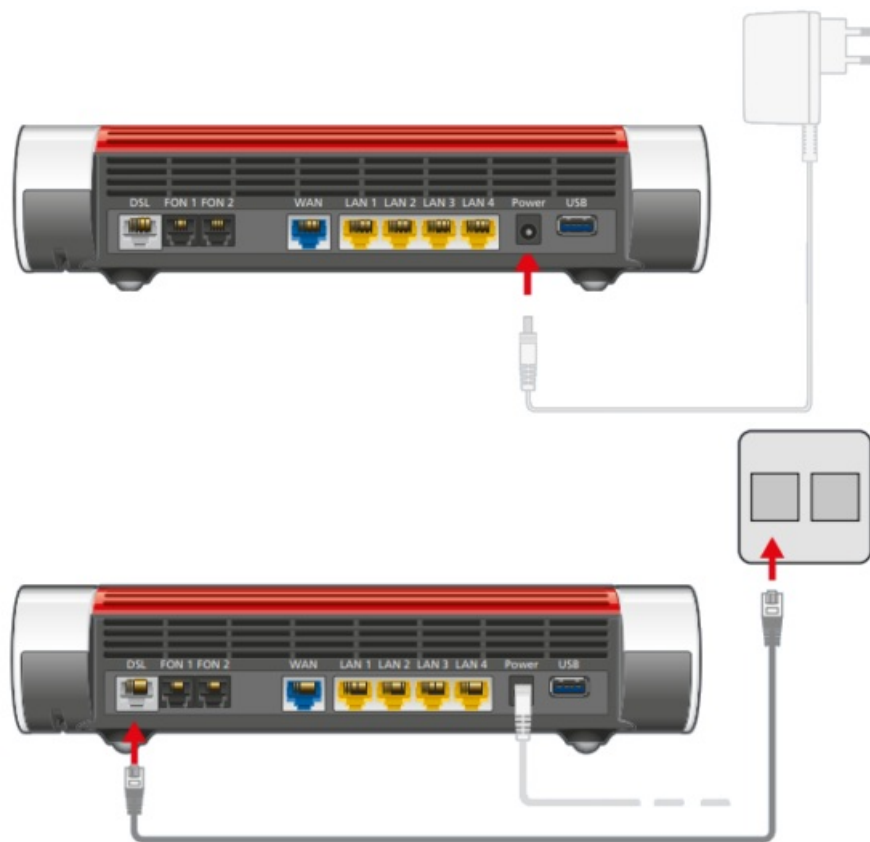

Einstellungen ab Werk

Settings upon Delivery

Wi-Fi network (SSID)
FRITZ!Box 7590 AF

Wi-Fi password (WPA2)

3779 8981 1562 8981 0123

FRITZ!Box password
zigzag5481



Einstellungen ab Werk

Settings upon Delivery



Wi-Fi network (SSID)
FRITZ!Box 7590 AF



Wi-Fi password (WPA2)
3779 | 8981 | 1562 | 8981 | 0123

FRITZ!Box password
zigzag5481

Establish Wi-Fi Connection (Computer)

1. Click on the Wi-Fi icon on your computer screen.



or



in the taskbar on Windows computers.



 
or



in the menu bar on Apple computers.

2. Select the Wi-Fi network of your FRITZ! Box, and use the Wi-Fi network key to establish a Wi-Fi connection.

Connecting to the Computer (LAN)

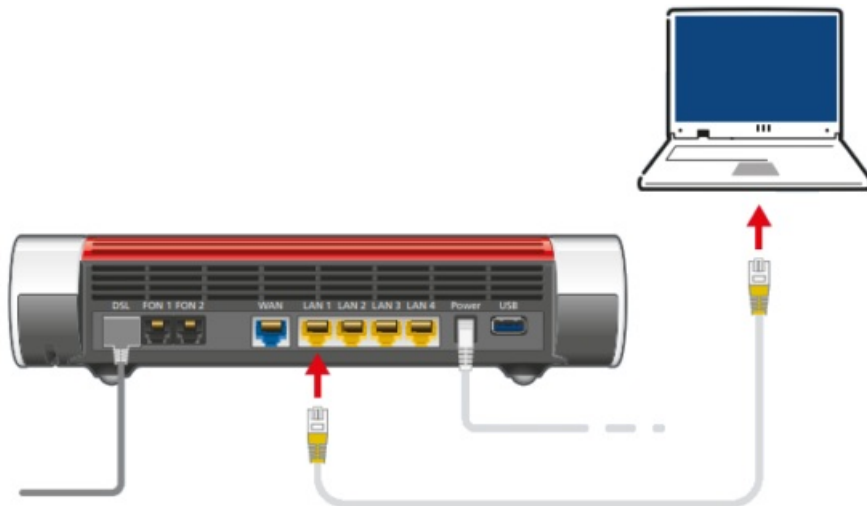

Einstellungen ab Werk

 
Settings upon Delivery

Wi-Fi network (SSID)
FRITZ!Box 7590 AF

Wi-Fi password (WPA2)
3779 8981 1562 8981 0123



FRITZ!Box password
zigzag5481

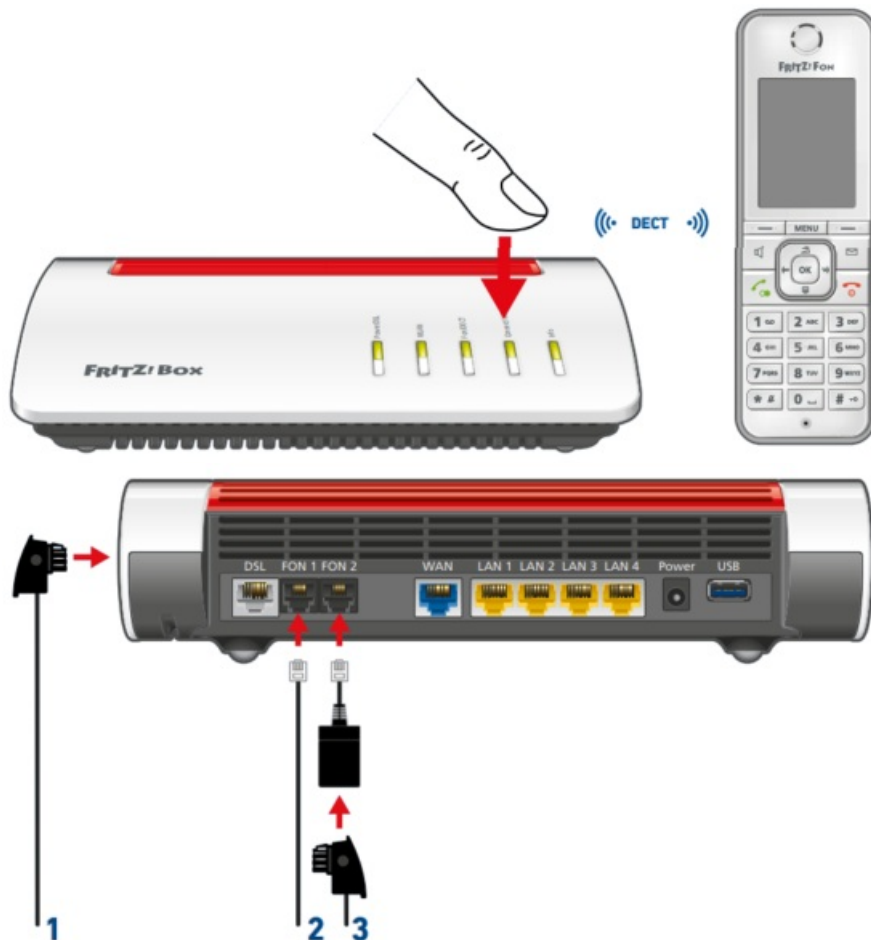

Configure Internet Access

- Enter <http://fritz.box> in a web browser.
The user interface of the FRITZ! Box appears.
- Enter the FRITZ! Box password when prompted to do so, and then follow the wizard until configuration has been completed.
The internet connection is configured and you can surf the web with the connected devices.

Connect Telephones by Cable

You can connect telephones to the FRITZ! Box by cable.

1	Telephone with a TAE plug	Fon 1
2	Telephone with RJ11 plug	Fon 1, Fon 2
3	Telephone with TAE plug on TAE adapter	Fon 1, Fon 2

During operation, only one of the two Fon 1 sockets may be used.

***also fax machines or answering machines**

AVM declares herewith that the device is compliant with the requirements and the rules in directives 2014/53/EU, 2009/125/EC, and 2011/65/EU. The long version of the declaration of CE conformity is available at en.avm.de/ce.



To improve the product and ensure safe operation on your connection, AVM uses diagnostic data where needed. This setting can be changed in the user interface under **Internet / Account Information / AVM Services**.

Frequencies

DECT	1880 MHz – 1900 MHz, maximal 250 mW
Wi-Fi	2,4 GHz – 2.483 GHz, max. 100 mW 5.15 GHz – 5.35 GHz, max. 200 mW 5.47 GHz – 5.725 GHz, max. 1000 mW In the 5-GHz band for Wi-Fi, the range from 5.15 GHz to 5.35 GHz is intended only for indoor use. This restriction or requirement is effective in the states AT, BE, BG, CY, CZ, DE, DK, EE, EL, ES, FI, FR, HR, HU, IE, IT, LT, LU, LV, MT, NL, PL, PT, RO, SE, SI, SK, UK/NL.

Legal information and the valid licensing conditions are presented in the user interface under / Legal Notice / Legal Notice.

More information is available on our website en.avm.de/service.

en.avm.de/service/manuals
en.avm.de/guide
en.avm.de/nc/service/downloads
en.avm.de/service/support-request



© AVM GmbH, 10547 Berlin • 11.2021 • 521616033_1003903_00

Documents / Resources

	AVM 7590AX fritzbox Support mesh wifi [pdf] User Guide 7590AX fritzbox Support mesh wifi, fritzbox Support mesh wifi, mesh wifi
--	--

References

-  [Service | AVM Deutschland](#)
-  [Service | AVM België](#)
-  [Declarations for FRITZ!Box | AVM International](#)
-  [Guide | AVM International](#)
-  [Service | AVM International](#)
-  [Manuals | AVM International](#)
-  [Support | AVM International](#)
-  [Servicio | AVM España](#)
-  [Assistenza | AVM Italia](#)
-  [Service | AVM Nederland](#)

Manuals+.