

MW-100 AWOL Matte White Fixed Frame Projector Instruction Manual

Home » AWOL » MW-100 AWOL Matte White Fixed Frame Projector Instruction Manual



AWOL Vision Matte white

VISION

Fixed Frame Screen
INSTRUCTION MANUAL




Thank you for chossing the AWOL Vision Matte White Projection Screen. Please read this manual carefully before installtion and use.

Contents

- 1 PACKING LIST
- 2 Precautions
- 3 Assemble the frame
- 4 Assemble the screen
- **5** Assemble screen and inner frame
- 6 Outer frame installation
- 7 Mount on the wall
- 8 Specification
- 9 Documents / Resources
 - 9.1 References
- **10 Related Posts**

PACKING LIST

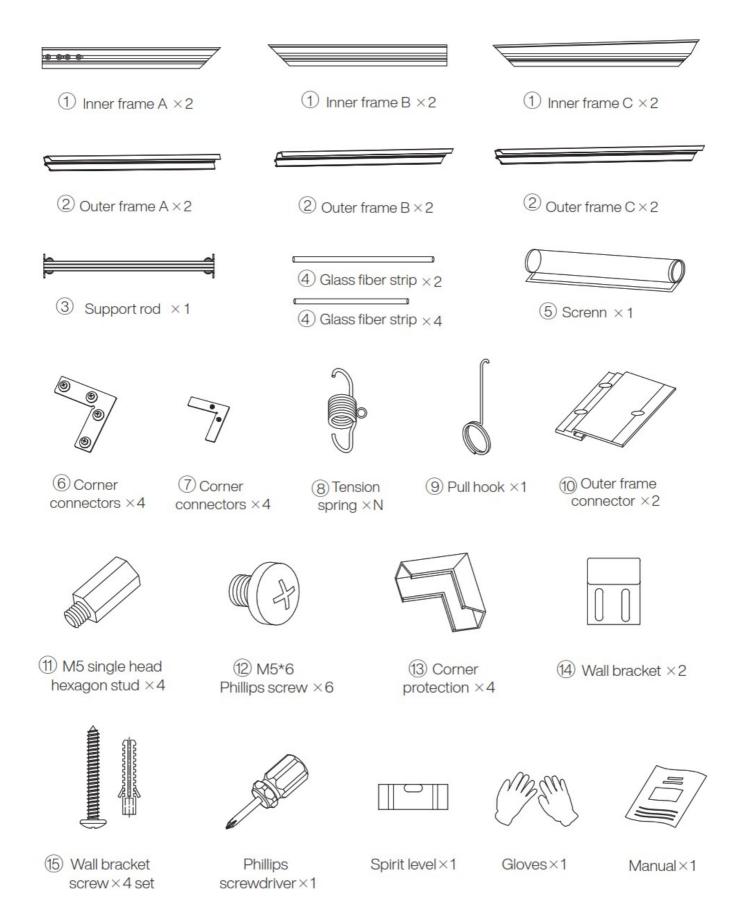

Precautions

To ensure the projection performance of this product, please pay attention to the following operating requirements.


- 1. When assembling, find a suitable size floor or table. The surface must be clean and free of any obstacles. The floor or table must be covered with clean materials such as cloth, film, blankets, etc.
- 2. Handle with care during installation to prevent personal injury or property damage.

- 3. Do not touch the surface of the projection screen with unglved hands.
- 4. Do not touch the projection surface with sharp or hard objects to prevent damage to the screen material.
- 5. Keep children away from the screen to prevent accidents.
- 6. The surface of the screen must be cleaned and treated regularly, and it is recommended to take care of it once every two weeks.
- 7. Please use a soft cotton cloth to wipe (dip some water) gently, and it is not advisable to use any chemical cleaners or alcohol.



Assemble the frame

- 1. Open the package and check whether the accessories in the box are complete.
- 2. Connect inner frame A and inner frame B first (Figure 1)
- 3. Insert the 4 corner connectors into the inner frame C (picture 2)
- 4. Assemble the four inner frames and struts as shown in the figure below, and lock them with screws after the inner frame is assembled (Figure 2, Figure 3);

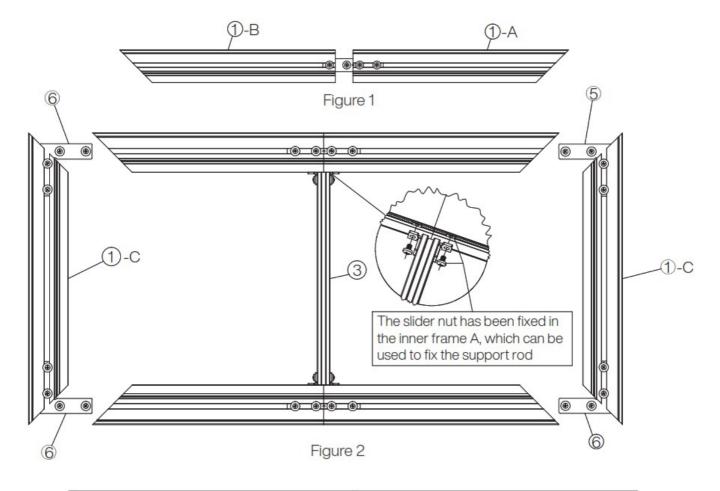


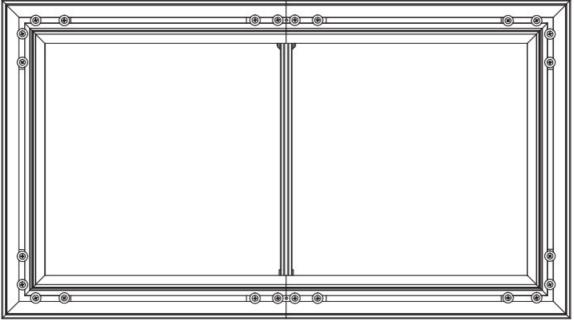


Figure 3

Assemble the screen

- 1. Wear gloves (to avoid the screen being stained with fingerprints that can not be erased). Lay a clean cloth on a flat, clean surface (or ground) to protect the screen.
- 2. Take out the screen from the package, turn the screen face down, unfold the screen, and then according to the length of the glass fiber strips, take the glass fiber strips insert to around of screen as shown below.

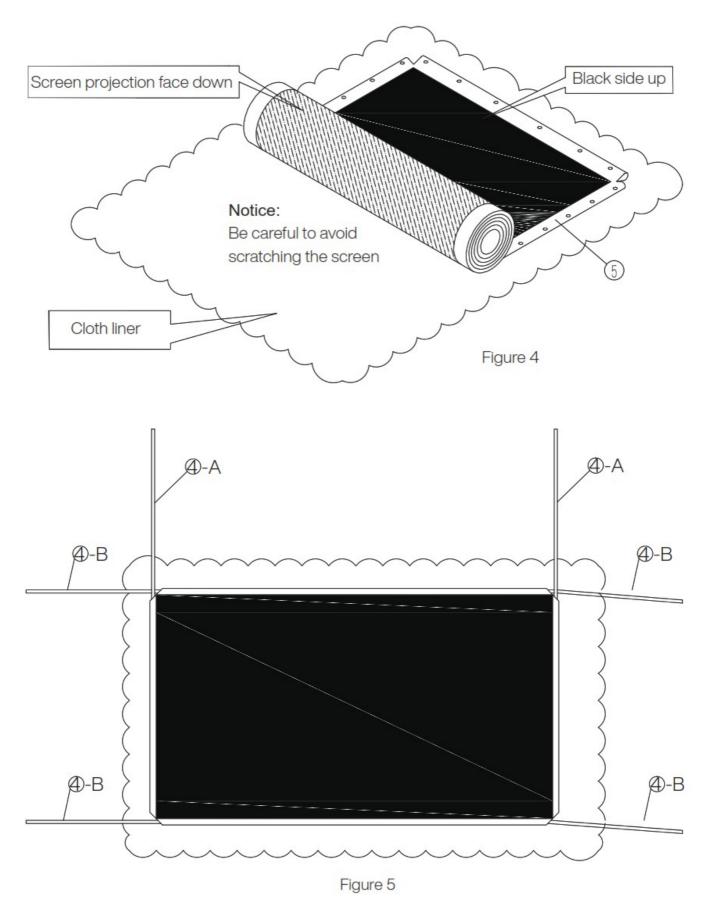

Important note: Please cooperate with two people when assembling, and do not make any actions that may cause the screen to fold or rub against hard objects.

Assemble screen and inner frame

1. Put the assembled frame on the screen. Align the frame with the line marks on the four corners of the screen (Figure 6)



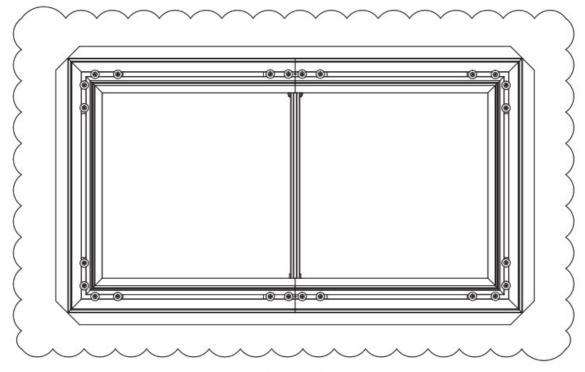


Figure 6

2. Adjust the position of the screen and the frame so that the frame is in the middle of the screen, and check the overall flatness of the screen. before installing the tension spring.

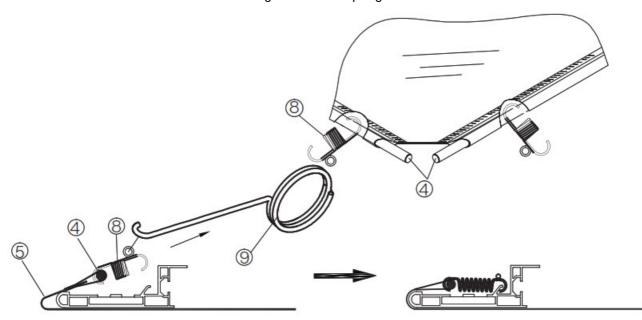

3. Hang the screen on the frame with the tension spring. Please follow the following sequence for hooking tension springs, Firstly install the four corner springs in the order of 1~8; then hang the middle springs 9~12, and finally spring from the middle, and install the other springs symmetrically in turn (Figure 7)

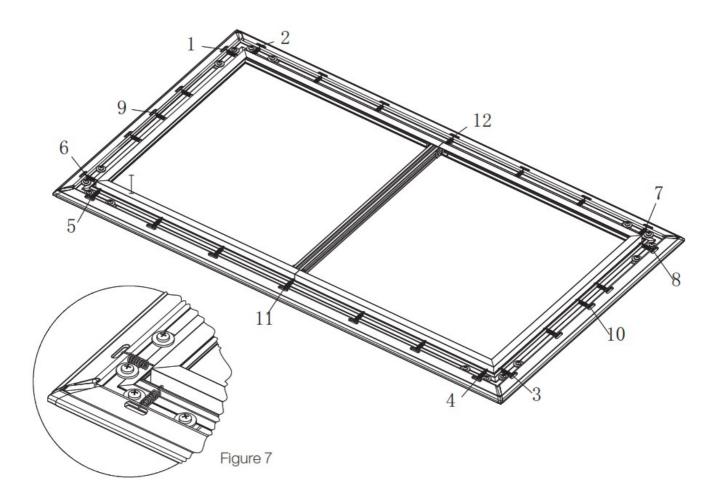

Outer frame installation

1. Splice the outer frame A and outer frame B into a complete frame (Figure 8), and drive the hexagonal studs into the long frame splicing strip (Figure 9)



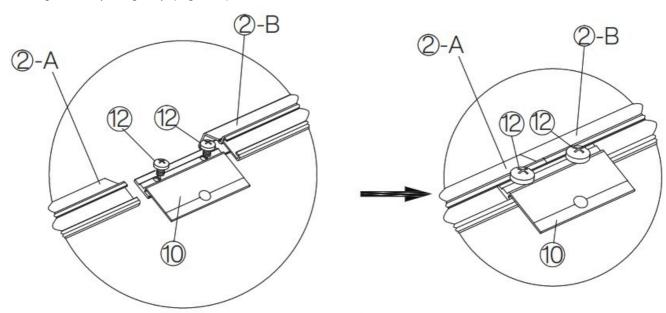



Figure 8

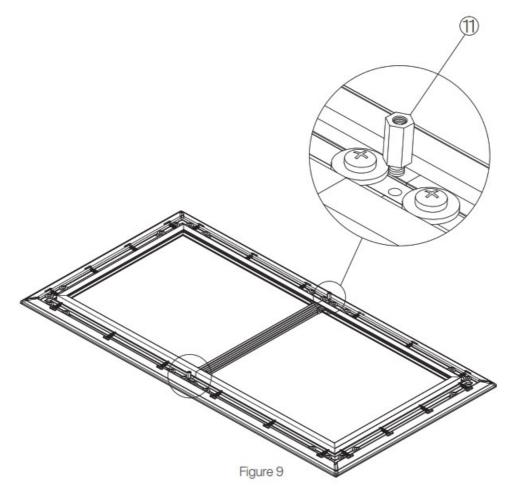

2. Put the outer frame against the frame screen, align the four corners, connect the surroundings with corner connector and lock all the screws (Figure 10)

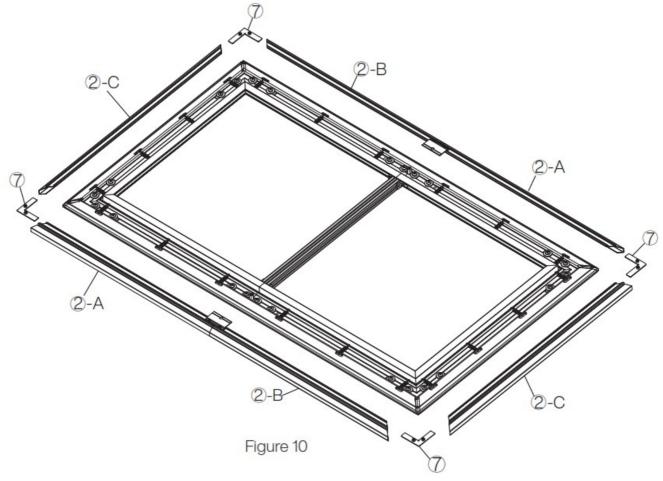


3. Use screws to lock the joints of the outer frame on the hexagonal studs, and clip the corner protectors into the slots of the outer frame (Figure 11)

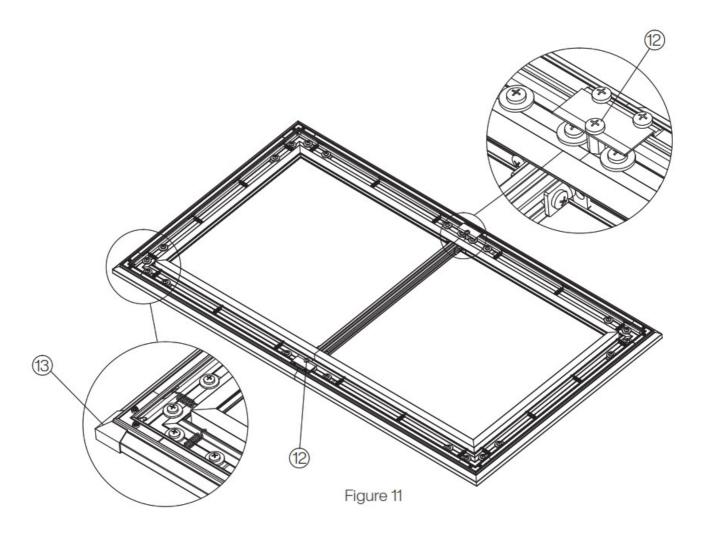


Mount on the wall

1. Install wall hangers on the wall according to screen size. Required tools: level, hammer drill, pencil, ladder, etc. As shown below. Please estimate the installation position of the screen before installing the wall pendants. The height of the lower edge of the screen from the ground is generally about 50~80cm.

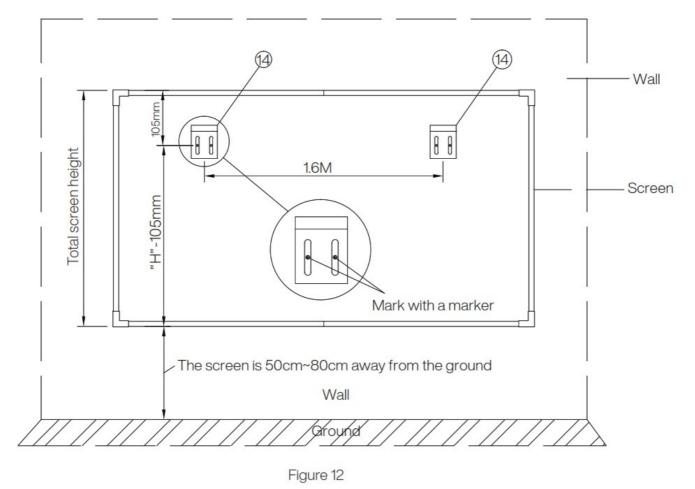

2. Drill holes on the marks on the wall with a percussion drill, insert the rubber plug, screw on the screws, and fix the wall bracket (Figure 13)

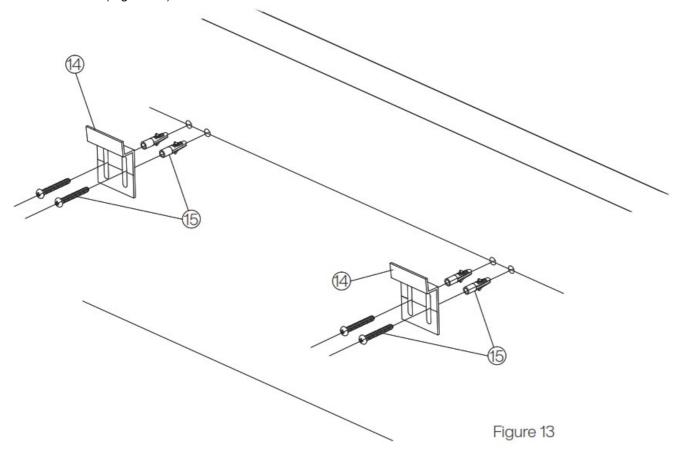

3. Hang the assembled screen on the wall (operated by two persons) (Figure 14)

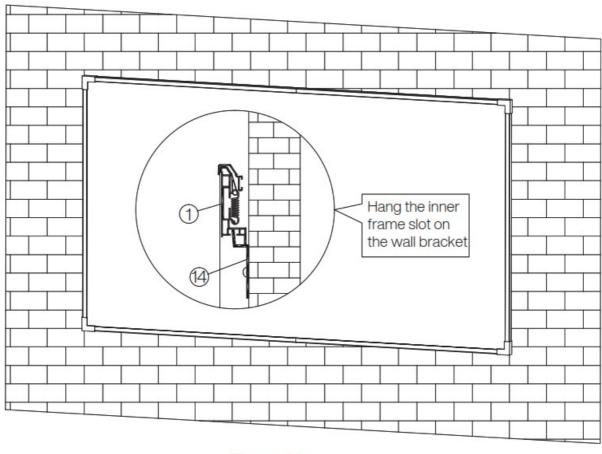


Figure 14

Specification

AWOL Vision Matte White Screen Specification		
Model	MW-100	MW-120
Size	100 inch	120 inch
Material	Matte white	Matte white
Gain	1.3 dB	1.3 dB
Resolution	up to 8K	up to 8K
Viewing Angle	170°	170°
Projection Ratio	16:09	16:09
Matched Projector	Long Throw Projector	Long Throw Projector
	Shor Throw Projector	Shor Throw Projector
	Ultra Short Throw Projector	Ultra Short Throw Projector
Screen Weight	17.2 lbs / 7.8 kg	21A lbs / 9.7 kg
Package Weight	25.41lbs /11.5 kg	287 ibs / 13 kg
Package Size	1405*230*130MM 55.3*9.1.5.2 inch	1650*230*130MM 65.0*9.1*5.1 inch



https://wa.me/qr/3LBJNTWKSLCXH⁻⁻ www.awolvision.com support@awolvision.com

Documents / Resources





AWOL MW-100 AWOL Matte White Fixed Frame Projector [pdf] Instruction Manual MW-100 AWOL Matte White Fixed Frame Projector, MW-100, AWOL Matte White Fixed Frame Projector, Matte White Fixed Frame Projector, Frame Projector, Frame Projector

References

- AWOL Vision
- User Manual

Manuals+, Privacy Policy

This website is an independent publication and is neither affiliated with nor endorsed by any of the trademark owners. The "Bluetooth®" word mark and logos are registered trademarks owned by Bluetooth SIG, Inc. The "Wi-Fi®" word mark and logos are registered trademarks owned by the Wi-Fi Alliance. Any use of these marks on this website does not imply any affiliation with or endorsement.