



**AT Series
Digital Egg
Scale**



AWS AT Series Digital Egg Scale User Manual

[Home](#) » [aws](#) » AWS AT Series Digital Egg Scale User Manual 

Contents

1

AWS AT Series Digital Egg Scale

2

AT-Series

3

FAQs

4

Documents / Resources

4.1

References



AWS AT Series Digital Egg Scale



Introduction

Thank you for purchasing the American Weigh AT-Series digital pocket scale. Please read all operating instructions carefully before use. Scales are precision measuring devices and should always be handled with proper care. To ensure years of reliable service, keep these simple tips in mind:

- Allow the scale to acclimate to room temperature before use.
- Use the scale on a stable, vibration-free surface.
- Handle with care; avoid dropping or shaking the scale.
- Store the scale in a clean, dry location.

Copyright C 201 0 American Weigh Scales, Inc

- All rights reserved Rev 2 0

AT-Series


Thank you for purchasing the American Weigh AT-Series digital pocket scale. Please read all operating instructions carefully before use. Scales are precision measuring devices and should always be handled with proper care. To ensure years of reliable service, keep these simple tips in mind:

- Do not exceed the scale's maximum capacity. Overloading your scale can permanently damage it! Avoid exposure to extreme heat or cold. Scales perform best at normal room temperature. If temperatures have changed dramatically, calibration and adjustment may be necessary.
- Allow your scale to warm up for 30-60 seconds before performing calibration and adjustment(if available). Store your scale in a clean, dry location. Dust, dirt, and moisture can accumulate on the weighing sensors and electronics causing inaccuracy or malfunction.
- Avoid using your scale in close proximity to strong radio wave emitting devices such as computers, cash registers, and cordless phones.
- Always weigh on a flat and level surface, free from vibrations and drafts. The corner of a room is usually the most stable.
- Gently apply all items to be weighed. Do not drop items onto the weighing platform.
- Avoid dropping your scale. The warranty does not cover damage due to rough treatment or overload. Check the batteries first if you are having any trouble with your scale. This simple step can remedy most scale issues.
- Do not disassemble your scale. This product contains no user serviceable parts.

Part List


1. Scale
2. Cover
3. Weighing Tray
4. AAA Batteries (x2)

Key Description

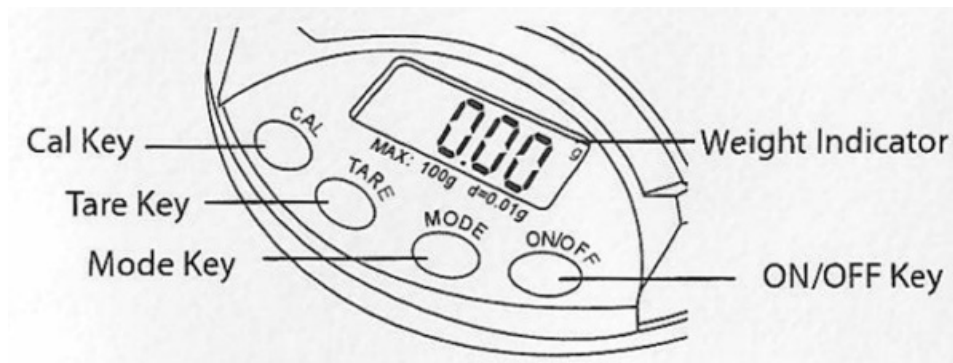

Battery Installation

1. Before using the scale for the first time, check the battery compartment and remove any plastic insulation strips or packaging that may be in place to prevent battery drainage during shipping/storage.
2. If you are replacing the batteries, make sure the positive and negative contacts are properly aligned.

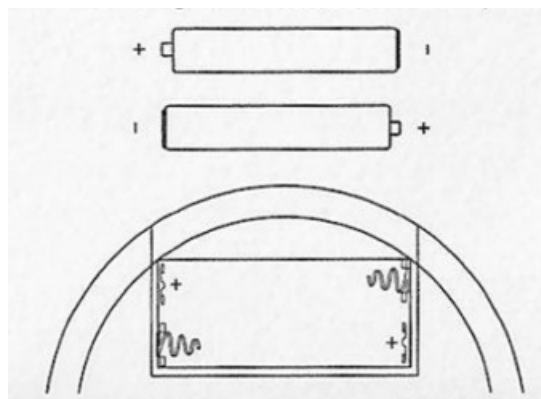

Operation

1. Place the scale on a flat, level surface and press the ON/OFF key to turn the scale on.
2. Once the start-up process completes and the scale goes to zero you are ready to weigh.
3. Place the quantity to be weighed onto the weighing platform.
4. Wait a couple seconds for the display to stabilize before taking a weight reading.

Changing the Unit of Measure

1. Press the MODE key to change the scales displayed unit of measure.
2. If the scale is turned off then back on, it will default to the last unit used.
 - AT-150 Units: g (gram) ► oz (ounce) ► ct (carat) ► gn (grain)
 - AT-500 Units: g (gram) ► oz (ounce) ► ozt (troy ounce) ► dwt (pennyweight)

Using the Tare Feature

You can use this scale's tare feature to subtract the weight of an empty container or vessel for net weight determination. NOTE: The weight of the container will subtract from the available capacity.

1. Place the empty container or vessel on the weighing platform.
2. Press the TARE key once. The display will then reset to zero. If the container is removed, it's weight will be displayed as a negative number.
3. You may now fill the container with the quantity to be weighed. The display will show the net weight of the

contents.

4. To return to normal weight display (gross weight), remove any items from the weighing platform and press the TARE key again to re-zero the scale.

Calibration

Calibration and adjustment are performed at the factory. However, the weighing range can shift slightly during shipping. Also, due to changes in local acceleration of gravity around the world, adjustment is recommended when moving the scale from one location to another. To check calibration:

1. Place the required calibration weight on the scale and note the displayed value.
2. If the displayed value is not within acceptable tolerance (see chart below), adjustment is required.

Model	Acceptable Tolerance (\pm)	Calibration Weight	Recommended Accuracy Class
AT-150	0.02g	100g	OIML M2
AT-500	0.2g	500g	OIML M2

Adjustment

1. Press and hold the CAL key until the display shows "CAL".
2. Press the CAL key again. The display will flash "CAL" followed by the calibration weight value (see chart).
3. Place the calibration weight on the center of the weighing platform. Make sure you are using the correct weight for your specific model.
4. Once the weight is accepted, the display will show "PASS" then return to normal operation.

Troubleshooting

- **Problem:** Scale will not turn on
 - **Solution:** Check the batteries
- **Problem:** Displayed weight fluctuates randomly
 - **Solution:** Make sure your workspace is stable and free of any air currents or vibration
- **Problem:** Displayed weight is inaccurate
 - **Solution:** Perform a calibration adjustment

Error Codes

1. OUTZ – Zero range has shifted. Perform calibration adjustment. If the problem persists, the load cell may be permanently damaged due to overloading.
2. LD- Maximum capacity exceeded. Remove the extra weight to avoid damaging the load cell.
3. L – Batteries are low. Replace the batteries.

Specifications

	AT-150	AT-500
Max. Capacity	150g	500g
Readability	0.01g	0.1g
Power	2 x AAA Alkaline Batteries	
Dimensions	3.8 x 3.8 x 1.3"	
Platform Dimensions	2.0 x 3.0"	

Capacity/Readability Charts

AT-150	AT-500
150g x 0.01g	500g x 0.1g
5.291oz x 0.001oz	17.64oz x 0.01oz
750ct x 0.05ct	16.08ozt x 0.01ozt
2314.9gn x 0.2gn	321.5dwt x 0.1dwt

FAQs

- **How do I calibrate the scale?**

Follow the calibration instructions in section VII. Ensure you have the correct calibration weight.


- **What should I do if the scale displays an error code?**

Refer to section X for error code explanations and solutions.

- **Can I use rechargeable batteries?**

Yes, but ensure they are AAA size and fully charged for optimal performance.

Documents / Resources

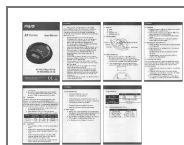

[AWS AT Series Digital Egg Scale](#) [pdf] User Manual

AT Series Digital Egg Scale, AT Series, Digital Egg Scale, Egg Scale, Scale

References

- [User Manual](#)

[Manuals+](#), [Privacy Policy](#)

This website is an independent publication and is neither affiliated with nor endorsed by any of the trademark owners. The "Bluetooth®" word mark and logos are registered trademarks owned by Bluetooth SIG, Inc. The "Wi-Fi®" word mark and logos are registered trademarks owned by the Wi-Fi Alliance. Any use of these marks on this website does not imply any affiliation with or endorsement.