



ax-s AX290KA Standalone Access Control Keypad User Manual

[Home](#) » [ax-s](#) » ax-s AX290KA Standalone Access Control Keypad User Manual 



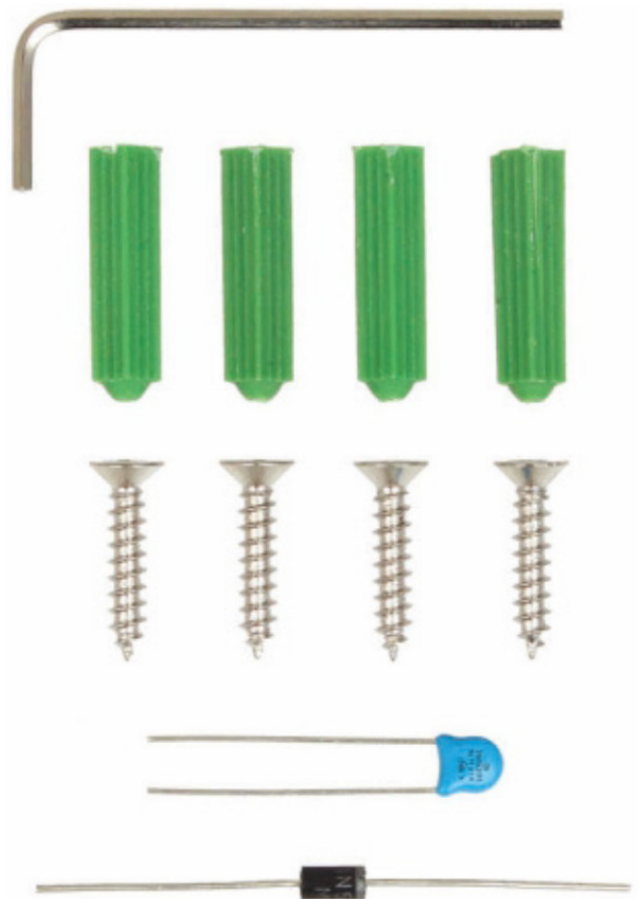


CE FCC RoHS 
41100294
v1.0.0

System Components



Proximity and Keypad Reader


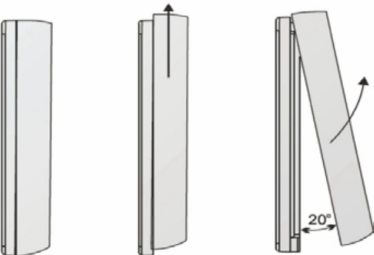
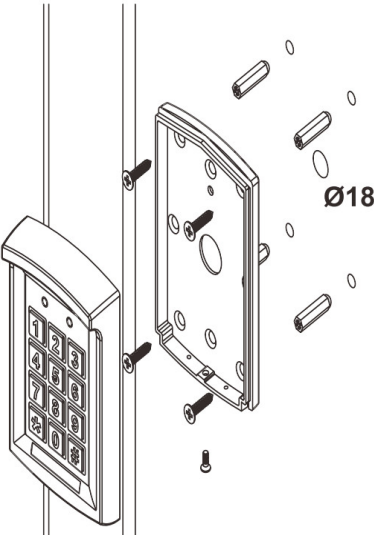


1x Hex Key
4 x Plastic wall plug
4 x Countersunk screws
1x Diode and 1 x Capacitor

Contents

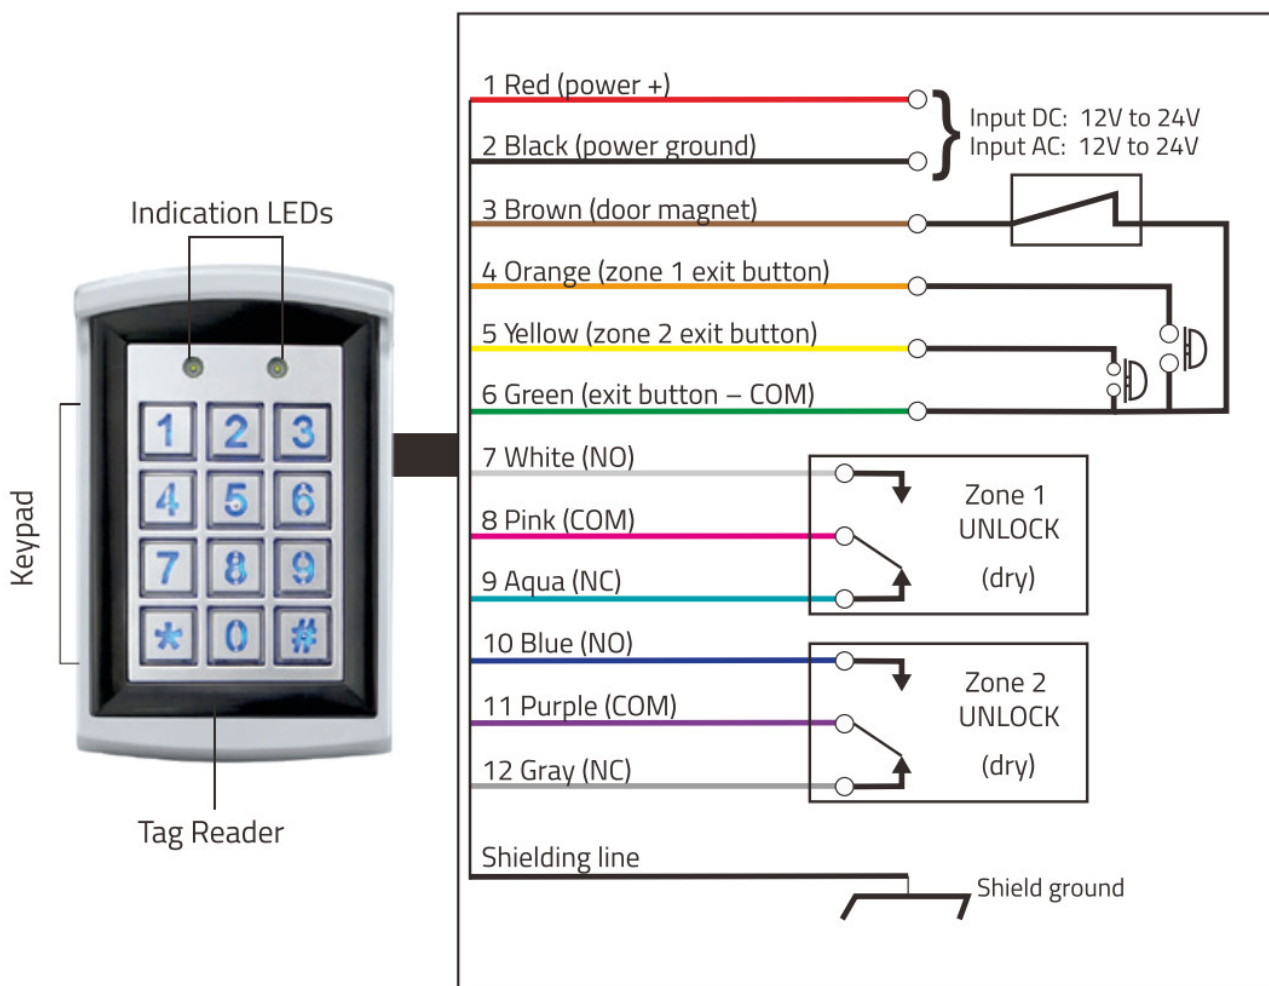
- 1 Installation
- 2 Wiring Example
- 3 Advanced Programming Guide
- 4 User Guide
- 5 Technical Specification
- 6 Documents / Resources
 - 6.1 References

Installation

	<p>Release hex screw from the bottom of the keypad</p>
	<p>(Side View) Push the keypad up to release from mount plate</p>
	<p>Thread system cable through the cable entry hole then make the system connections (as per the wiring diagram), mount the bracket to the surface and slide the keypad to the mountplate, re-fit the hex screw to secure into position</p>











Note: if using more than one keypad, ensure that the keypads are mounted a minimum 185cm apart

Wiring Example




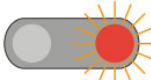





Advanced Programming Guide

How to set-up Access Pin Number and Tags




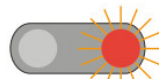








Step Number	Action	Keypad Indication
1	Enter Programming  (Default)	 Long Tone
2	Enter a starting location number 	 Double To ne
3	 Enter a 4 digit pin (1234 not be used)	 Long Tone
4	 Present the tags	 Tone
5	 To end programming	

How to set the length of the master Pin.


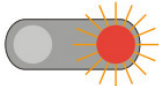






Step Number	Action	Keypad Indication
1	Enter Programming 	 Long Tone
2		
3		 Long Tone
4	Enter number of digital 2-6	 Long Tone
5	To end programming	

Note: When the length of the master code is changed, all existing Pin and Tag will be deleted.

How to set-up Access Pin Number




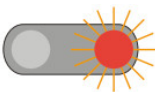










Step Number	Action	Keypad Indication
1	Enter Programming 	 Long Tone
2		
3		 Long Tone
4	Enter a starting location number 	 Double Tone
5	 Enter a 4 digit pin (1234 not be used)	 Long Tone
6	 To end programming	

How to set-up Tags in batches (Normal EM125KHz cards)

Step Number	Action	Keypad Indication
1	Enter Programming <div> <div>1</div><div>2</div><div>3</div><div>4</div><div>1</div><div>2</div><div>3</div><div>4</div> <div>(Default)</div> </div>	
2	<div> <div>*</div><div>9</div> </div>	
3	<div> <div>0</div><div>1</div> </div>	
4	Enter a starting unused location number * <div> <div>0</div><div>0</div><div>0</div> ~ <div>9</div><div>9</div><div>9</div> </div>	
5	<div> <div>?</div><div>?</div><div>?</div> </div> Enter 3-digit number as quantity of tags to be registered	
6	 Present all the tags one by one	
7	All tags will be auto register <div> <div>#</div><div>#</div> </div> To end programming	




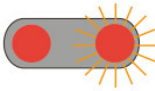

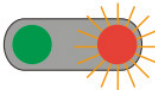


*Each tag will use up a location number (the locations must)

How to set-up Tags in batches (Tags in consecutive numbers)




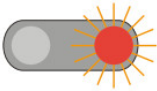

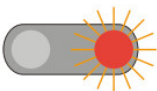




Step Number	Action	Keypad Indication
1	Enter Programming 	 Long Tone
2		
3		 Long Tone
4	Enter an unused location number* 	 Long Tone
5	 Enter 3-digit number as quantity of tags to be registered	 Tone
6	 Present the tag with the lowest serial number	 Tone
7	All other batch tags will auto register  To end programming	

*Each tag will use up a location number


Deleting Access Pin or Tag

Step Number	Action	Keypad Indication
1	Enter Programming 	 Long Tone
2	Enter the location number of tag/pin 	
3	 To delete	
4	 To end programming	




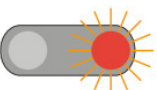




Changing Programming Pin

Step Number	Action	Keypad Indication
1	Enter Programming  (Default)	 Long Tone
2		
3	 Enter new 4 digit programming pin	
4	 Re-enter new 4 digit programming pin	 Long Tone
5	 To end programming	




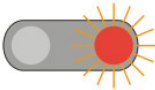




Note: To access keypad's programming mode, the 4 digit programming code is entered in twice

If forgot the password, turn off the power, press and hold button , connect power again until Bi-sound is heard, the password will be reset to default one 1234




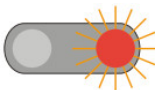




Clear all Pin and Tag Data Step Number

Step Number	Action	Keypad Indication
1	Enter Programming  (Default)	 Long Tone
2		
3		 Long Tone
4	 To end programming	

Default to Factory Settings




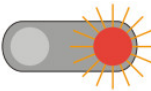




Step Number	Action	Keypad Indication
1	Enter Programming 	 Long Tone
2		
3		 Long Tone
4	 To end programming	

Lock 1 Output Operating Time

Step Number	Action	Keypad Indication
1	Enter Programming 	 Long Tone
2		
3	Enter number of seconds 00 or 1-99 	 Long Tone
4	 To end programming	




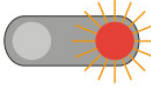





I.e.If setting lock-time as 00 mean, Swipe card or input password once open the door, swipe card or input password again close the door.

Enable & Disable backlight

Step Number	Action	Keypad Indication
1	Enter Programming 	 Long Tone
2		
3	 To enable	 Long Tone
4	 To end programming	




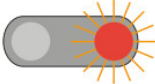







Default: Enabled the backlight
Enable 'Buzzer' Function

Step Number	Action	Keypad Indication
1	Enter Programming 	 Long Tone
2		
3	 To enable  To disable	
4	 To end programming	




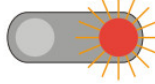








*Once the "Buzzer" function is disabled, keypad operation becomes mute.

Enable 'Tamper Alarm' facility




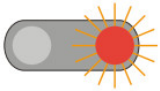

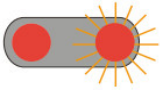

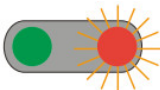


Step Number	Action	Keypad Indication
1	Enter Programming 	 Long Tone
2		
3	 To enable  To disable	 Long Tone
4	 To end programming	

Tamper alarm activates the keypad's internal buzzer and 'door bell' output if the light sensor is exposed.




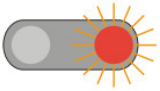




Access Pin Number for Lock 2 Output

Step Number	Action	Keypad Indication
1	Enter Programming 	 Long Tone
2		
3		 Long Tone
4	Enter an unused location number 	 Double Tone
5	 Enter a 4 digit pin (1234 should not be used)	 Long Tone
6	 To end programming	

Deleting Access Pin for Lock 2

Step Number	Action	Keypad Indication
1	Enter Programming 	 Long Tone
2		
3	Enter the location number of pin 	
4	 To delete	
5	 To end programming	

Lock Output Operating Time for Lock 2 Output

Step Number	Action	Keypad Indication
1	Enter Programming 	 Long Tone
2		
3	Enter number of seconds 00 or 01-99 	 Long Tone
4	 To end programming	

I.e.If setting lock-time as 00 mean, Swipe card or input password once open the door, swipe card or input password again close the door.

User Guide

To release Lock 1

(A)
Enter a programmed
Access Pin number



(B)
Present a
registered tag



To access programming mode

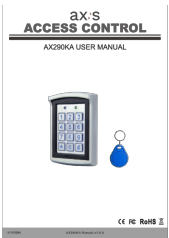
1 2 3 4 1 2 3 4
(Default)

Technical Specification

DC input	12 – 24volts
AC input	12 – 24volts
Standby current	80 mA
Operating current (without lock)	110 mA
Working temperature	-20c to +50c
Reader frequency	125KHz
IP rating	65
Dimension	120 x 76 x 28mm



Documents / Resources

	<p>ax-s AX290KA Standalone Access Control Keypad [pdf] User Manual AX290KA Standalone Access Control Keypad, AX290KA, Standalone Access Control Keypad, Access Control Keypad, Control Keypad, Keypad</p>
---	--

References

- [User Manual](#)