



## AXAGON RSS-M2B Internal Sata Box Instructions

[Home](#) » [AXAGON](#) » AXAGON RSS-M2B Internal Sata Box Instructions 

# AXAGON

### RSS-M2B Internal Sata Box Instructions



#### Contents

- [1 RSS-M2B Internal Sata Box](#)
- [2 Technical Specifications](#)
- [3 Documents / Resources](#)
- [4 Related Posts](#)

### RSS-M2B Internal Sata Box

Mount SSD to the box. (See Figures 1-4 on the next page)  
Turn off your computer and unplug the power cord.  
Open the cabinet and insert the box into a free 2.5" position.

Plug the box to the sata port of the computer.

Close the cabinet, connect the power and turn on the computer.

Automatic installation will take place no drivers are required.

SSD disk is ready.

In the Device manager, please check the successful installation. (see Figure A)


In the Disk manager, please initialize the new disk and format it. (see Figure B)

#### **Product Support Link**



<http://axagon.eu/produkty/rss-m2b#supportLinkGoal>


#### **CHECK CORRECT INSTALLATION IN DEVICE MANAGER**

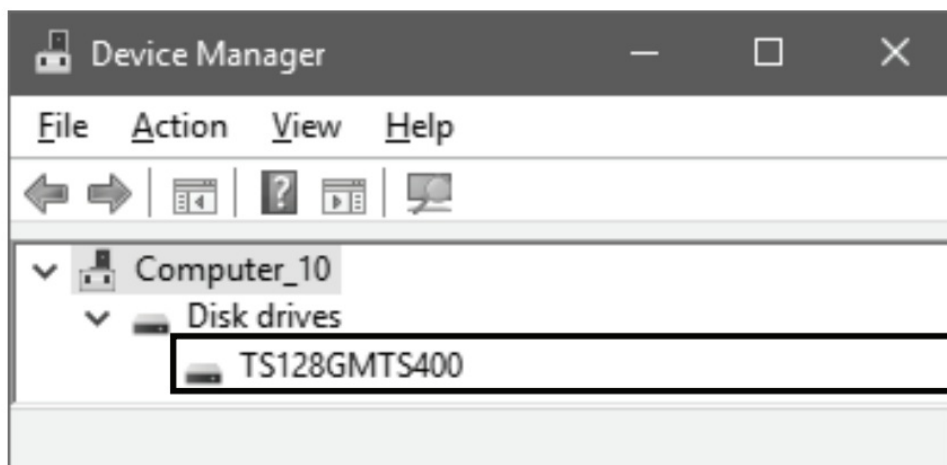

printscreen ENG W10

Only devices which are added to the Device Manager when installing the case and the hard drive are displayed.

#### **INITIALIZE THE NEW DISK AND FORMAT IT IN DISK MANAGEMENT**

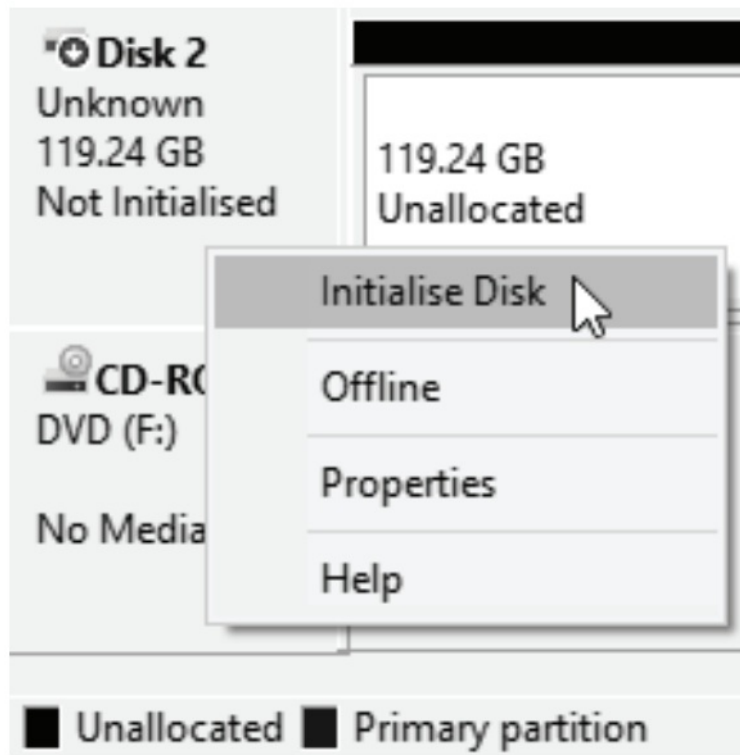

printscreen ENG W10

OPEN THE BOX




INSERT THE SATA M.2 SSD DISK




\* for **30mm, 42mm, 60mm** SATA M.2 SSD DISK insert the mounting **NUT** ➡

## FIX THE SATA M.2 SSD DISK

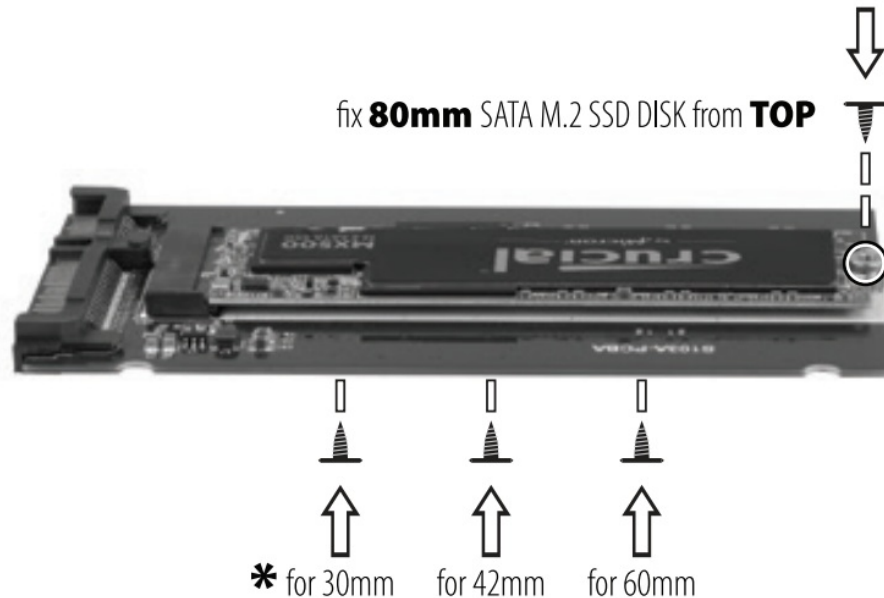

\* fix 30mm, 42mm, 60mm SATA M.2 SSD D I S K w i t h nut fom BOTTOM  
**COMPLETE THE BOX**

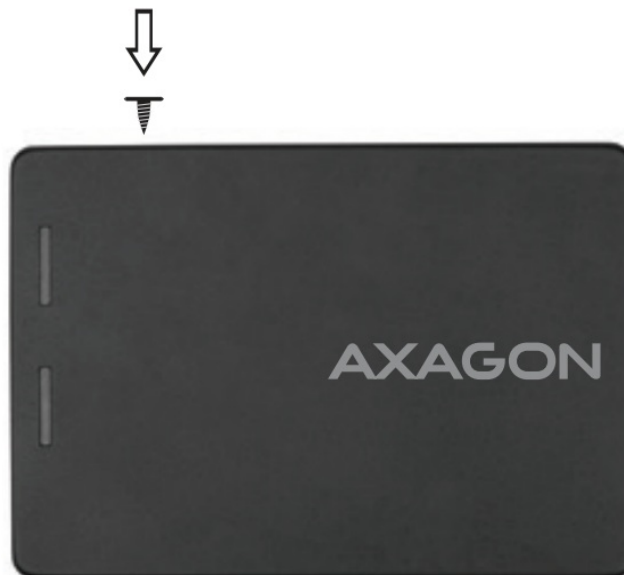

## Technical Specifications

### INPUT INTERFACE

SATA 22pin connector SATA III /II/ supported up to 6 Gbit/s (SATA/600)

### SUPPORTED DEVICES

SATA (AHCI} M.2 SSD single or double sided disks no disk capacity limitation

M.2 disk dimension support : 2230, 2242, 2260, 2280 mm B – KEY AND B-+M-KEY M.2 SSD disks supported

NGFF 7 5 – pin B-key slot for SATAM.2 disks

### POWER SUPPLY

Powered via SATA Power Connector

### OTHER FEATURES

Automatic installation No driver needed S.M.A.R.T. info

BOOT » UASP TRIM Plug & Play + Hot Plug

### OS SUPPORTED

WINDOWS 7 + 8.1+ 10 & l a t e r 0 S X 10.x & later Linux 2.6.x & later

**TECHNICAL SUPPORT:** More info rmation, FAQs, manuals and drivers can be found on the product page in the PRODUCT SUPPORT tab at [www.axagon.eu](http://www.axagon.eu). Nothing helped? Write t o our technical support: [support@axagon.cz](mailto:support@axagon.cz).



At the end of its service life, do not throw the product into household waste; take it to a collection point for electrical equipment recycling. For information about collection and recycling programmes in your country, contact your local authorities or the retailer who sold you the product.



EU declaration of conformity: The device complies with the harmonisation legislation of the European Union 2014/30/EU (EMC) and 2011/65/EU (RoHS). The complete EU declaration of conformity is available from the manufacturer.



Before using the product, the user is obliged to read the user instructions. The manufacturer disclaims any liability for damage that may occur due to improper use of the product or failure to follow the instructions contained herein. Product use other than specified must be consulted with the manufacturer.



Do not use the product in humid or explosive environments and near flammable substances.

# AXAGON

All rights reserved. All text and pictorial materials contained in this document are protected by Copyright Act. All marks indicated here are the registered trademarks of their appropriate owners. Specifications are subject to change without prior notice.  
Made in CHINA for Axagon.



[www.axagon.eu](http://www.axagon.eu)

## Documents / Resources



[AXAGON RSS-M2B Internal SATA Box](#) [pdf] Instructions

RSS-M2B Internal SATA Box, RSS-M2B, Internal SATA Box, SATA Box, Box