



AXESS Double 4" Subwoofer Media Player Speaker User Manual

[Home](#) » [Axess](#) » AXESS Double 4" Subwoofer Media Player Speaker User Manual

AXESS Double 4" Subwoofer Media Player Speaker User Manual



Prompt

When people sleep, they need a quiet environment. Please turn off music or turn off the power while sleeping

NOTE: When speaker is not in use please turn off the device to conserve battery life. Make sure to turn down the volume when you turn off the device so you can maintain the speakers' (sub)woofer in good condition. This way you are less like to burn out or damage the device.

For correctly operating, please read this manual carefully before using. Any content revise of the manual won't declare again, and we are not responsible for consequence cause by fault or oversight of this manual.

Contents [[hide](#)

[1 TO CUSTOMERS](#)

[2 SPECIFICATIONS](#)

[3 FEATURES](#)

[4 OPERATING](#)

[BLUETOOTH](#)

[5 Documents / Resources](#)

[6 Related Posts](#)

TO CUSTOMERS

Thank you for your support and trust on purchasing the products of our company. To fully exert the function of the product, we suggest you to read the operating instruction carefully before using it, for the convenience of grasping the connection method and using points. Please take care of the operating instruction after reading it for the purpose of further reference.

SPECIFICATIONS

- Speaker Type
 - Double 4" Subwoofer
- Speaker Power
 - 100 Watt PMPO power
- Frequency Response
 - 20Hz – 20KHz
- Bluetooth Version
 - V5.0
- Charging Input
 - DC5V, 1A
- Output Voltage
 - 3.7V
- Battery Capacity
 - 1500mAh
- Connections
 - BT, FM, MicroSD, USB, AUX, MIC
- Unit Measures
 - 390 x 156 x 222mm
- Accessories
 - Charging cable

FEATURES

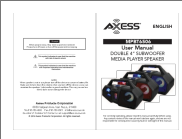
- Outdoor Hi-Fi wireless bluetooth speaker with double 4" subwoofer ·
- Output power is strong, you can enjoy your music anywhere
- Bluetooth version 5.0 with lower power consumption and over 10meters operating range
- Support USB disk, Micro-SD card, AUX input, MIC and TWS function ·

- With wired microphone bring you experience the singer's feeling
- Colorful LED lights looks more beautiful
- With strap, easy to take out

OPERATING BLUETOOTH

- Bluetooth Version 5.0, with lower power consumption and over 10 meters operating range.
- After powering on the speaker, "Blue" will flash across the display screen and the speaker will announce that it is in "Bluetooth mode".
- On the mobile device, turn on the device's Bluetooth, and begin to search for "AXESS 6506". When it appears click the device name to confirm and then the speaker should begin to connect.
- Once the bluetooth connection is successful, the speaker will announce the connection.
- **Note:** "Blue" character will display on the screen during playback, and the "Paus" character is displayed when paused.

Documents / Resources

	AXESS Double 4\" data-bbox="198 408 618 423">AXESS Double 4\" Subwoofer Media Player Speaker [pdf] User Manual Double 4 Subwoofer Media Player Speaker, MPBT6506
--	--