



# AXESS PFBT7002 Portable Bluetooth Speaker User Manual

[Home](#) » [Axess](#) » AXESS PFBT7002 Portable Bluetooth Speaker User Manual 

## Contents

- [1 AXESS PFBT7002 Portable Bluetooth Speaker](#)
- [2 Specification](#)
- [3 Remote Control](#)
- [4 Party Flame Portable Bluetooth Speaker](#)
- [5 Rear Panel Function Layout](#)
- [6 Documents / Resources](#)
- [7 Related Posts](#)



**AXESS PFBT7002 Portable Bluetooth Speaker**




## Specification



- Double 8" Woofer + 1.5" Tweeter
- NEW Front Panel Party Flame Light
- LED Screen
- USB/TF Card Inputs
- FM Radio Function
- Two Wired Microphone Input
- One Guitar Input
- Guitar Volume Adjustment
- AUX Input
- TWS True Link Connect With Other Units
- 60 watt RMS Power (4,000 Watt PMPO)
- 12V/7.5 Lithium Battery
- Bass & Treble Adjustment
- Guitar Volume Adjustment
- MIC Volume & Echo Adjustment
- MIC Delay Adjustment
- Repeat & REC Function


- ON/OFF & Change Light Style Button
- One Advance Remote Control
- One Wireless Microphone
- Adaptor 15V/2A
- Handle & Wheels For Easy Transport

## Remote Control

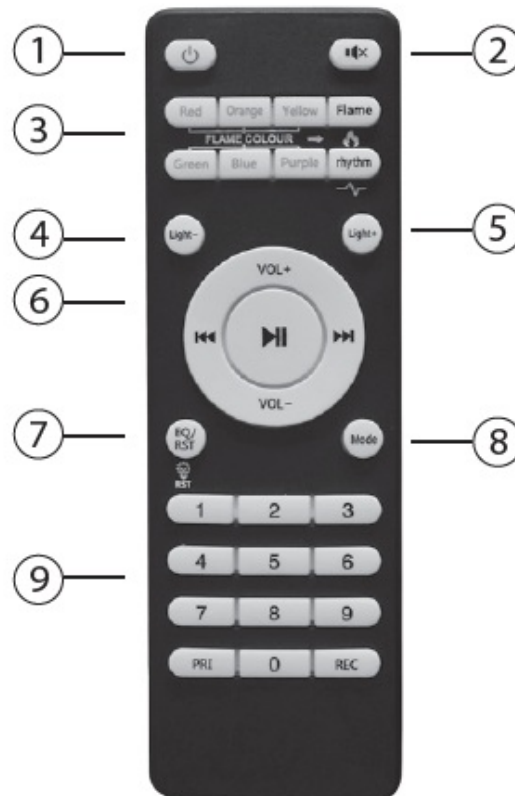

1. Power
2. Mute
3. Different Choice Of Colors & Flame or Music Rhyth
4. Light Power Up
5. Light Down
6. Volume Up/Down, Play/Pause, Forward/Backward
7. Equalizer
8. Mode
9. Track Number Panel

## Party Flame Portable Bluetooth Speaker

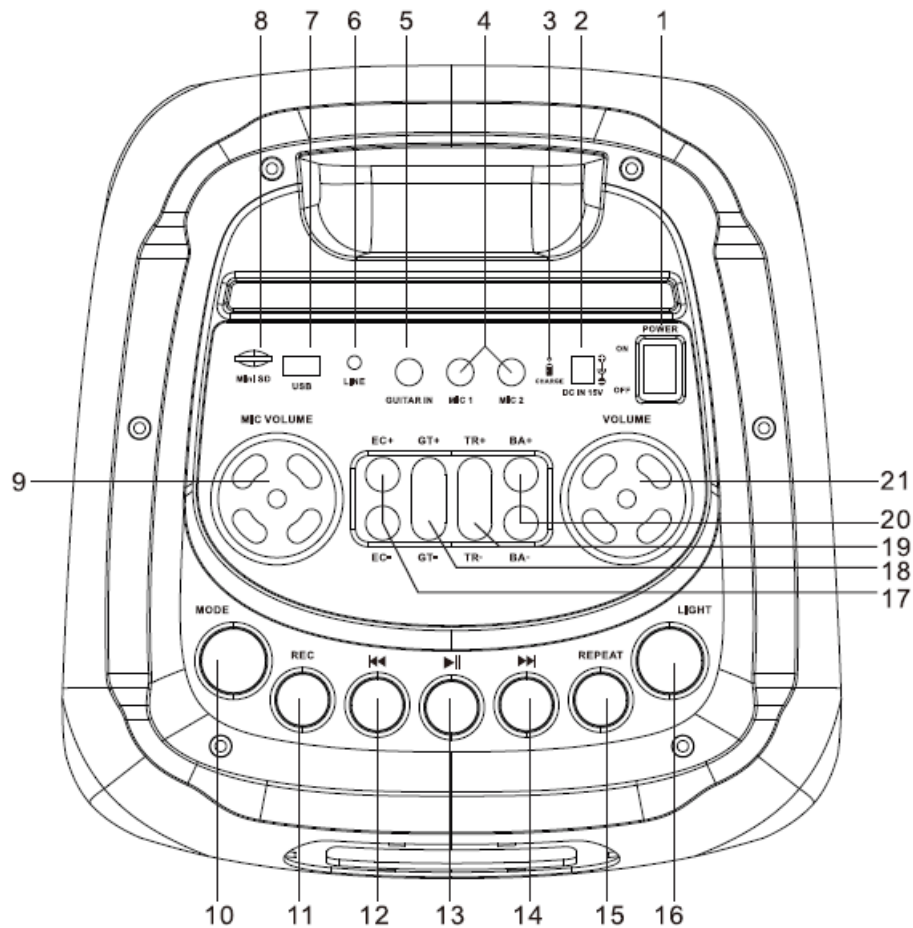


## Rear Panel Function Layout

1. Power Switch: Press this switch to turn on and off the speaker. Before powering on the speaker, make sure the volume level is turned down to prevent damage to the amplifier or the speaker.
2. DC 15V Charging Input Jack.
3. Charging indication: The Blue light flashes during charging and is always on when fully charged.
4. Insert Microphone to the front panel (Mic Jack), adjust Mic Vol. and echo to the best level.
5. Guitar Input Jack.
6. Line Input: Connect your smartphone, MP3 Player, Laptop or other audio devices.
7. USB Flash Drive Input: Insert your USB flash drive into this slot. The unit will only read MP3, WAV, WMA files. The maximum storage size of the USB flash drive cannot exceed 32GB. Do not attempt to connect a computer to the USB input as the speaker will not be able to connect to a computer.
8. TF Input: Insert your TF Card to this slot. The unit will only read MP3, WAV and WMA files from the TF Card. The TF Card cannot exceed 32GB.
9. Microphone Volume Knob: Use this knob to adjust the microphone volume level.
10. Mode Selector: Press this button to switch between USB, TF and Bluetooth Inputs.
11. Rec Button: Press and hold for 3-5 seconds to begin recording on to the USB Flash drive or TF Card.
12. Previous Track: When using the speaker in USB / TF Card & Bluetooth mode, press this button to go to the previous track.
13. Play / Pause: Press this button to pause the signal from the USB flash drive, TF Card or Bluetooth Inputs.
14. Next Track: When using the speaker on USB. TF Card or Bluetooth mode, press this button to go to the next track.

15. Repeat Track: Press this button to repeat the track.
16. LED Lights Power Button.
17. Microphone Echo Knob: Use this knob to adjust the microphone echo level.
18. Guitar Volume Adjustment Knob.
19. Treble Knob: Use this knob to adjust the treble level.
20. Bass Knob: Use this knob to adjust the bass level.
21. Main Volume Knob: Use this knob to adjust the volume of USB/TF/BT/FM music.

9135 Alabama Ave., unit F, Chatsworth, CA 91311 Tel: (818) 785.4000 [www.AxessUSA.com](http://www.AxessUSA.com)  
[admin@montagela.com](mailto:admin@montagela.com)

## Documents / Resources

 <p>AXESS PFBT7002 PARTY FLAME SERIES</p>	<p><a href="#">AXESS PFBT7002 Portable Bluetooth Speaker</a> [pdf] User Manual  PFBT7002 Portable Bluetooth Speaker, PFBT7002, Portable Bluetooth Speaker, Bluetooth Speaker, Speaker</p>
------------------------------------------------------------------------------------------------------------------------------------	-----------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------