

AXI 08 Spielturm Atka User Manual

Home » AXI » AXI 08 Spielturm Atka User Manual

Contents

- 1 AXI 08 Spielturm Atka
- **2 Product Information**
- **3 Product Usage**
- **Instructions**
- **4 WHAT INBOX**
- **5 INSTALLATION**
- **6 ASSEMBLY**
- **7 MAINTENANCE**
- **8 GUARANTEE**
- **CERTIFICATE**
- 9 PRAGMA BRANDS
- 10 Documents / Resources



AXI 08 Spielturm Atka



Product Information

The product is called Atka and it is available in two variations:

- Atka + Single Swing
- Atka + Double Swing / Nest Swing

Product Usage Instructions

To use the Atka product, please follow these steps:


- 1. Ensure that the product is properly assembled according to the provided instructions.
- 2. Place the Atka in a suitable location, such as a backyard playground area with enough space for swinging.
- 3. If you have the Atka + Single Swing variation, position yourself on the swing seat and hold onto the handles.
- 4. If you have the Atka + Double Swing / Nest Swing variation, position yourself on one of the swing seats and hold onto the handles.
- 5. Use your feet to push off from the ground and start swinging back and forth.
- 6. Enjoy the swinging motion and have fun!

Please note that it is important to follow safety guidelines and adult supervision may be required, especially for children using the product.

The assembly must be done by an adult! Read these instructions carefully before use.



MODELS

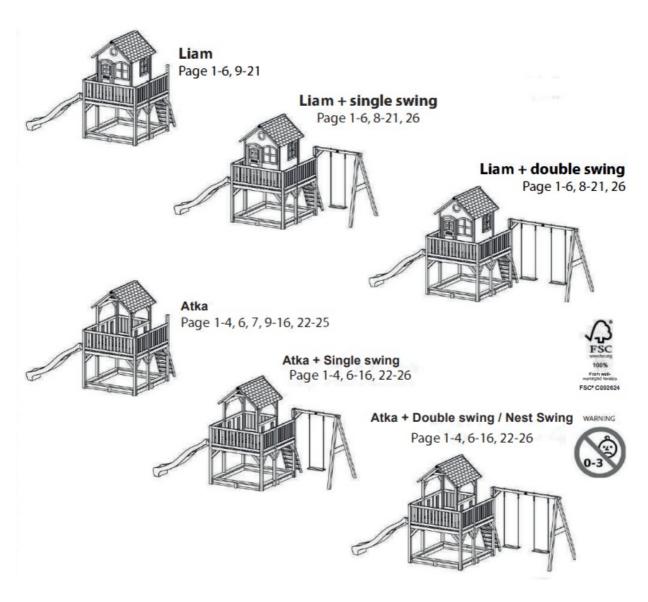

WARNING

Choking hazard – Small parts. Not suitable for children under 36 months.


WARNING


The toy is to be assembled by an adult.


WARNING


Potential hazard description, e.g. In an unassembled state contains potentially hazardous sharp points, so please keep out of baby's reach.


WHAT INBOX

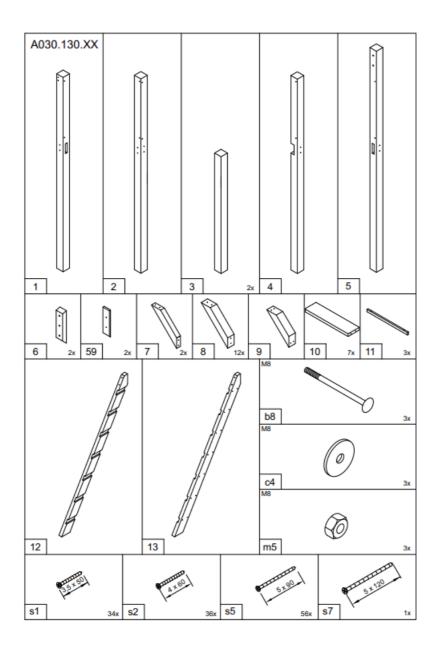


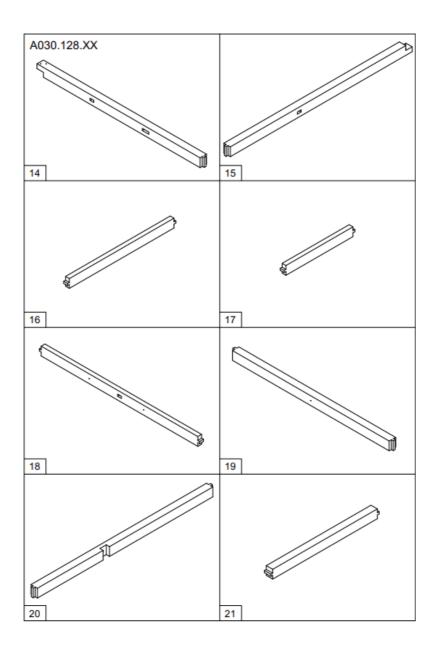


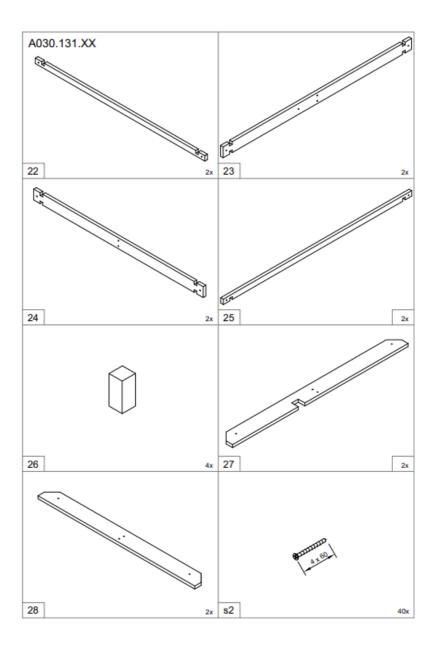


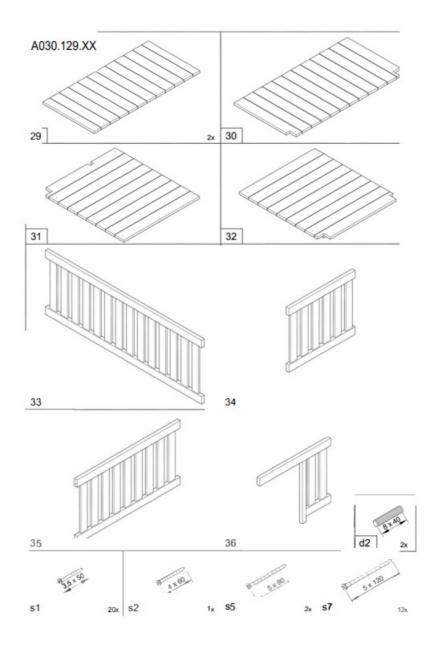

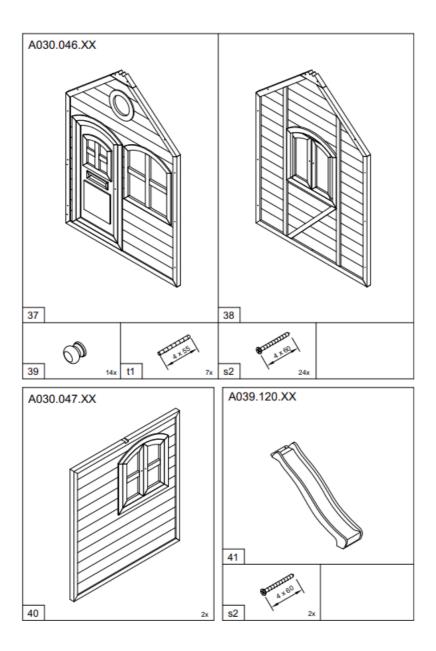


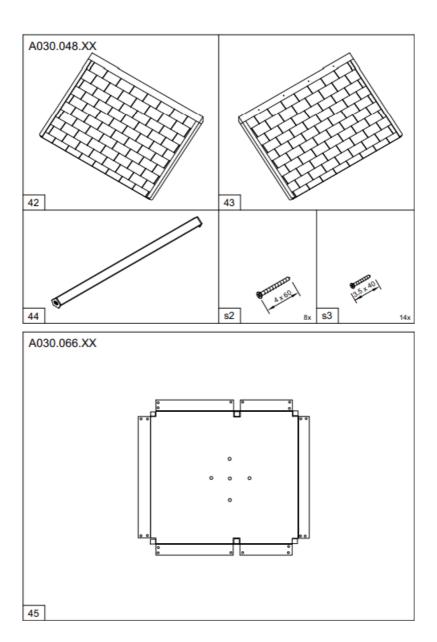


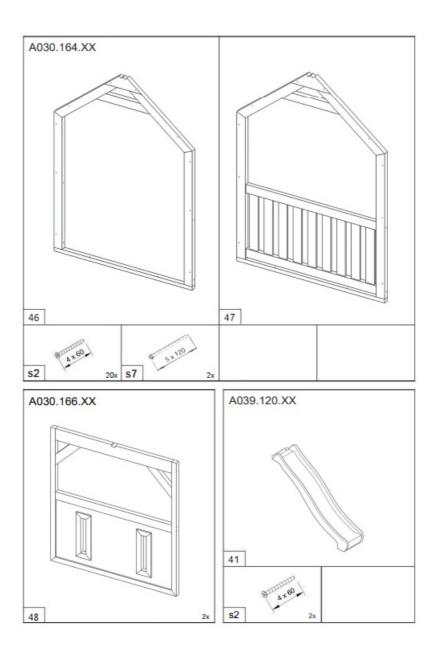


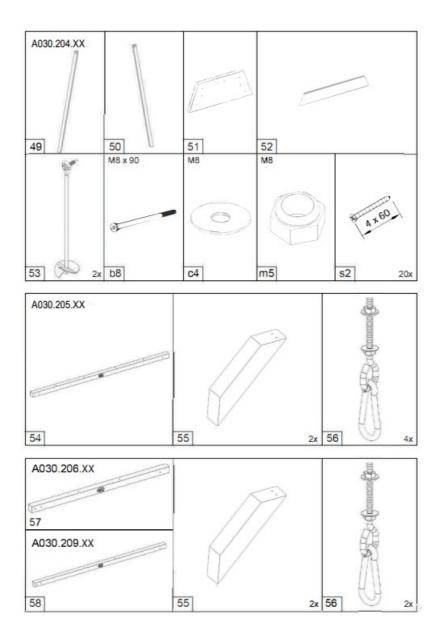



INSTALLATION

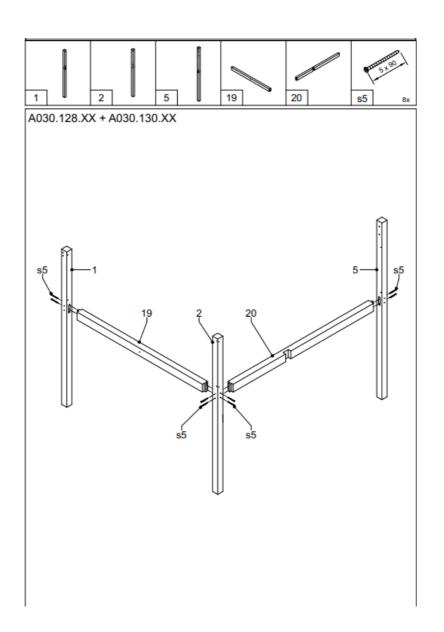


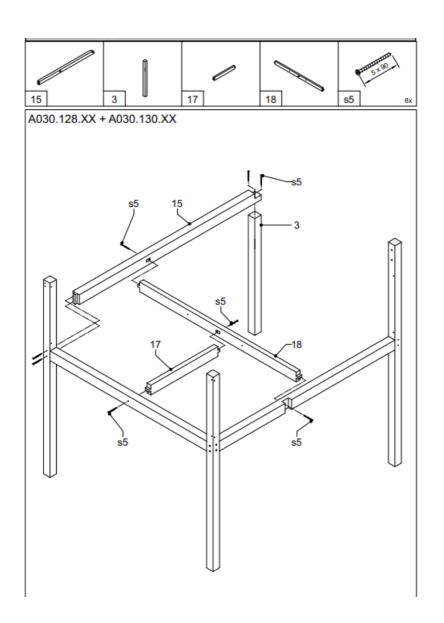


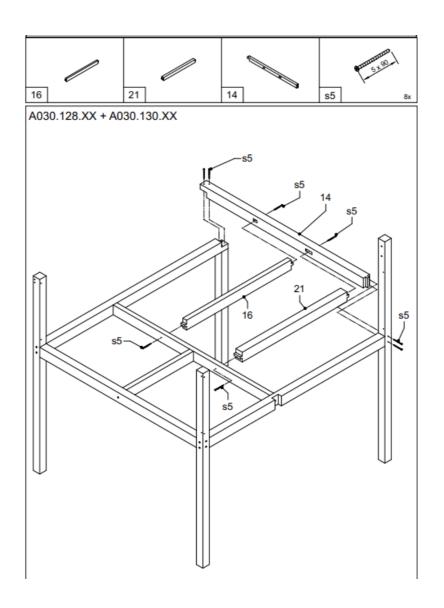


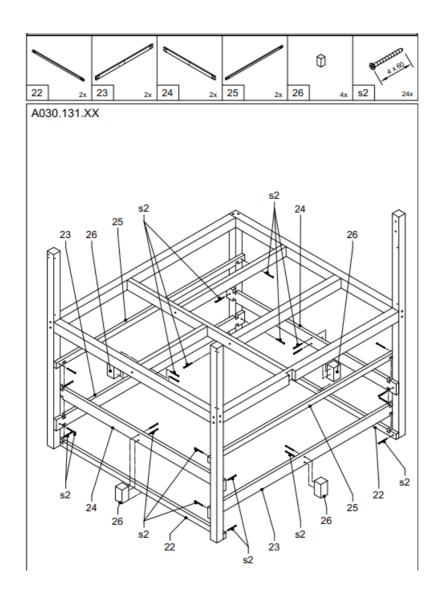


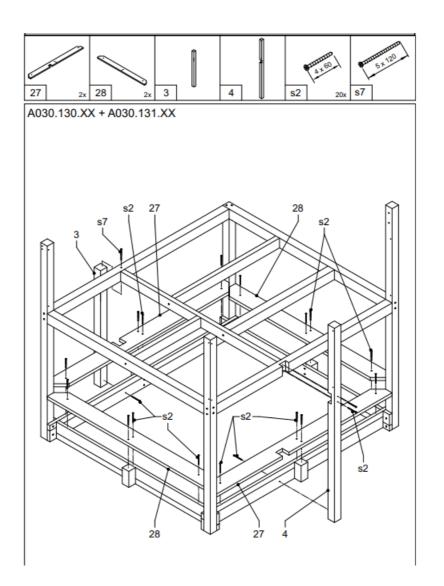


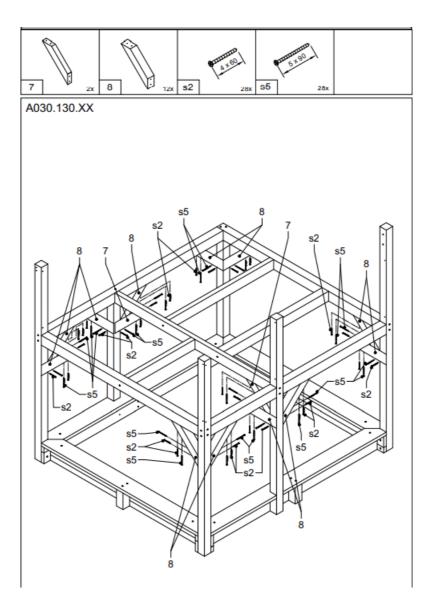


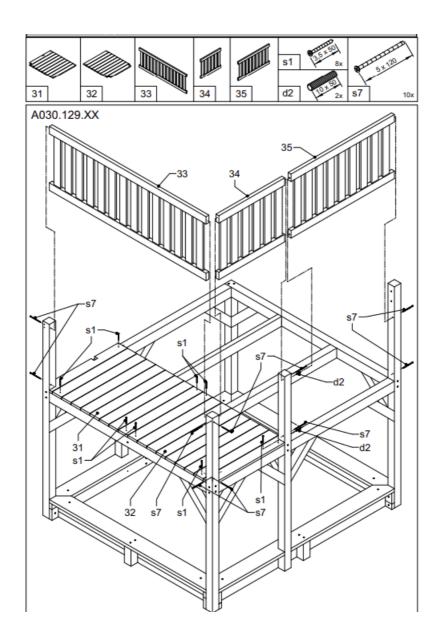


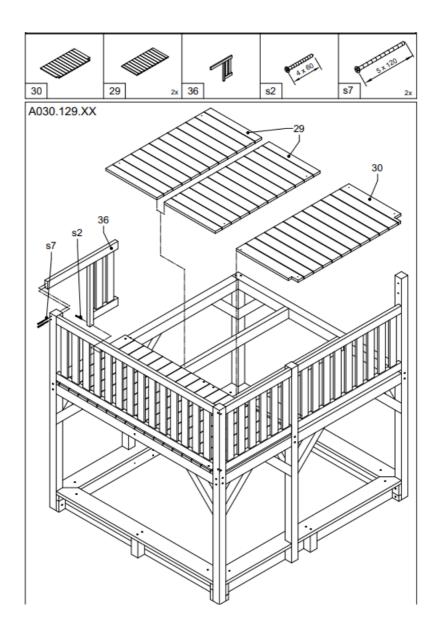


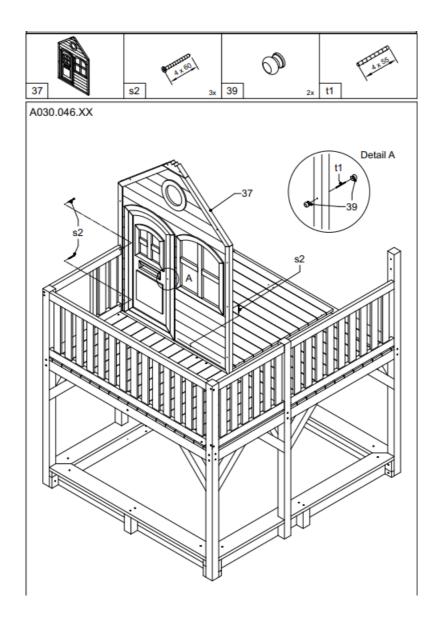


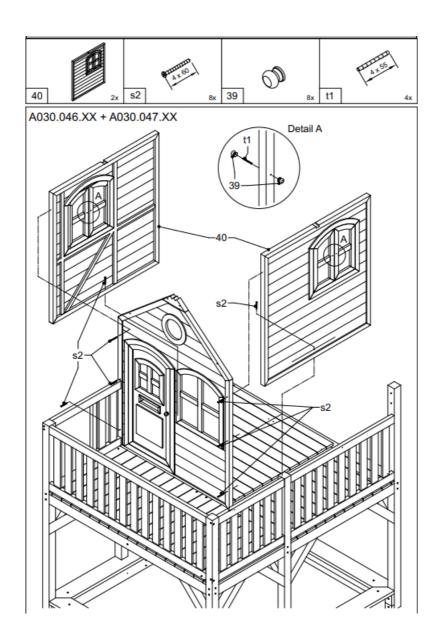


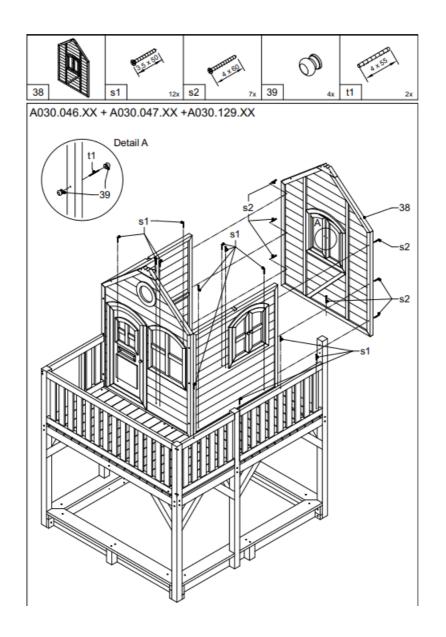


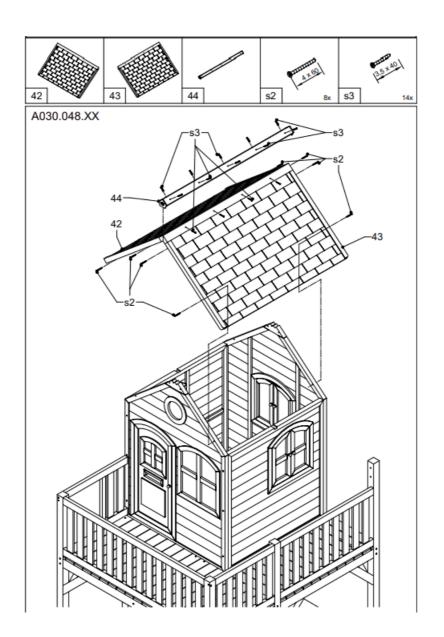

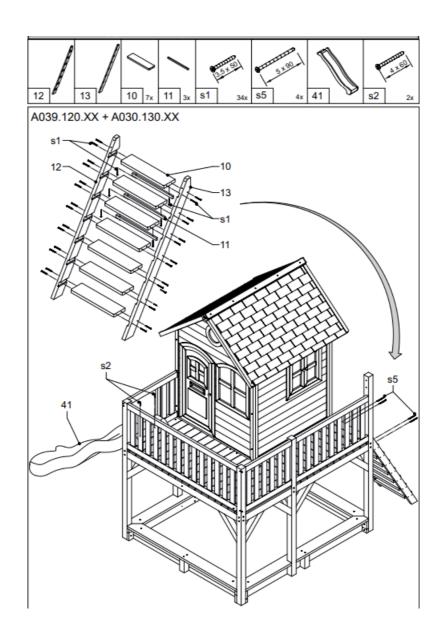

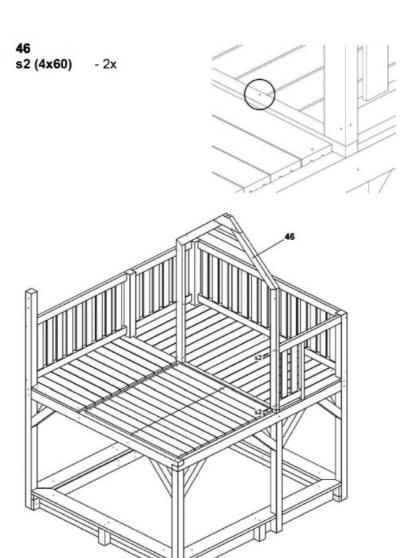

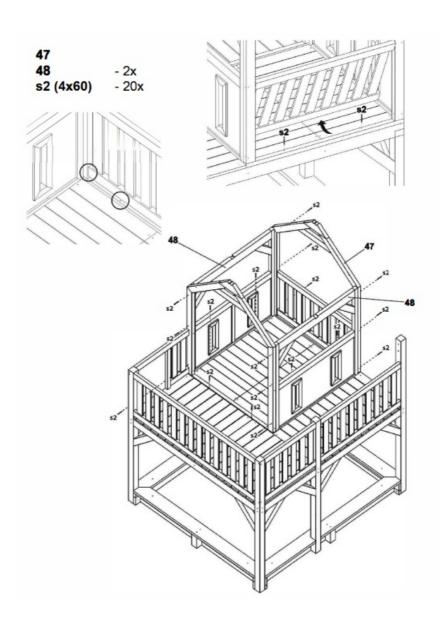

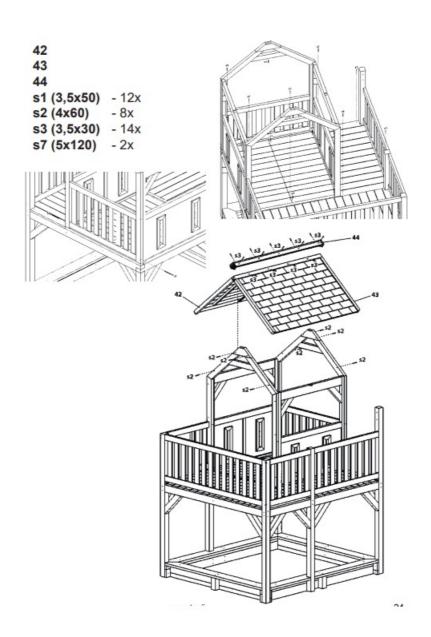

```
10 - 7x

11 - 3x

12


13


41

s1 (3,5x50) - 34x

s2 (4x60) - 2x

s5 (5x90) - 4x
```

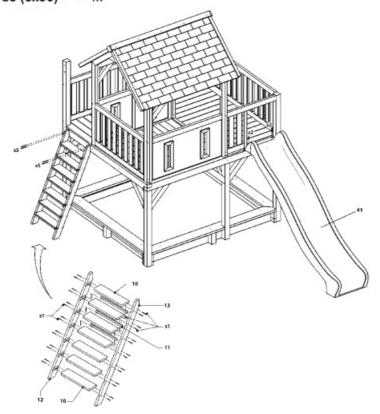

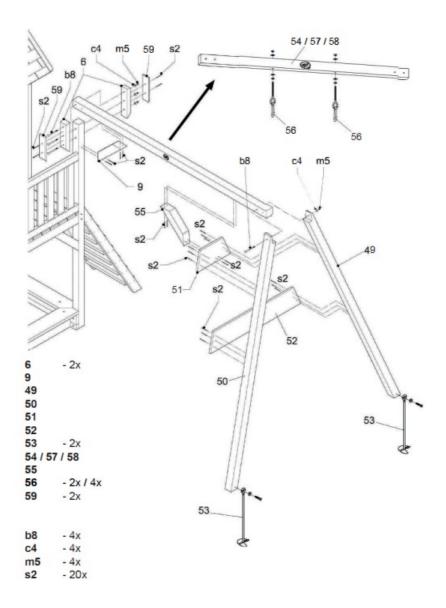

Congratulations on your purchase of a AXI playhouse. In choosing this product, you have bought a product you will enjoy for many years.

SAFETY

This AXI playhouse is designed and manufactured according to European EN71 and CE standards, which guarantees the safety of the playhouse.

SAFETY INSTRUCTIONS

- Do not allow children to play without (parental) supervision.
- Climbing or playing on the roof of a AXI playhouse is not permitted.
- AXI playhouses are suitable for up to two children and one adult (maximum weight 150 Kg.).

ASSEMBLY

- The assembly of the playhouse must only be done by an adult.
- It is strongly recommended that a AXI playhouse with a raised base framework should be anchored with an anchoring set (can be purchased separately). This increases the stability and therefore the safety of the playhouse.

- Do not place the AXI playhouse on a hard surface, such as concrete or asphalt. A fall from the playhouse onto
 a hard surface can cause serious injury. A shock-absorbent surface, for at least 1.50 meters around the AXI
 playhouse, like grass, wood chips or sand is required for playhouses higher than 60.0 cm.
- WARNING: Place the AXI playhouse on a flat surface and at least 2.00 meters away from other structures and other obstacles such as house walls, garage, fence, overhanging branches or clotheslines.
- Do not place the AXI playhouse on a surface that will remain damp. This can be achieved by using the anchoring set or for AXI playhouses without a raised base framework by placing a paving stone between each corner of the playhouse and the ground.
- For the AXI playhouses with a slide, it is recommended the house should be sited so that the slide does not face south. The temperature of the slide can be increased considerably simply by the heat of the sun.

MATERIAL

This AXI playhouse is made of Cedar wood with FSC quality mark. This wood has a natural resistance to wood rot and pests.

MAINTENANCE

- Check whether there are any sharp edges, and replace part as necessary.
- It is necessary to check regularly for splinters, loose screws, and the tightness of joints and/or fastenings. If necessary, nuts and bolts must be tightened. Regularly means: when you put it up and twice a month during the outdoor play season.
- Once a year check the state of the protective stain layer. To ensure optimum durability, the AXI playhouse needs to be given a new coat of stain every two years. Use a water-based paint / stain based on natural components for this.
- WARNING: No maintenance can result in hazardous situation

WARNING!

- A fall from a playhouse onto a hard surface can cause serious injury. AXI cannot be held responsible if this occurs. Always place the house on a soft surface.
- AXI playhouses are designed for private use. These playhouses must not be rented or placed in public places
 like schools and day-care nurseries. In the case of rental or use in public places, any guarantee or warranty
 becomes invalid and other liabilities claims lapse.
- Wood is a natural product that is subject to the effect of the weather which may cause the wood to warp and split. No guarantee is provided for the consequences of weather conditions on the construction that do not cause any damage, such as splits in the wood and warping of the panels. If the product does not reach you in good condition or if there are other problems, please contact your dealer or point of sale where you purchased the product.

GUARANTEE CERTIFICATE

AXI provides a 2-year guarantee on its AXI wooden playhouses when properly used in respect of the joints and accessories and a guarantee of 10 years on the wood.

AXI reserves the right not to provide a guarantee if:

- no original sales receipt can be presented;
- natural effects of weather conditions on the wood have caused warping and splitting of wood that do not have a
 negative impact on the construction of the AXI playhouse;
- the AXI playhouse is used for purposes other than those for which it was designed;
- a method of assembly is used other than the method indicated;
- technical repairs have been carried out unprofessionally;
- the AXI playhouse is used in public places like schools and day-care nurseries;
- the AXI playhouse is rented to third parties;
- the regular monitoring and where appropriate replacement of parts, screws and joints has been omitted.
- there is a failure to re-stain or paint the AXI playhouse once every two years.

PRAGMA BRANDS

AXI

Premium brand with high-quality wooden playhouses, play sets, swings, furniture, pet houses and sports games.

• STEP2

US-based market leader in highest quality rotomoulded plastic toys including sand/water tables, playhouses, furniture and creative play.

BACKYARD DISCOVERY

US-based market leader in high-quality wooden playhouses, play sets, sheds and garden accessories

SUNNY

Mainstream indoor and outdoor toys such as teepee tents, easels, kitchens and sand pits.

COUGAR

Table games for indoor fun with football tables, air hockey tables, pool tables and multi-purpose tables.

SAFETY SAM

He is known as Safety Sam, Victor Veilig, Benni Brems and Simon Sikker. This brand is specifically directed towards the safety of children playing outside using localized names for more local awareness

A Pragma Brand

AXI is one of our brands with awesome products of great quality, that offers hours of active fun! Pragma / AXI Kruisboog 40 3905 TG Veenendaal

Netherlands

T: +31 (0)318 – 57 88 00 info@pragma-trading.com www.pragma-trading.com www.pragma-trading.com WWW.AXI.COM

Documents / Resources



axi AXI 08 Spielturm Atka [pdf] User Manual AXI 08 Spielturm Atka, AXI 08, Spielturm Atka, Atka

Manuals+,