

axi SKY120 Attachment Slide



axi SKY120 Attachment Slide Instruction Manual

[Home](#) » [AXI](#) » axi SKY120 Attachment Slide Instruction Manual 

Contents

- [1 axi SKY120 Attachment Slide](#)
- [2 Product Information](#)
- [3 Product Usage Instructions](#)
- [4 INSTRUCTIONS](#)
- [5 PRAGMA BRANDS](#)
- [6 Documents / Resources](#)
 - [6.1 References](#)
- [7 Related Posts](#)



axi SKY120 Attachment Slide



Specifications

- **Product Name:** SKY120 SLIDE
- **Brand:** Pragma Brand AXI
- **Manufacturer:** Pragma Trading
- **Country of Origin:** Netherlands

Product Information

The SKY120 SLIDE is a high-quality slide designed for hours of active fun. Manufactured by Pragma, a trusted brand known for its premium wooden playhouses, play sets, swings, and more.

Product Usage Instructions

1. Choose a suitable location for the slide, ensuring there is enough space around for safe play.
2. Assemble the slide according to the provided instruction manual, making sure all parts are securely connected.
3. Check the slide for any sharp edges or loose parts before allowing children to use it.
4. Instruct children on how to climb and slide safely, supervising them during playtime.
5. Regularly inspect the slide for wear and tear, and perform any necessary maintenance to ensure continued safety.

FAQQ: How do I clean the SKY120 SLIDE?

A: Use a mild soap and water solution to clean the slide surface, avoiding harsh chemicals that may damage the material.

Q: What is the recommended age range for this slide?

A: The SKY120 SLIDE is suitable for children aged X and above. Adult supervision is recommended at all times.

Q: Can the slide be disassembled for storage?

A: Yes, the slide can be disassembled following the provided instructions for convenient storage when not in use.



INSTRUCTIONS

1. Please keep this instruction sheet safely for future reference.
2. Inappropriate use or faulty application of the product is explicitly forbidden and absolves the manufacturer of all liability.
3. The Assembly must be done by an adult. The use of the item is only allowed under continuous supervision by an adult. The product is meant for persons weighing up to 70 kg. **WARNING!** Not meant for children younger than 3 years of age, due to a lack of extra safety precautions – risk of falling.
4. All elements of the item should be inspected regularly for eventual wear.
5. This product meets to all security aspects of the European standard EN71. “**WARNING!** For family domestic use only.” Both indoors and outdoors.
6. The product must be installed onto a play frame that is suitable for this activity (e.g. a wooden play tower). The assembly must be carried out in such a way that head, finger and clothing entrapments are excluded. In order to prevent clothing entrapments during gliding, there should be no openings around the platform between 3 mm and 25 mm. Pay special attention to the boards of the platform onto which the slide is mounted.
7. When mounting or assembling the product attention should be given to minimum required distance between the product and eventual obstacles: walls, fencing,... The distance should be min. 2000 mm.
8. In this safety area no hard, angular or pointed objects should be present. The surface underneath the product should be flat and shock absorbing, so no asphalt, concrete or any other hard surface.
9. The product must be mounted onto a suitable platform (see point 6) and only in accordance with the recommended platform height with a tolerance of approximately 5 cm (see notes at the rear of the slide). The assembly must be done with 5 mm or 6 mm countersunk screws (screws not included). The ground level surface must be sufficiently stable to avoid subsidence and to ensure that the slide does not get damaged.
10. It is strongly advised not to lift the slide from the bottom after it has been fixed to the platform. This will damage and break the slide.
11. To avoid the heating up of the product, do not orient the sliding surface towards the sun.
12. Sliding can cause a small electrostatic charge. This can be avoided by not wearing synthetic fabric clothing and/or by regularly cleaning the surface of the slide with water and soap.



PRAGMA BRANDS

- **AXI**

Premium brand with high quality wooden playhouses, play sets, swings, furniture, pet houses and sports games.

- **STEP2**

US based market leader in highest quality roto-moulded plastic toys including sand/water tables, playhouses, furniture and creative play.

- **BACKYARD DISCOVERY**

US based market leader in high quality wooden playhouses, play sets, sheds and garden accessories.

- **SUNNY**

Mainstream indoor and outdoor toys such as teepee tents, easels, kitchens and sand pits.

- **COUGAR**

Table games for indoor fun with football tables, air hockey tables, pool tables and multi-purpose tables.

- **SAFETY SAM**

He is known as Safety Sam, Victor Veilig, Benni Brems and Simon Sikker. This brand is specifically directed towards the safety of children playing outside using localized names for more local awareness.



SKY120 SLIDE


A Pragma Brand

AXI is one of our brands with awesome products of great quality, that offers hours of active fun!

Pragma / Cougar

- Kruisboog 40
 - 3905 TG Veenendaal
 - Netherlands
 - T: +31 (0)318 – 57 88 00
 - info@pragma-trading.com
 - www.pragma-trading.com
-

Documents / Resources

	<p>axi SKY120 Attachment Slide [pdf] Instruction Manual SKY120 Attachment Slide, SKY120, Attachment Slide, Slide</p>
--	--

References

- [P Pragma BV](#)
- [User Manual](#)

Manuals+, [Privacy Policy](#)

This website is an independent publication and is neither affiliated with nor endorsed by any of the trademark owners. The "Bluetooth®" word mark and logos are registered trademarks owned by Bluetooth SIG, Inc. The "Wi-Fi®" word mark and logos are registered trademarks owned by the Wi-Fi Alliance. Any use of these marks on this website does not imply any affiliation with or endorsement.