



AXIOM HN-1 Hn Series Hydro-Node Instruction Manual

[Home](#) » [AXiom](#) » AXIOM HN-1 Hn Series Hydro-Node Instruction Manual 



HN SERIES HYDRO-NODE INSTALLATION INSTRUCTIONS

Contents

- 1 [WARNING](#)
- 2 [WALL MOUNTING](#)
- 3 [INCLUDED COMPONENTS](#)
- 4 [TYPICAL CONNECTION SCHEMATIC](#)
- 5 [ETV VALVE POSITIONS WITH THE HYDRO-NODE](#)
- 6 [HYDRO-NODE DIMENSIONS](#)
- 7 [MAX PRESSURE](#)
- 8 [LIMITED WARRANTY](#)
- 9 [Documents / Resources](#)
 - 9.1 [References](#)

WARNING



NOT FOR POTABLE WATER

WALL MOUNTING

Unit shall be mounted on a wall using lag bolts connected to an appropriate material/structure designed to support the weight of the bracket, expansion tank, and any related system piping material.

INCLUDED COMPONENTS

HN-1



Wall bracket only

HN-2




Wall bracket comes with 3 ball valves, 1/4" Manual Air Vent, and 1/4" NPT plug

HN-3




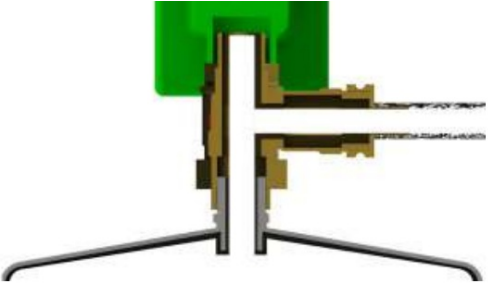

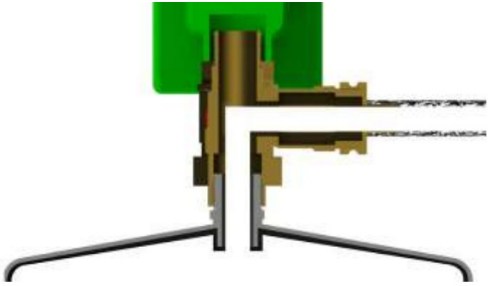

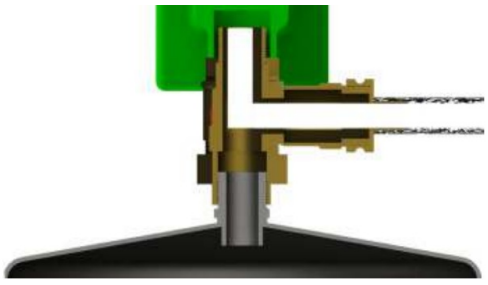


Wall bracket comes with 2 ball valves, 1/4" Manual Air Vent, pressure gauge, and three way ETV-1 valve


TYPICAL CONNECTION SCHEMATIC

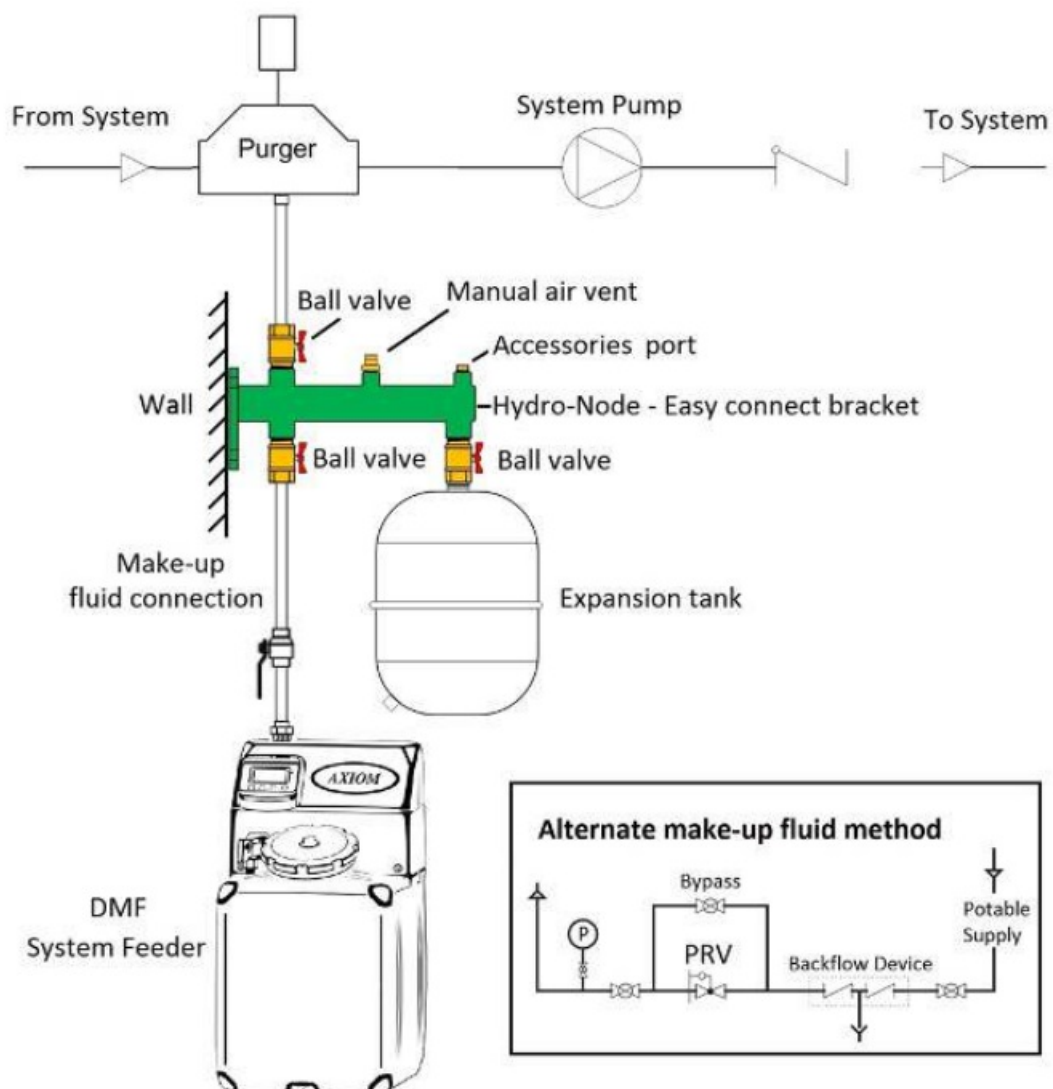

ETV VALVE POSITIONS WITH THE HYDRO-NODE

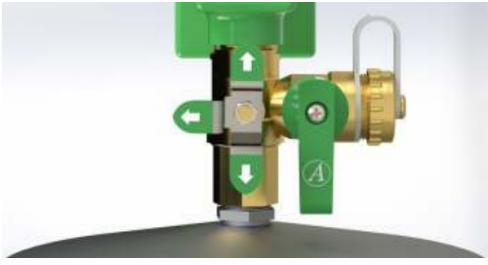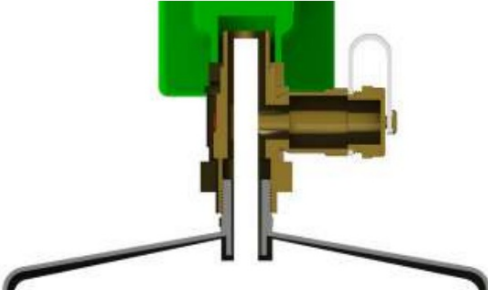Description Operation	Valve Position	Flow Path
Normal Operation		
Fill/Drain System & Expansion Tank		
Drain & Service Expansion Tank		
Drain System Only		

HYDRO-NODE DIMENSIONS

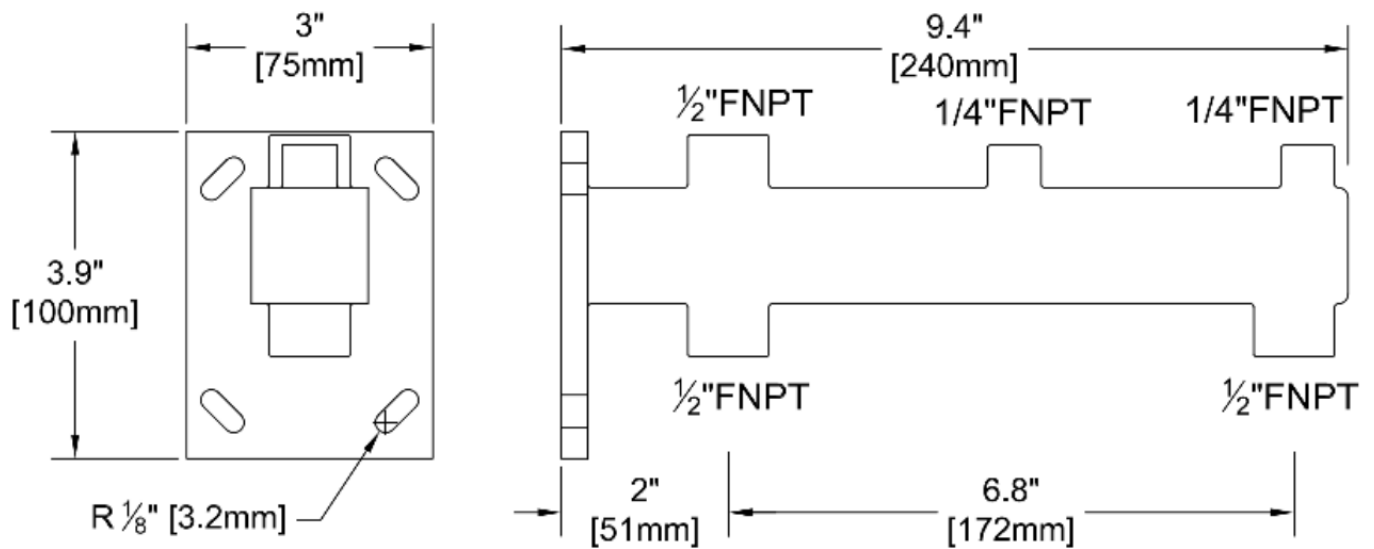

MAX PRESSURE

1030 kPa (150 psi) @ 100 °C (212 °F)

LIMITED WARRANTY

The Hydro-NODE is warranted against defects in materials and workmanship for one year.



3603 Burrton Avenue, Saskatoon, SK S7P 0E4 Ph: (306) 651-1815

Fax: (306) 651-2293

email: sales@axiomind.com

website: www.axiomind.com

Documents / Resources

	<p>AXIOM HN-1 Hn Series Hydro-Node [pdf] Instruction Manual HN-1 Hn Series Hydro-Node, HN-1, Hn Series Hydro-Node, Hydro-Node, Node</p>
--	--

References

- [Home - Axiom](#)