

AXXESS AXTO-MI2 Wiring Interface Owner's Manual

Home » AXXESS » AXXESS AXTO-MI2 Wiring Interface Owner's Manual

Contents

- 1 AXXESS AXTO-MI2 Wiring Interface
- 2 Specifications
- **3 INTERFACE FEATURES**
- **4 TOOLS REQUIRED**
- **5 CONNECTIONS**
- **6 INITIALIZING AND ADJUSTING THE AXTO-**
- **7 AXSWC WIRING GUIDE**
- 8 FAQs
- 9 CONTACT INFORMATION
- 10 Documents / Resources
 - 10.1 References



AXXESS AXTO-MI2 Wiring Interface



Specifications

• Product Name: AXTO-MI2

Manufacturer: Axxess

• Compatibility: Mitsubishi Select Models 2007-2013

APPLICATIONS

Mitsubishi

0	Lancer	2008-2013
0	Outlander Sport	2011-2013
0	Outlander	2007-2013

INTERFACE FEATURES

- Retains the factory amplifier
- Provides multimedia wires (parking brake, reverse, and speed sense)
- RCA level input
- · Retains balance and fade

INTERFACE COMPONENTS

- AXTO-MI2 interface
- AXTO-MI2 harness
- 16-pin harness with stripped leads and RCA jacks

For Dash Disassembly Instructions, scan the QR Code or refer to Metraonline.com. Enter the year, make, and model of the vehicle in the Vehicle Fit Guide for Radio Install kits.

Metraonline.com.



Visit <u>MetraOnline.com</u> for more detailed information about the product and up-to-date vehicle-specific applications


TOOLS REQUIRED

- Cutting tool
- · Crimping tool
- Tape
- · Small flat-blade screwdriver
- Connectors (example: butt-connectors, bell caps, etc.)

ATTENTION: With the key out of the ignition, disconnect the negative battery terminal before installing this product. Ensure that all installation connections, especially the airbag indicator lights, are plugged in before reconnecting the battery or cycling the ignition to test this product.


NOTE: Refer also to the instructions included with the aftermarket radio.

CONNECTIONS

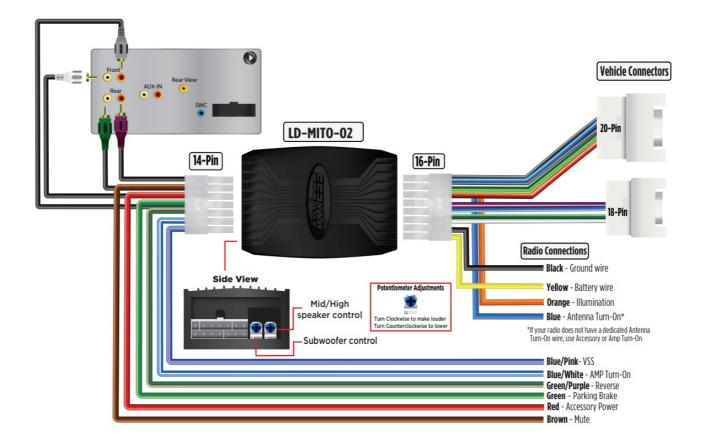


INITIALIZING AND ADJUSTING THE AXTO-MI2

- Initialize the interface by turning the ignition on for 30 seconds, then turn the ignition back off, and on again.
- If the speakers are too loud, or not loud enough, you can adjust the output by following the steps below:
 - 1. Locate the two potentiometers on the side of the interface, see the image at right.
 - 2. Using a small flat-blade screwdriver, turn the gain knob clockwise to make it louder, or counterclockwise to make it lower.

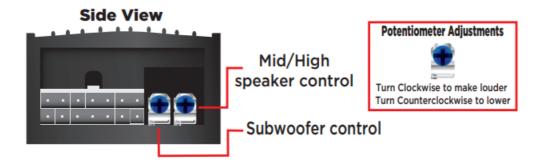

Scan QR Code for AXSWC Connections/Programming



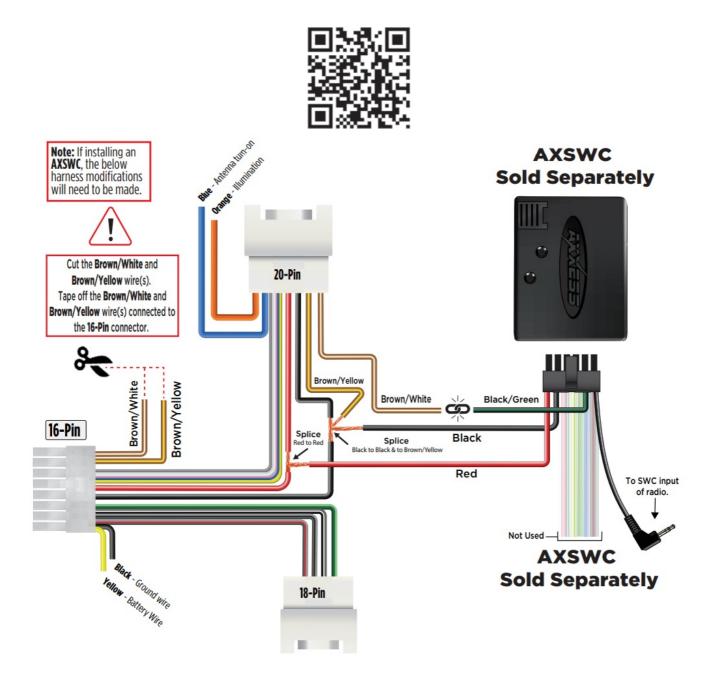

FAQs

- Q: What should I do if I encounter difficulties during installation?
 - A: Contact our Tech Support line at [insert phone number] or email us at <u>techsupport@metra-autosound.com</u> for assistance.

CONTACT INFORMATION

- Having difficulties? We're here to help.
- Contact our Tech Support line at: 386-257-1187
- Or via email at: techsupport@metra-autosound.com.

Tech Support Hours (Eastern Standard Time)

• Monday - Friday: 9:00 AM - 7:00 PM

Saturday: 10:00 AM – 5:00 PM
 Sunday: 10:00 AM – 4:00 PM

- AxxessInterfaces.com
- © COPYRIGHT 2024 METRA ELECTRONICS CORPORATION
- **REV.** 4/3/24 INSTAXTO-MI2

Documents / Resources



AXXESS AXTO-MI2 Wiring Interface [pdf] Owner's Manual AXTO-MI2, AXTO-MI2 Wiring Interface, AXTO-MI2, Wiring Interface, Interface

References

- <u>Auto Sound Company Inc Aftermarket Vehicle Accessory Specialists</u>
- Axxess Integrate Comprehensive Interface Products for Vehicle Upgrades
- User Manual

Manuals+, Privacy Policy

This website is an independent publication and is neither affiliated with nor endorsed by any of the trademark owners. The "Bluetooth®" word mark and logos are registered trademarks owned by Bluetooth SIG, Inc. The "Wi-Fi®" word mark and logos are registered trademarks owned by the Wi-Fi Alliance. Any use of these marks on this website does not imply any affiliation with or endorsement.