




AXXION AXX-1028 Portable LCD TV User Manual

[Home](#) » [AXXION](#) » AXXION AXX-1028 Portable LCD TV User Manual 

AXXION

AXX-1028 Portable LCD TV
User Manual



Contents

- 1 Important Safety Instructions
- 2 Safety Precautions
- 3 Identification of Controls
- 4 Identification of Controls
- 5 MODE MENU SETTING
- 6 OPTION
- 7 First Time Installation
- 8 Basic Operation
- 9 Sort
- 10 Video Setting
- 11 Channel Search
- 12 Time Setting
- 13 Option
- 14 System Setting
- 15 Technical Specifications
- 16 Troubleshooting
- 17 Documents / Resources
 - 17.1 References
- 18 Related Posts

Important Safety Instructions

Warning: To reduce the risk of electric shock, do not remove the cover or back. There are no user-serviceable parts inside. Refer servicing to qualified personnel. **Warning:** To prevent fire or electric shock hazards, do not expose the unit to rain or moisture. Do not expose the Adaptor and portable TV to water (dripping or splashing) and no objects filled with liquids, such as vases, should be placed on the unit. Keep the TV away from direct sunlight and heat sources such as radiators or stoves.

Do not block the ventilation openings. Slots and openings on the unit are provided for ventilation. The openings should never be blocked by placing your portable TV on a cushion, sofa, or another similar surface.

Do not place the portable W on an unstable cart, stand, tripod, bracket, or table. The unit may fall, resulting in possible damage or injury. Never place heavy or sharp objects on the LCD panel or frame. Only use the AC adaptor included with the portable N. Using any other adapter will void your warranty. The plug of the AC adaptor is used as the disconnect device, the disconnect device shall remain readily operable. Unplug the power from the outlet when the unit is not in use. Attention should be drawn to the environmental aspects of battery disposal.

CAUTION: Danger of explosion if the battery is incorrectly replaced. Replace only with the same or equivalent type.

WARNING: The battery (battery or battery or battery pack) shall not be exposed to excessive heat such as sunshine, fire, or the like.

WARNING: Excessive sound pressure from earphones or headphones can cause hearing loss.

WARNING: Only use attachments/accessories specified provided by the manufacturer, the portable TV is supplied by an AC adapter, and the AC adapter is used as the disconnect device, the disconnect device shall remain readily operable.

Caution: Danger of explosion if the battery is incorrectly replaced, replaced only with the same or equivalent type(Lithium battery)



■ This marking indicates that this product should not be disposed of with other household wastes throughout the EU. To prevent possible harm to the environment or human health from uncontrolled waste disposal, recycle it responsibly to promote the sustainable reuse of material resources. To return your used device, please use the return and collection systems or contact the retailer where the product was purchased. They can take this product for environmentally safe recycling.



At maximum volume, continued listening of the device can damage the ear of the user.

Safety Precautions

WARNING

RISK OF ELECTRIC SHOCK DO NOT OPEN

Warning: Never stare directly into the laser beam.

Warning: when the unit using by a child, parents must make sure to let the child understand all contents in the Instruction book on how battery using to guarantee using the battery correctly all the time.

Warning: when finding a battery overheating, swelling, or dour, please stop using the battery and contact the service center for getting a replacement.

Warning: do not charge the battery in a place of insufficient ventilation such as a mattress, sofa, cushion, or soft mat

Warning: we will not take any responsibility if the user incorrectly uses the battery, not follow our warning instruction label on the battery case.

Warning: Use only the power supply listed in the user instructions.

Power supply adaptor

 
Manufacturer: Shenzhen Mass Power Electronics Limited

Model number: EFF0900150E1BA

Adapter type: VDE Use only the original AC adaptor


Identification of Controls

Main Unit

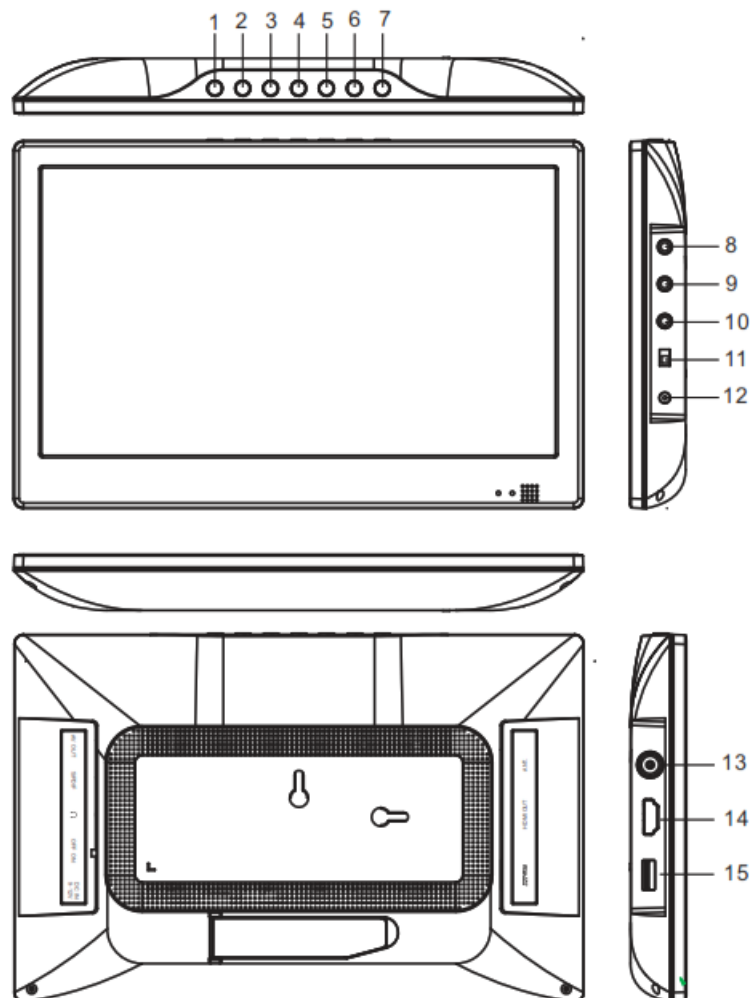

1. SETUP	8. AV OUT
2. ENTER	9. S/PDIF
3. EXIT	10. Earphone Socket
4. UP	11. ON/OFF
5. DOWN	12. DC IN 9-12V
6. LEFT/VOL	-13. ANT.
7. RIGHT/VOL+	14. HDMI OUT
	15. US8

 Identification of Controls

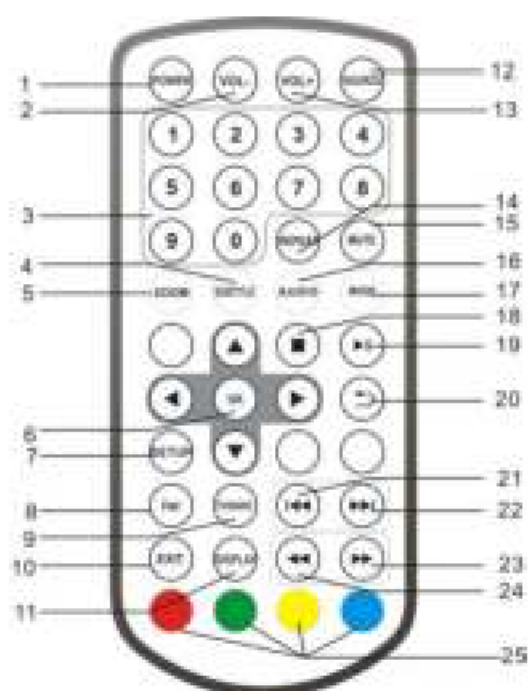

<p>1. POWER On/Standby</p> <p>2. VOL Adjust VOLUME.</p> <p>3. 0-9 NUMBER BUTTON Selects numbered items in a menu.</p> <p>4. SUBTITLE Press SUBTITLE repeatedly during playback to a different subtitle language, if available.</p> <p>5. ZOOM JPEG: Use ZOOM to enlarge or shrink the picture. Each press of the ZOOM button changes the TV screen</p> <p>6. OK Confirm and enter</p> <p>7. SETUP Main Menu/Return</p> <p>8. FAV Open Favorite Programs List Menu</p> <p>9. TV/RADIO Switch between TV and Radio source</p> <p>10. EXIT</p> <p>11. DISPLAY Display the information on the current signal</p> <p>12. SOURCE MEDIA/USB</p>	<p>13. VOL + Adjust VOLUME.</p> <p>14. REPEAT Repeat Play mp3 and video</p> <p>15. MUTE Mute the sound</p> <p>16. AUDIO Press AUDIO repeatedly during playback to hear a different audio language or audio track, if available.</p> <p>17. MODE Mode: Picture menu setting</p> <p>18. STOP</p> <p>19. PLAY/PAUSE</p> <p>20. RETURN</p> <p>21. BUTTON Previous option.</p> <p>22. BUTTON Next option.</p> <p>23. BUTTON Fast forward</p> <p>24. BUTTON Fast backward</p> <p>25. RED/GREEN Some specific function</p>
--	---

MODE MENU SETTING

PICTURE



Brightness

Set the brightness of the screen.

Contrast

Set the Contrast of the screen.

Color Set the colors of the screen.

ENGLISH

Set the OSD Language

RESET

Reset to the default setting.

OPTION



STANDBY

This function makes it possible to automatically put the device into standby mode for 3 or 4 hours.

3 H (3 hours): The device will automatically go into standby mode after 3 hours have passed from the time that any button was pressed.

4 H (4 hours): The device will automatically go into standby mode after 4 hours have passed from the time that any button was pressed.

OFF (Off): The automatic standby function will be deactivated.



Machine model and soft version

First Time Installation



After all, connections have been made properly, switch on the TV and make sure the receiver is connected to the main Power. Press the Power button to switch the receiver on. If you are using the receiver for the first time or restored to Factory Default, the Main Menu will appear on your TV screen.

1. Select [OSD Language] and press the RIGHT/LEFT key to select a language.
2. Select [Country] and press the RIGHT/LEFT key to select your country of residence.
3. Select [Channel Search] and press the RIGHT or OK key to begin Automatic channel search.

4. Once channel tuning is complete, you are now ready to watch TV.

Basic Operation

Program Manage Settings

To access the Menu, press the SETUP button and select [Program]. The Menu provides options to adjust the program Manage Settings. Select an option and press OK or RIGHT to adjust that setting. Press the EXIT button to exit the Menu.



Program Edit

To edit your program preferences (lock, skip, favorite, move or delete), you will need to enter the program edit Menu. This Menu requires a password to access. Enter the default password 10000001.



Set Favourite Program/s

You can create a shortlist of favorite programs that you can easily access. Set Favourite Nor Radio program:

1. Select the preferred program then press the FAVOURITE button. A heart-shaped symbol will appear and the program is marked as a favorite.
2. Repeat the previous step to select more Favourite programs.
3. To confirm and exit the Menu, press the EXIT key.

Disable Favourite Nor Radio Program:

Press the FAV button on the Remote Control with the heart-shaped symbol.

View Favourite Programs:

1. Press the Fav button and the Favourite Menu will appear.
2. Press UP/DOWN to select your Favourite Programs.
3. Press OK to select your favorite program.

Delete an N or Radio Program/s

1. Select the Program and then press the BLUE button. A message will appear. Press OK to delete the program.
2. Repeat the previous step to select more programs to delete.

Skip N or Radio Program/s

1. Select the program you would like to skip and press the GREEN button. A skip symbol is displayed. The program is marked as a skip.
2. Repeat the previous step to select more programs.
3. To confirm and exit the menu, press the EXIT key.

Disable a skip Nor Radio Program:

Press the GREEN button on the skipped program with the skip symbol.

Move an N or Radio Program/s

1. Select the preferred program then press the RED button. A moving symbol will appear.
2. Press UP/DOWN to move the program.
3. Press OK to confirm.
4. Repeat the above steps to move more channels.

Lock Program/s

You can lock selected programs for restricted view.

Lock an N or Radio Program:

1. Select the preferred program then press the YELLOW button. A lock-shaped symbol is displayed. The program is now marked as locked.
2. Repeat the previous step to select more programs.
3. To confirm and exit the menu, press the EXIT button.
4. Press the YELLOW button to disable the locked program.
5. To view the locked program, you will be required to enter either the default or the modified Password. (refer to system settings "Set Password")

Sort

Sort your channels from the following options:

[LCN] – Sort the channels in ascending order.

[Name] – Sort the channels in alphabetical order.


[Service ID] – Sort the channels according to the station.

LCN (Logical channel number)

Set LCN on or off.

Video Setting

 To access the Menu, press SETUP then selects [Picture]. The Menu provides options to adjust the video settings. Press UP/DOWN to select an option and press RIGHT/LEFT to adjust that setting. Press EXIT to exit the menu.

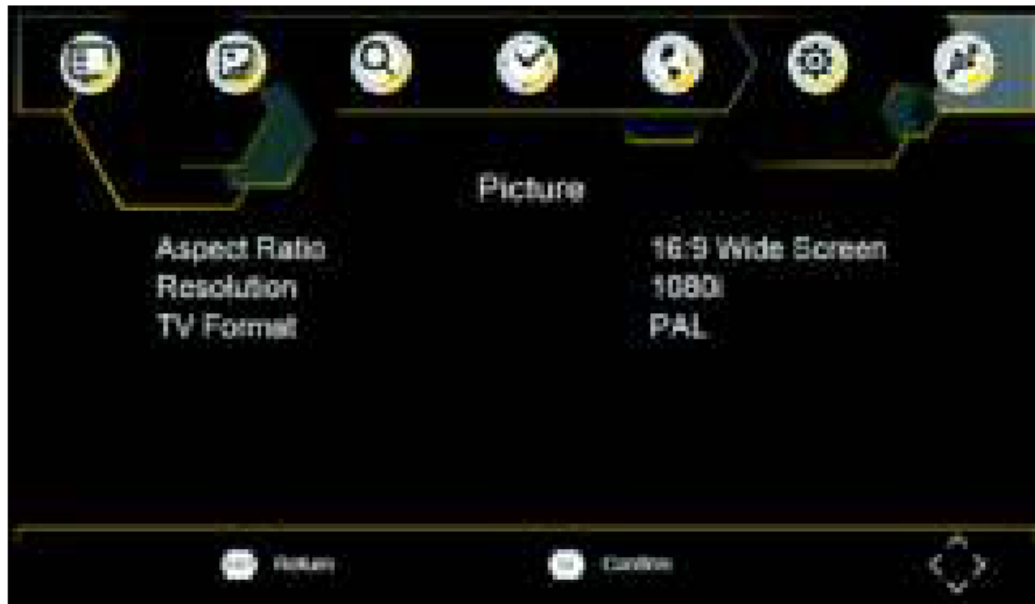

Aspect Ratio

You must set the display format to either 4:3 PanScan, 4:3 Letter Box, 4:3 Full, 16:9 Wide Screen, 16:9 PillarBox, or Auto to get the maximum display when watching TV. **Resolution**

If the video does not appear correctly, change the setting. This setting is to match the most common setting for HDMI.

[576i] for PAL system TV.

[1576P]: for PAL system TV.

[720P]: for NTSC or PAL system TV.

[1080i]: for NTSC or PAL system TV.

[1080P]: for NTSC or PAL system TV.

TV format

If the video does not appear correctly, you need to change the settings.

This should match the most common setting for TVs in your country.

[NTSC]: for NTSC system TV.

[PAL]: for PAL system TV.

Channel Search

To access the menu, press SETUP and select [Search Channel].

The Menu provides options to adjust the Search Channel settings.

Select an option and press RIGHT/LEFT to adjust the settings.

Press EXIT to exit the Menu.



Auto-Search

Search and install all channels automatically. This option overwrites all preset channels.

1. Select [Auto Search] and press OK or RIGHT to start the channel search.
2. To cancel the channel search, press EXIT.



Manual Search

Install new channels manually. This option adds new channels without changing the list of the current channels.

1. Select [Manual Search] then press OK or RIGHT. The channel search screen will appear.



2. Press the RIGHT/LEFT key to select the channel frequency.
3. Press OK to start searching channels. If a channel is found, it is saved and added to the channels list. If channels can't be found, then exit the menu.

Country

Select your country of residence.

Antenna Power

Supply Power to Antenna.

Time Setting

To access the Menu, press MENU then selects [Time]. The Menu provides options to adjust the time settings. Press UP/DOWN to select an option and press RIGHT/LEFT to adjust the settings. Press EXIT to exit the menu.



Time Offset

Select auto or manual for GMT offset adjustments.

Country Region

Country Region is set automatically when you set the country in the channel search menu.

Time Zone

Select the Time Zone Offset when [Time Offset] is set to Manual.

Option

To access the Menu, press SETUP and select [Option]. The menu provides options to adjust the OSD Language, Subtitle Language, and Audio Language. Select an option and press RIGHT/LEFT to adjust the setting. Press EXIT to exit The Menu.



OSD Language

Select an OSD language.

Audio Language

Select the preferred audio language for watching TV channels. If the language is not available, the default program language will be used.

Subtitle Language

Select the preferred subtitle language.

Digital Audio

Set the desired audio format at the HDMI slot: PCM, Raw HDIM On, Raw HDMI Off, Off (if available).

System Setting

To access the Menu, press SETUP and select (System). The menu provides options to adjust the system settings. Press the UP/DOWN key to select an option and press RIGHT/LEFT to adjust the setting. Press EXIT to exit the Menu.



Set Password

Set or change the password for Locked programs. Enter your old Password or the default password'000000. You will then be asked to enter your new password. To confirm re-enter your new password. Once it is confirmed,

press EXIT to exit the Menu.

Master password 888888

Restore Factory Default

Reset your Set Top Box to the Default Factory Settings. In Main Menu select (Restore Factory Default) and press OK or RIGHT to select. Enter your password or the default password '01:00001 and press OK to confirm. This option will delete all preset channels and settings.

Information

View model, hardware, and software information.

Software update

USB

To access the Menu, press the SETUP button and select USB.



Multimedia

Switch to USB mode and plug in the USB to view files.

Photo Configure

Set the parameters for viewing photographs.

Movie Configure

Set the parameters for displaying movie subtitles.

Technical Specifications

Item	Sub Item	Parameter
	Input Frequency	170~230MHz 470~860MHz
	RF Input level	-25~-80dBm (64QAM) -10~-75dBm (256 QAM)
	IF Bandwidth	7MHz and 8MHz
	Modulation	QPSK, 16QAM, 64QAM, 256QAM
Video	Decoder Format	MPEG4 AVC/H.264 HP@L4 HEVC/H.265 HT@L4 MPEG2 MP@ML.HL
	Output Port	CVBS, HDMI
Audio	Decoder Format	MPEG-1(layer I&2&3)
	Audio output	Stereo
Power	Voltage	DC 9V (1.5 A)
	Working Power	< 10W

Troubleshooting

Problem	Potential Reasons	What to do
No picture	Power isn't connected	Connect the power
	The power switch is not on	Switch on the power
The screen shows No Signal	DVB-T cable not connected	Plug in the DVB-T cable
	Incorrect setting	Reset setting
No sound from the speaker	No or incorrect connection with the audio cable	Connect the audio cable correctly
	Sound on mute	Turn off the mute function
	Incorrect soundtrack	Try another soundtrack
The only sound, no image on the screen	No or incorrect connection with AV cable	Make sure cables are connected correctly
	The program is a radio program	Press the <TV/RADIO> key to shift into TV mode
Remote Controls not responding	The battery is exhausted	Change battery
	The remote Control is not facing or close enough to the Set Top Box	Adjust the position of the Remote Control and move closer to the unit
The image stopped suddenly or mosaic	The signal is too weak	Strengthen the signal

Remark about the reception of HD channels: the reception of HD DVB-T channels requires a better signal than normal SD quality channels. For that reason, the TV should be positioned at places where the reception quality is higher. If the reception is not strong enough, the image of HD channels can be interrupted or of bad quality.

Important remarks for the reception of the TV channels:

- The base of the antenna is magnetic; for better reception of the TV signal, if available, put the base of the antenna on a metallic surface like the bodywork of a car, a fridge, or heating...
- The AXX-1028 can only receive nonencrypted free TV channels.

Guarantee

Lenco offers service and warranty in accordance with European law, which means that in case of repairs (both during and after the warranty period) you should contact your local dealer. Important note: It is not possible to send products that need repairs to Lenco directly. Important note: If this unit is opened or accessed by a non-official service center in any way, the warranty expires.

This device is not suitable for professional use. In case of professional use, all warranty obligations of the manufacturer will be voided.

Disclaimer

Updates to Firmware and/or hardware components are made regularly. Therefore some of the instructions, specifications, and pictures in this documentation may differ slightly from your particular situation. All items described in this guide are for illustration purposes only and may not apply to a particular situation. No legal right or entitlements may be obtained from the description made in this manual.

Disposal of the Old Device

This symbol indicates that the relevant electrical product or battery should not be disposed of as general household waste in Europe. To ensure the correct waste treatment of the product and battery, please dispose of them in accordance with any applicable local laws of the requirement for disposal of electrical equipment or batteries. In so doing, you will help to conserve natural resources and improve standards of environmental


protection in the treatment and disposal of electrical waste (Waste Electrical and Electronic Equipment Directive).

Service

For more information and helpdesk support, please visit www.lenco.com

Lenco Benelux Bv; Thermiekstraat 1a, 6361 HB, The Netherlands.

Documents / Resources

	<p>AXXION AXX-1028 Portable LCD TV [pdf] User Manual AXX-1028, Portable LCD TV, AXX-1028 Portable LCD TV, LCD TV</p>
---	--

References

- lenco.com