



# AZATOM D20 Multiplex Digital Radio Wireless Bluetooth User Manual

[Home](#) » [AZATOM](#) » AZATOM D20 Multiplex Digital Radio Wireless Bluetooth User Manual 

## AZATOM D20 Multiplex Digital Radio Wireless Bluetooth



## Contents

- 1 Thank You
- 2 Package Contents
- 3 Controls & Interface
- 4 Operating Your Radio
- 5 DAB Radio
- 6 Dynamic Range Control (DRC)
- 7 Prune DAB
- 8 FM Radio
- 9 Display Settings
- 10 Using Presets
- 11 Bluetooth
- 12 Aux – In
- 13 Sleep Timer
- 14 Time & Date Settings
- 15 Alarm Settings
- 16 Snooze
- 17 Factory Reset
- 18 Earphones
- 19 Features
- 20 Important Safety Information
- 21 Specifications
- 22 Customer Support
- 23 Documents / Resources
  - 23.1 References

## Thank You

Thank You for purchasing the Multiplex D20 for your home.

To make the most of its features, we suggest reading the instruction manual thoroughly, which includes hints and tips to assist in resolving any problems.

Please go through all the safety guidelines before using it and keep this manual for future reference.

## Package Contents

Remove all items from the packaging. Retain the packaging. If you dispose of it please do so according to local regulations.

The following items are included:

 
- 1. Multiplex D20
- 2. Mains Adapter
- 3. Remote
- 4. Instruction Manual
- 5. Warranty Card

 


Please read the manual thoroughly before operating the device


**Caution:** Only use the supplied power adapter for this device. Do not use for other devices.

## Controls & Interface

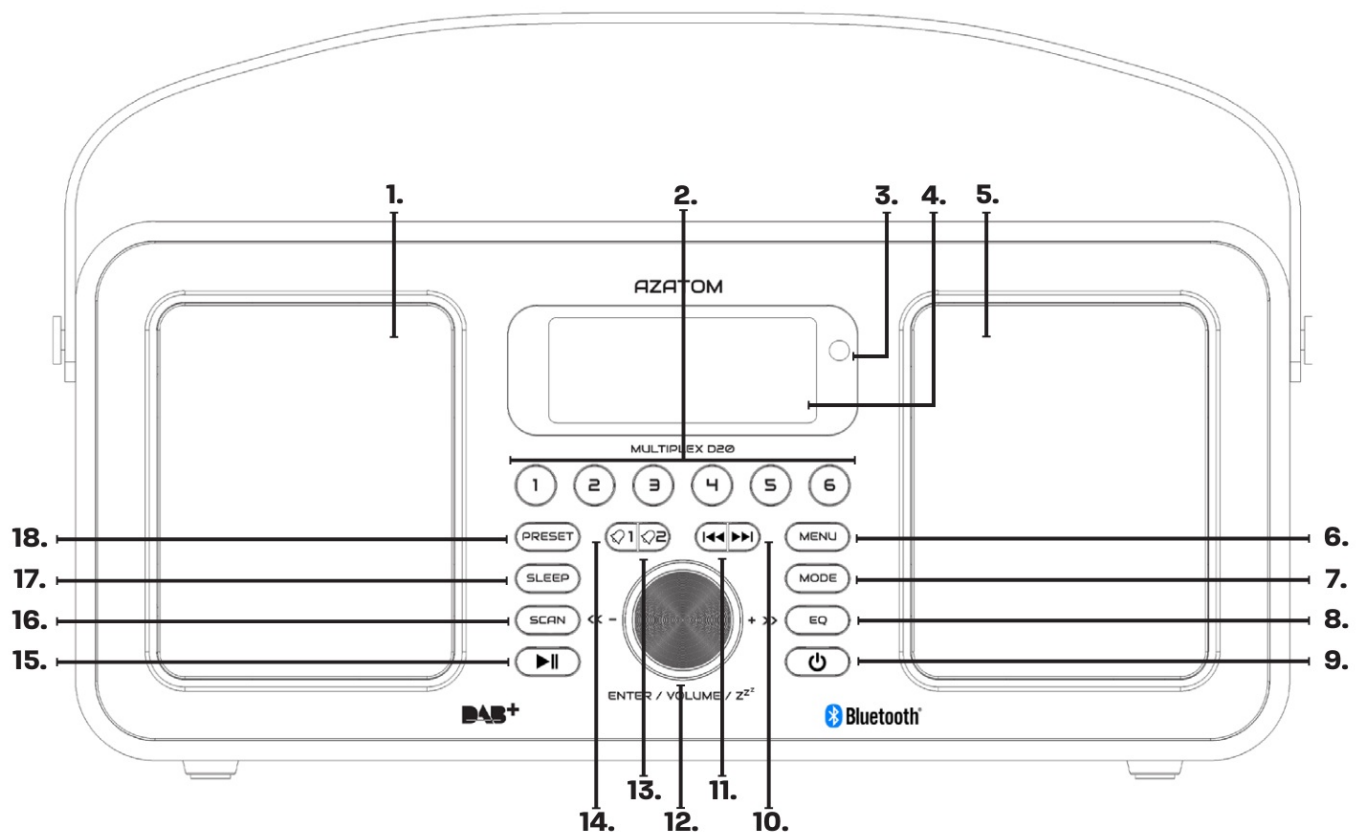

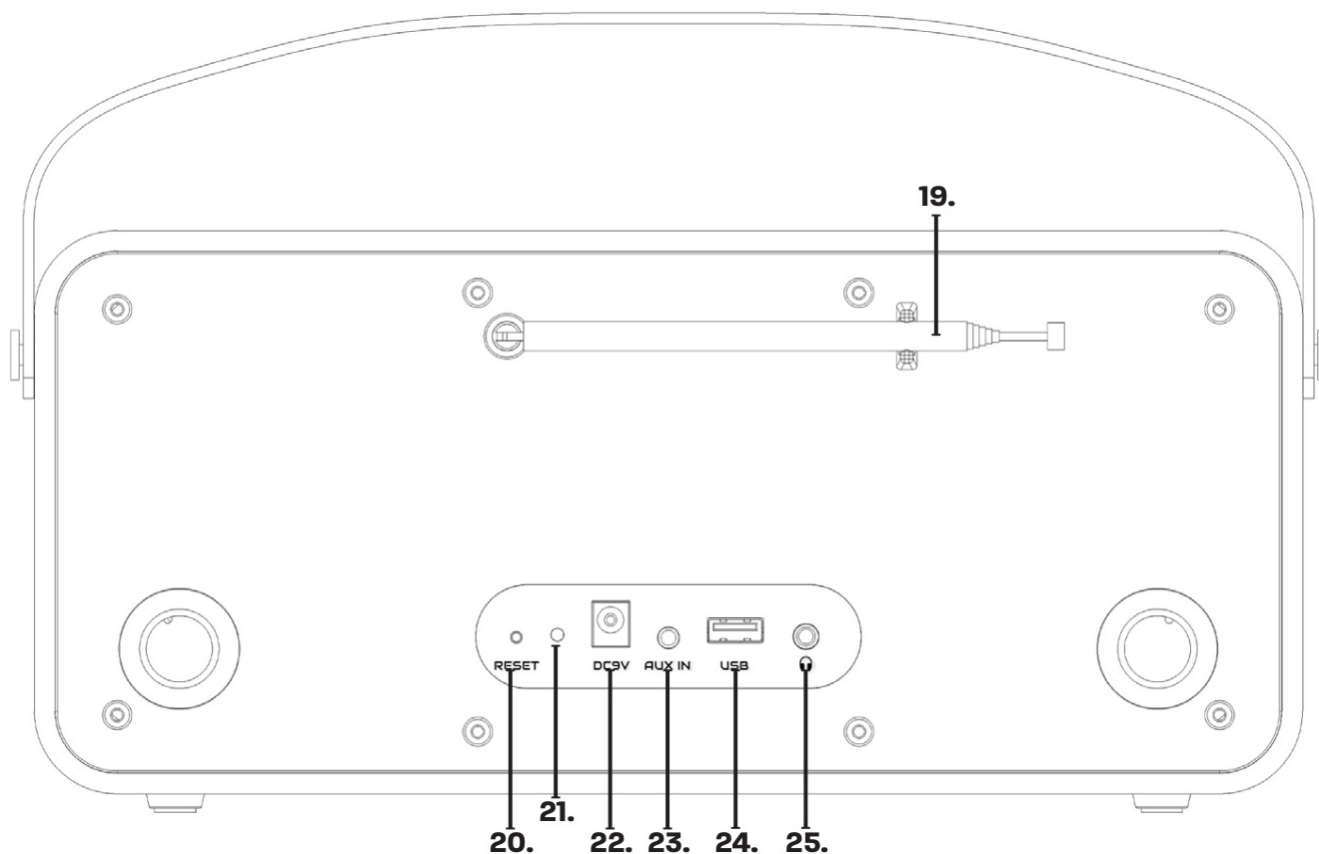

 1. Speaker Left
2. Presets 1-6
3. Remote Sensor
4. Screen Display
5. Speaker Right
6. Menu
7. Mode
8. EQ
9. Power
10. Fast-Forward
11. Re-Wind
12. Enter / Volume / Snooze
13. Alarm 2
14. Alarm 1
15. Play / Pause
16. Scan
17. Sleep
18. Preset
19. Aerial
20. Reset
21. Led
22. DC 9V Power Port
23. Aux In
24. USB Port

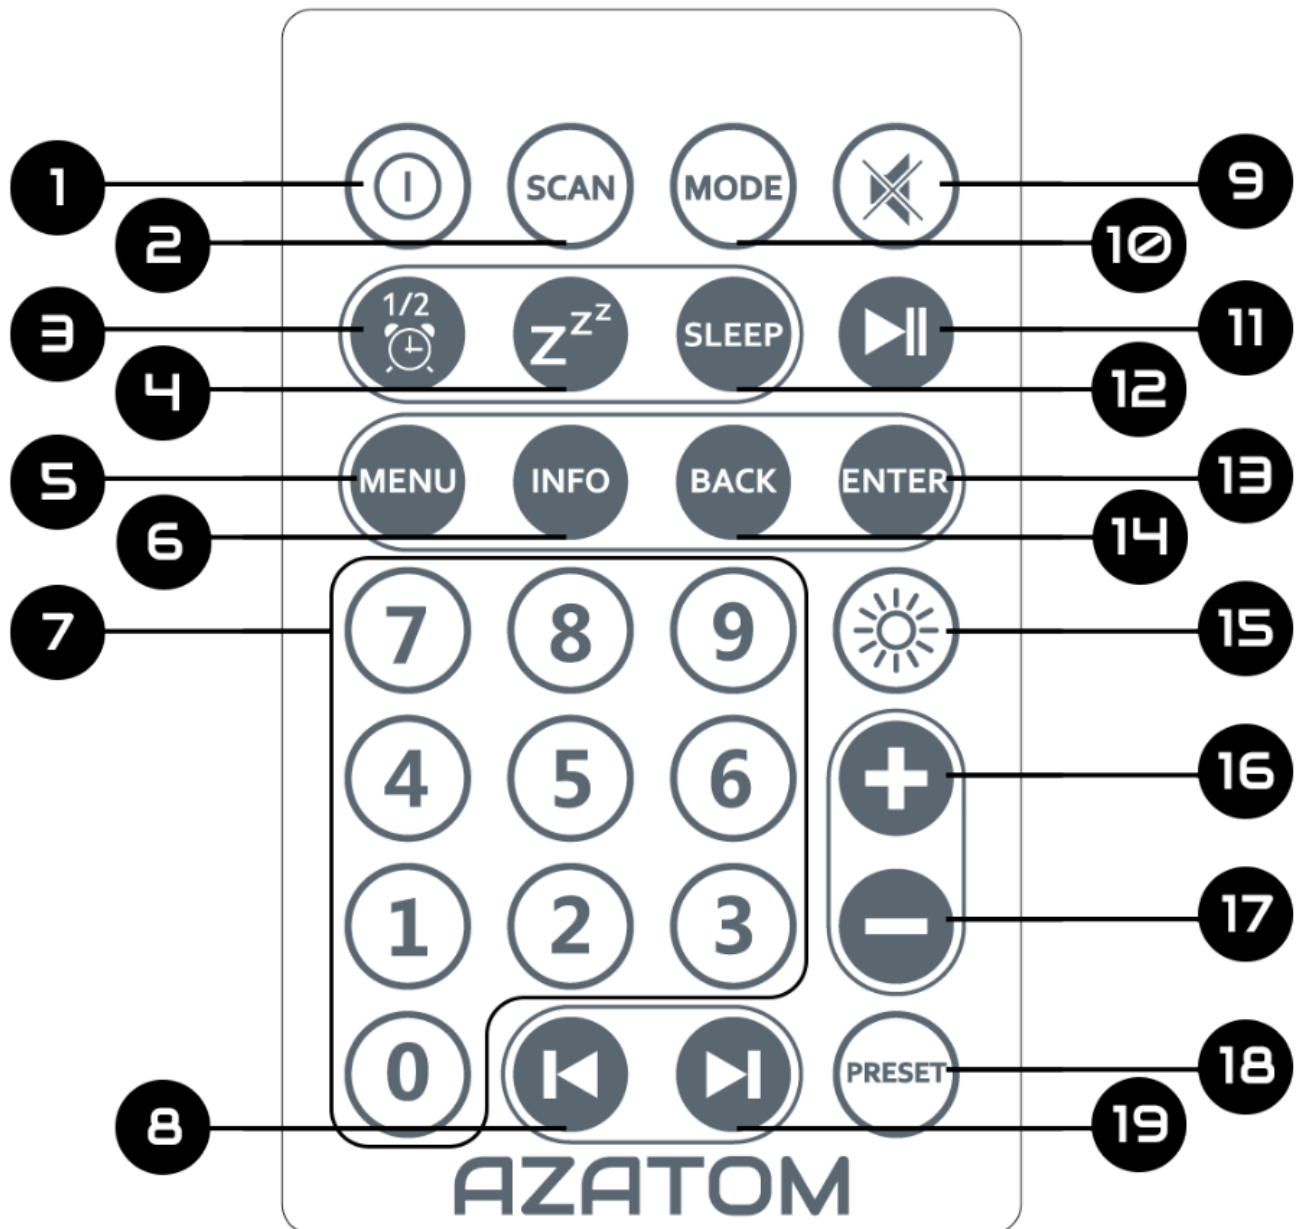

1. POWER ON/STANDBY – Short press for standby. Press and hold for power off.
2. SCAN – Press for full scan of available stations.
3. ALARM – Press once to enter the alarm setting. Press and hold to disable alarm / enable alarm
4. SNOOZE – Press to SNOOZE.
5. MENU – Press to enter the menu settings
6. INFO – Press for station information
7. PRESET NUMBERS – Press and hold to store. Press once to play
8. SKIP BACK – Move between different stations
9. MUTE – Volume ON/OFF
10. MODE – Switch between DAB / FM / Bluetooth /AUX
11. PLAY/PAUSE – Play and pause Bluetooth.
12. SLEEP – Press for 15,30,45,60,90, off minutes
13. ENTER – Confirm your choices
14. BACK – Press when in menu and you want to go back

15. BRIGHTNESS – High, Medium, Low, Off
16. VOLUME +
17. VOLUME –
18. PRESET – Press and hold for Preset Store. Press once for Preset List.
19. SKIP FORWARD – Move between different stations

## Operating Your Radio

1. Extend the Telescopic Aerial.
2. Press the POWER button to switch on your radio. The display will show “Azatom – Digital Radio.”
3. If this is the first time using the unit, it will go into DAB Mode and automatically start an ‘Auto Scan’ to search for available stations. (If DAB Mode has been previously utilized, the radio will automatically choose the most recently played station when it is switched back on after being powered off.)
4. Pressing SCAN at any time will automatically scan and store stations. (During the scanning process, the lower line of the display shows a bar graph indicating progress of the scan.)
5. When the scan is complete the first station (in alphanumeric order) will be selected. The clock will automatically set to the current time.
6. If the station list is still empty after the scan your radio will display “Service Not Available”.
7. If no stations are found, please ensure the aerial is extended and test the reception by doing another auto scan in a different location.

**Note:** Pressing the POWER button once will put the radio into standby and holding down the button will turn the radio off.

## DAB Radio

### Selecting a Station

With your radio powered on, carefully extend the telescopic aerial fully.

1. Press MODE to enter “DAB” mode.
2. The top line of the display shows the name of the station currently selected.
3. Press **◀◀** or **▶▶** buttons, then turn the dial to cycle through the list of available stations then press ENTER to tune into that station.

### Auto Scan

To find new stations you can auto scan as follows.

1. Pressing SCAN at any time will automatically scan and store stations.
2. Or press the MENU button, then use the dial to highlight “Full Scan” and press ENTER.
3. The display will show “Scanning...” and your radio will perform a scan of the Band III DAB channels. As new radio stations are found the station counter on the right-hand side of the display will increase and the radio stations will be added to the list stored in the radio.

## Secondary Services – DAB

1. Some radio stations have additional secondary services associated with them. If a radio station has a secondary service associated with it the display will show ">>" next to the station name on the station list. The secondary service will then appear immediately after the primary services as you turn the dial.
2. Press ENTER to confirm the station selection.
3. When the secondary service shuts down, your radio will automatically switch back to the main radio station if it is available.

## DAB Manual Scan

Manual tuning allows you to tune to the various DAB Band III channels.  
UK DAB stations located in the range 11B to 12D.

1. Press MENU, then turn the dial to highlight "Manual Tune" and press ENTER.
2. Turn the dial to highlight your desired channel.
3. Press ENTER, the graph will indicate the signal strength, and the upper line will show the name of the DAB multiplex (group of radio stations). Any stations found will be added to the stored list in the radio.
4. Press MENU to return to the normal tuning mode.

## Dynamic Range Control (DRC)

Dynamic Range Control (also known as DRC) can make quieter sounds easier to hear when your radio is used in a noisy environment.

1. Press MODE to enter "DAB" mode.
2. Press MENU then turn the dial until the display shows "DRC". Press ENTER to enter the settings menu.
3. Turn the dial to select the required DRC setting (the default is OFF).  
DRC OFF – DRC is switched off, broadcast DRC will be ignored.  
DRC LOW – DRC level is set to 1/2 that sent by broadcaster.  
DRC HIGH – DRC level is sued as sent by broadcaster.
4. Press ENTER to confirm the setting. The display will return to the previous display.

**Note:** Not all DAB broadcasts are able to use the DRC function. If the broadcaster does not support DRC, then the DRC setting in the radio will have no effect.

## Prune DAB

**Prune :** (To remove stations which are listed but unavailable).

1. In DAB mode, press MENU and turn the dial until "Prune" is highlighted on the display then press ENTER.
2. Turn ENTER dial to find "YES". Press ENTER button to confirm to prune.

**Note:** this removes all the invalid stations indicated in the station list with a "?" in front of the station name.

## FM Radio

## Selecting a Station

With your radio powered on, carefully extend the telescopic aerial fully.

1. Press MODE to enter "FM" mode.
2. The top line of the display shows the frequency of the station currently selected.
3. Press **◀◀** or **▶▶** buttons to cycle through the list of available stations and fine tune the FM frequency by 0.05mHz then press ENTER to tune into that station.

## Auto Scan

1. Press MODE to enter "FM" mode.
2. Press the SCAN button. Your radio will begin scanning for the next available frequency and will immediately play that station.
3. You can also press and hold the **◀◀** or **▶▶** buttons, to fast search to the next available FM station.

## Display Settings

### Backlight Auto Setting:

1. Press MENU and turn the dial until "Settings " is highlighted on the display then press ENTER.
2. Turn the dial until "Backlight " is highlighted on the display then press ENTER.
3. Turn the dial until "Backlight Auto" is highlighted then press ENTER.
4. Turn the dial to choose between 10, 20, 30, 45, 60, 90, 120, 180 seconds, or "ON" to cancel auto dimmer. press ENTER to set.

### Set Brightness:

While in any playing mode, push the DIMMER button on the dial to cycle through the different levels of Brightness. There is four levels of brightness to choose from, High, Medium, Low and Off.

## Using Presets

You can save your preferred DAB and FM radio stations to the preset station memories. Your radio has a total of 80 memory presets, with 40 allocated for DAB and 40 for FM. The steps to store presets are the same for both DAB and FM modes.

1. With the radio powered on, Press MODE button to choose "DAB" or "FM" mode.
2. **IMPORTANT:** Make sure the station you want to preset is actually playing.
3. Press and hold the PRESET button for until you see "Preset store" highlighted on the screen (not "Preset Recall")
4. Using the dial, scroll along to the desired preset number that you wish to store the station to and press ENTER.
5. Once correctly stored, "Preset 01 Stored" will display on the screen.

The station will be stored under the chosen preset. Repeat this process for any other stations you wish to save.

**Note:** Stations which have been stored in a preset slot may be overwritten by following the above procedure and



selecting a already used slot.

## Fast Preset

**Radio** – To fast preset use the numbered buttons “1, 2, 3, 4, 5 & 6” on the radio. Play the station you want to save. Press and hold the numbered button until you see “Preset stored”. You can choose any of the preset number buttons. The maximum number of presets you can save this way is 6.

**Remote** – Use the numbered buttons 1,2,3,4,5,6,7,8,9 on the remote. Play the station you want to save. Press and hold the numbered button on the remote until you see “Preset stored”. You can choose any of the preset number buttons. The maximum number of presets you can save this way is 9.

## Recalling Presets:

1. With the radio powered on, Press MODE button to choose “DAB” or “FM” mode.
2. Press the PRESET button to see “Preset Recall” not “Preset Store”
3. Using the dial. Scroll along to the desired preset number that you wish to play and press ENTER.

## Fast Preset Recall:

If you have already saved your presets you can choose which one to play with the fast recall buttons.


**Radio** – Press 1, 2, 3, 4, 5 & 6 at any time to play any of your stored presets.

**Remote** – Press 1, 2, 3, 4, 5, 6, 7, 8, 9 at any time to play any of your stored presets.

**Note:** If you have not previously stored a preset station and the preset button is pressed “Empty preset” will be displayed.

## Bluetooth

To pair your device via Bluetooth for the first time:

1. Press MODE until “BT “ is highlighted on the display then press ENTER.
2. After a few seconds, the speaker will automatically go into pairing mode.
3. On your Bluetooth device (such as mobile phone) do a search and once available please select “Azatom Multiplex D20”.
4. Once connected, the screen will say “Bluetooth connected”.
5. You can press the  button on the front of the Multiplex D20 to play and pause your music.

## Aux – In

Aux-in mode plays audio from an external source such as a smart phone.

1. Plug one end of a 3.5mm audio cable (excluded) into the headphone or line out jack on your player or device, plug the other end of the cable into the unit Aux-In port.
2. Turn on the external audio source and play your device.
3. Press MODE button to “Aux Input” mode.
4. The volume level can be now controlled through the main unit.

Please ensure the cable is disconnected to listen to the radio in other modes such as DAB and FM.

## Sleep Timer

Your radio can be set to turn off after a preset time period has elapsed.  
The sleep setting can be adjusted from 15 to 90 minutes.

1. Press the SLEEP button.
2. Turn the dial to cycle through the sleep timers. Choose between 15, 30, 45, 60 and 90 minutes or Sleep Off which will cancel the sleep time.
3. Press ENTER to confirm the setting. The sleep timer indicator "Sleep" will show on the display alongside a small countdown. Your radio will switch off after the pre-set sleep time has elapsed.
4. To cancel the sleep timer, Press SLEEP and cycle through to "Sleep Off" and press ENTER to confirm.

## **Time & Date Settings**

When the radio is first turned on and the scan has completed, the time and date should have automatically been set. If there is no DAB/FM signal available, you will need to set the time and date manually when turned on for the first time.

1. Press MENU and turn the dial until "Settings " is highlighted on the display then press ENTER.
2. Turn the dial until "Time/Date" is highlighted on the display then press ENTER.
3. Turn the dial to select "Set Time/Date" then press ENTER. You can also use the dial to set the AUTO UPDATE, 12/24 Hour Modes and Date Format.
4. Turn the dial to set the hour, then press ENTER.
5. Turn the dial to set the minutes, then press ENTER.
6. Turn the dial to set the day, then press ENTER.
7. Turn the dial to set the month, then press ENTER.
8. Turn the dial to set the Month, then press ENTER.
9. After pressing enter, the time and date will be saved.

## **Alarm Settings**

**NOTE:** PLEASE SELECT A RADIO STATION BEFORE SETTING THE ALARM.

You will be given the option to choose from last station used or one of your favourite preset channels.

1. Press either ALARM 1 or ALARM 2 to enter the setting menu.
2. Use the dial to set the alarm hour and press ENTER to confirm.
3. Use the dial to set the alarm minutes and press ENTER to confirm.
4. Use the dial to chose a duration: 15, 30, 45, 60, 75, 90 minutes and press ENTER to confirm.
5. Use the dial to set alarm sound source, chooze between Buzzer / FM / DAB and press ENTER to confirm.
6. Use the dial to set when the alarm is active, you can choose Once / Daily / Weekdays / Weekends. Press ENTER to confirm.
7. Use the dial to set the alarm volume and press ENTER to confirm.
8. Use the dial to choose whether you want the alarm ON/OFF and press ENTER to confirm.

## **Enable or Disable Alarms**

At any time you can disable or enable the alarm. Press and hold the ALARM button to disable or enable the alarm. The display will show the alarm logo when enabled.

## **Snooze**

1. When the alarm sounds, pressing the dial will temporarily silence the alarm, you can choose the time from 5, 10, 15 & 30 minutes by turning the dial.
2. The snooze function also has a countdown allowing you to see how long before the alarm re-sounds.

## **Stop The Alarm**

When the alarm is sounding you can press ALARM or STANDBY buttons to silence the alarm sound. The radio will then return to Standby mode – This cancels the alarm, to snooze please use the dial.

## **Factory Reset**

If your radio fails to operate correctly, or some digits on the display are missing or incomplete, it may be possible to restore normal operation by carrying out a system reset. This will restore the radio's settings to their factory defaults. If you have moved to a different part of the country and you wish to erase local DAB radio stations that are no longer available from the stored list, then you may carry out this procedure.

**Note:** All your presets will be erased throughout this procedure

1. Press MENU and use the dial until "Settings " is highlighted on the display then press ENTER.
2. Press MENU and use the dial until "Factory Reset " is highlighted on the display then press ENTER.
3. If you wish to perform the reset operation, use the dial until "YES" is highlighted on the display and press ENTER. A full reset of your radio will be performed, All preset stations & station lists will be erased.  
If you do not wish to reset your radio turn the dial until "NO" is highlighted and press ENTER to confirm. Your radio will return to the previous menu.
4. After a system reset a scan of the DAB band will be automatically performed.

If your radio locks at any time you can use the RESET button on the rear of the radio. Just press it once and it will reboot.

## **Earphones**

**Note:** Earphones are not included with the Multiplex D20 Radio

1. Plug the earphones into the Earphone socket on the rear of your radio.
2. Check that the Volume level is not too loud before placing the ear-pieces into your ears.

## **FM Stereo/Mono (Earphones only)**

Use this if a FM station being received has a weak signal and some distortion is audible (especially when listening using earphones).

1. Press MENU and turn the dial until "Settings " is highlighted on the display then press ENTER.
2. Turn the dial until "Audio Setting " is highlighted on the display then press ENTER.
3. Turn the dial until "Forced Mono " is highlighted on the display then press ENTER.
4. To return to stereo mode turn the dial until "Audio Setting" is highlighted then press the ENTER.

5. Turn the dial to highlight "Stereo Allowed" and press ENTER. Your radio will switch to stereo mode.

**Note:** Stereo listening is only available when listening via earphones.

## Features



## Important Safety Information

1. Read these instructions.
2. Keep these instructions. Instructions are also available for download at [www.azatom.com](http://www.azatom.com)
3. Heed all Warnings.
4. Follow all instructions.
5. Do not clean the apparatus near or with water.
6. Clean only with a Dry Cloth.
7. Do not block any ventilation openings. Install in accordance with the manufacturer's instructions.
8. Do not install near any heat sources such as radiators, heat registers, stoves, or other apparatus (including amplifiers) that produce heat.
9. Protect the power cord from being walked on or pinched particularly at plugs, convenience receptacles, and the point where they exit from the apparatus.
10. Only use attachments/accessories specified by the manufacturer.
11. Unplug this apparatus during light storms or when unused for long periods of time.
12. Refer all servicing to qualified service personnel. (Servicing is required when the apparatus has been damaged in any way, such as power supply cord or plug is damaged, liquid has been spilled or objects have fallen into the apparatus, the apparatus has been exposed to rain or moisture, does not operate normally or has been dropped.)
13. No naked flame sources, such as lit candles, should be placed on the apparatus.
14. Dispose of used electrical products and batteries safely according to your local authority and regulations.

## ADDITIONAL WARNINGS

The apparatus shall not be exposed to dripping or splashing and no objects filled with liquid, such as vases, shall be placed on apparatus.

Main plug is used to disconnect device and it should remain readily operable during intended use. In order to disconnect the apparatus from the main mains completely, the mains plug should be disconnected from the main socket outlet completely.

If any battery is included it shall not be exposed to excessive heat such as sunshine, fire or the like.W




## RECYCLING ELECTRICAL PRODUCTS

You should now recycle your waste electrical goods and in doing so help the environment.



— This symbol means an electrical product should not be disposed of with normal household waste. Please ensure it is taken to a suitable facility for disposal when finished with.

**IMPORTANT:** Please read all instructions carefully before use and keep for future reference

-  Risk of electric shock. Do not open
-  Read all instructions carefully before use and keep for future reference.
-  When servicing, use only identical replacement parts.



**CAUTION**  
RISK OF ELECTRIC SHOCK  
DO NOT OPEN



**ATTENTION**  
RISQUE D'ELECTROCUTION  
NE PAS OUVRIR



## Specifications

**Max Output power 30 Watts**

**S/N ratio:**  $\geq 70\text{dB}$ A

**Distortion:**  $\leq 1\%$

**Frequency Response:** 100HZ-18KHZ

**Audio input mode:** DAB, FM, BT, AUX

**Adjustment form:** knob & button adjustment

**Speaker size:** 70mm Internal magnetism (4 ohms)

**Input power:** 3.7V / 2000mAh lithium-ion battery

**DAB receive input sensitivity :** -95dBm

**FM receive input sensitivity :** -105dBm

**Working temperature:**  $-10^{\circ}\text{C}$ - $+50^{\circ}\text{C}$

**Storage ambient temperature:**  $-20^{\circ}\text{C}$  ~  $+70^{\circ}\text{C}$

**Unit size:** 180mm x 130mm x 95mm (HxWxD)

**Weight:** About 860 g

**Adapter Model:** KZ0501000V

**INPUT:** 100-240V 50/60Hz 0.3A Max

**Output:** 9V 2000mA

**CAUTION:** Only use the supplied power adapter for this device.  
Do not use for other devices.

## Customer Support

This manual is available to download online at [www.azatom.com](http://www.azatom.com)

AZATOM© 2020 ALL RIGHTS RESERVED. AZATOM® IS PART OF AZATOM GROUP LIMITED.


SEE SITE FOR SAFETY INFORMATION. AZATOM® RESERVE THE RIGHT TO WITHDRAW ANY AND ALL PROMOTIONS WITHOUT NOTICE. FOR FULL WARRANTY, EXTENDED WARRANTY AND PROMOTIONAL OFFER TERMS & CONDITIONS PLEASE VISIT [WWW.AZATOM.COM/TERMS-CONDITIONS](http://WWW.AZATOM.COM/TERMS-CONDITIONS)

@AZATOM





## Documents / Resources

	<p><a href="#">AZATOM D20 Multiplex Digital Radio Wireless Bluetooth</a> [pdf] User Manual</p> <p>D20 Multiplex Digital Radio Wireless Bluetooth, D20, Multiplex Digital Radio Wireless Bluetooth, Digital Radio Wireless Bluetooth, Radio Wireless Bluetooth, Wireless Bluetooth, Bluetooth</p>
---	--

## References

- [🔗 Terms & Conditions | Best of British Audio Electronics](#)
- [User Manual](#)

[Manuals+](#), [Privacy Policy](#)

This website is an independent publication and is neither affiliated with nor endorsed by any of the trademark owners. The "Bluetooth®" word mark and logos are registered trademarks owned by Bluetooth SIG, Inc. The "Wi-Fi®" word mark and logos are registered trademarks owned by the Wi-Fi Alliance. Any use of these marks on this website does not imply any affiliation with or endorsement.