

AzureWave AW-CU474-UNO Arduino UNO Adaptor for AICM User Guide


[Home](#) » [AzureWave](#) » AzureWave AW-CU474-UNO Arduino UNO Adaptor for AICM User Guide 

Contents

- [1 AzureWave AW-CU474-UNO Arduino UNO Adaptor for AICM](#)
- [2 Revision History](#)
- [3 Hardware Specification](#)
- [4 Hardware Setup](#)
- [5 Block Diagram and Schematic](#)
- [6 Documents / Resources](#)
- [7 Related Posts](#)



AzureWave AW-CU474-UNO Arduino UNO Adaptor for AICM

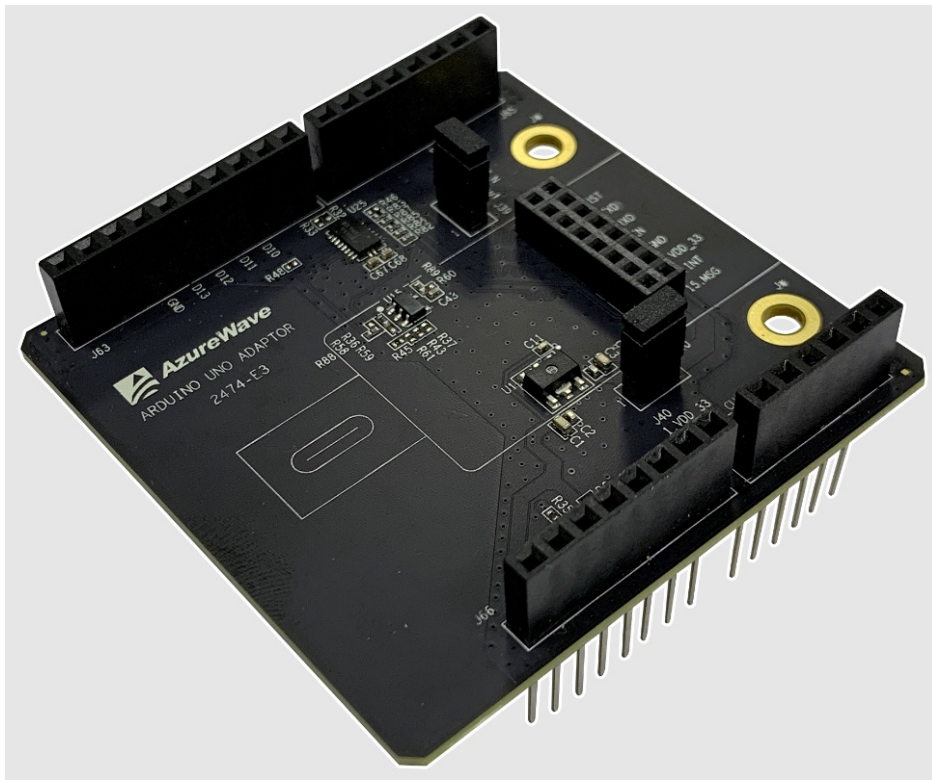


The information contained herein is the exclusive property of AzureWave and shall not be distributed, reproduced, or disclosed in whole or in part without prior written permission of AzureWave.

Revision History

Version	Revision Date	Description	Initials	Approved
0.1	2021/01/18	Initial version	Steven Jian	Chinhao Liao


Hardware Specification

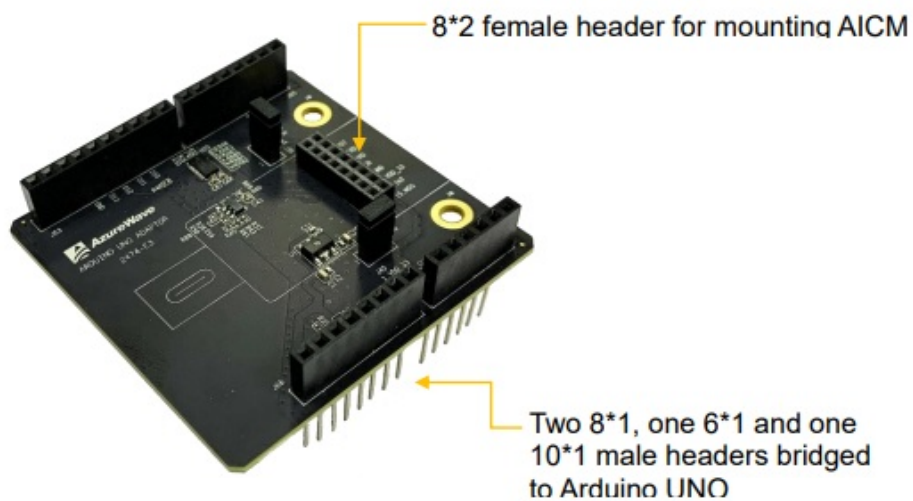


Hardware Setup

- Remove all the jumpers (2mm pitch) on the dongle (AW-CU300AV3-USB or AW-CU427-USB) before mating it

with the Arduino Uno through AW-CU474-UNO. The digital logic level & power supply input of the dongle are 3.3V. DO NOT directly connect the dongle to the Arduino Uno.

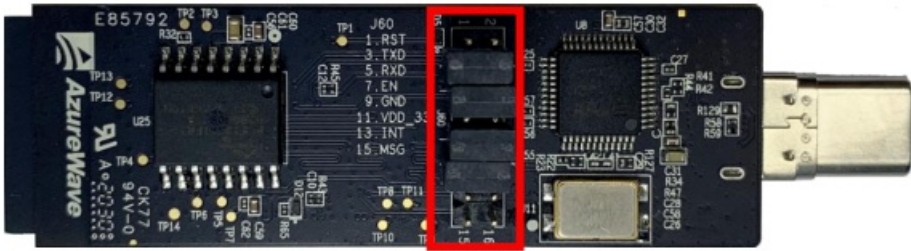


- AW-CU300AV3-USB or AW-CU427-USB connected to Arduino Uno through AW-CU427-UNO


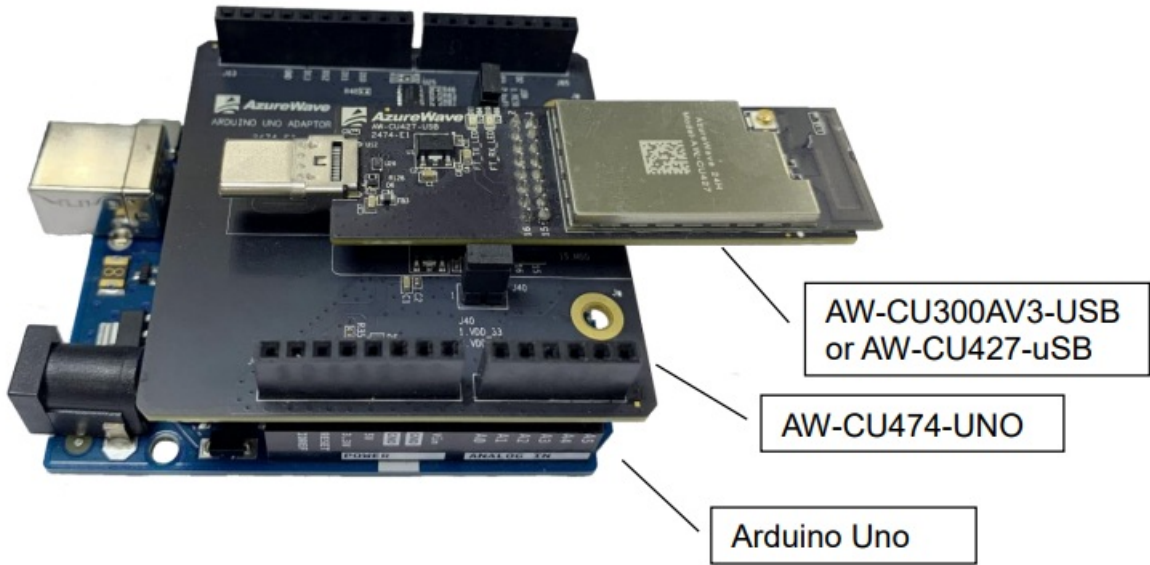


Block Diagram and Schematic

Block Diagram for AW-CU474-UNO

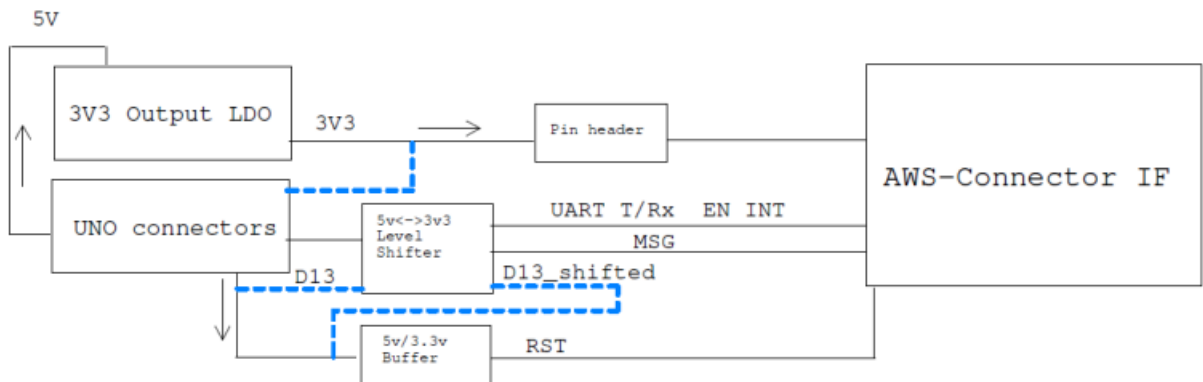

Schematics for Arduino Uno Adaptor

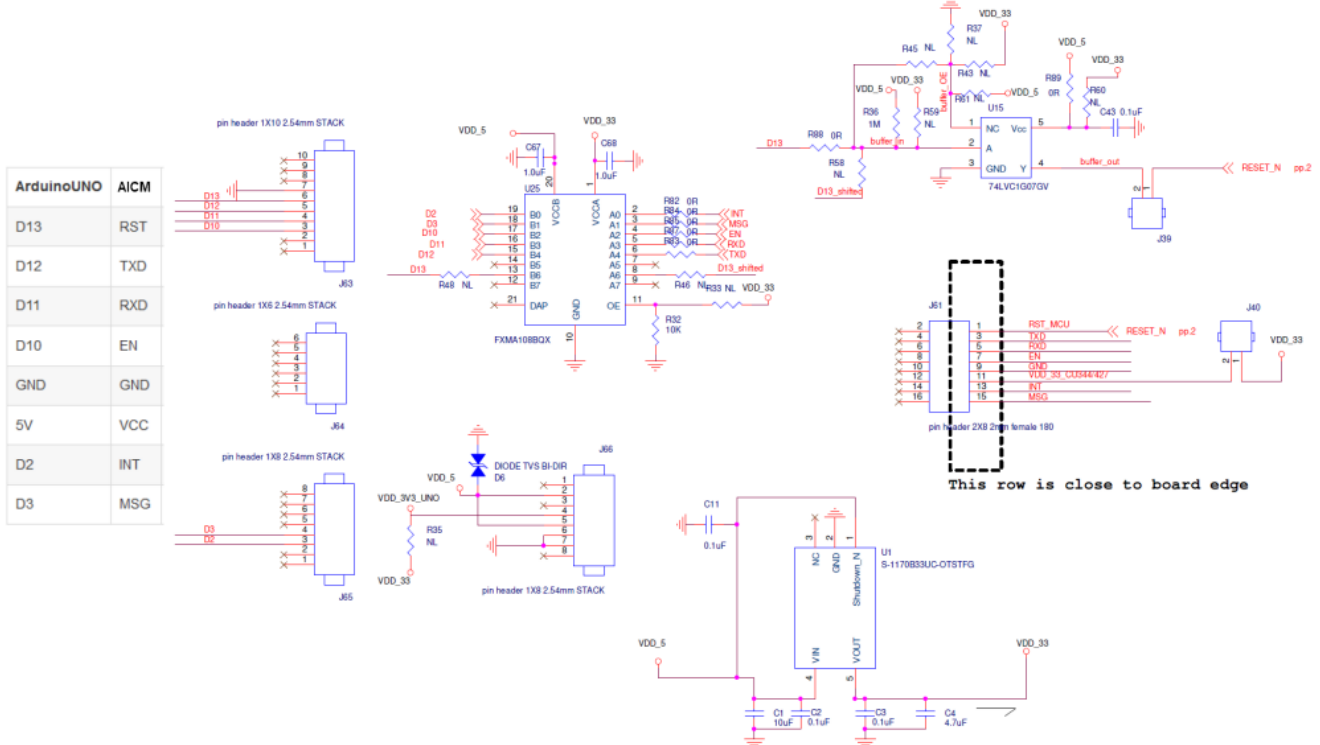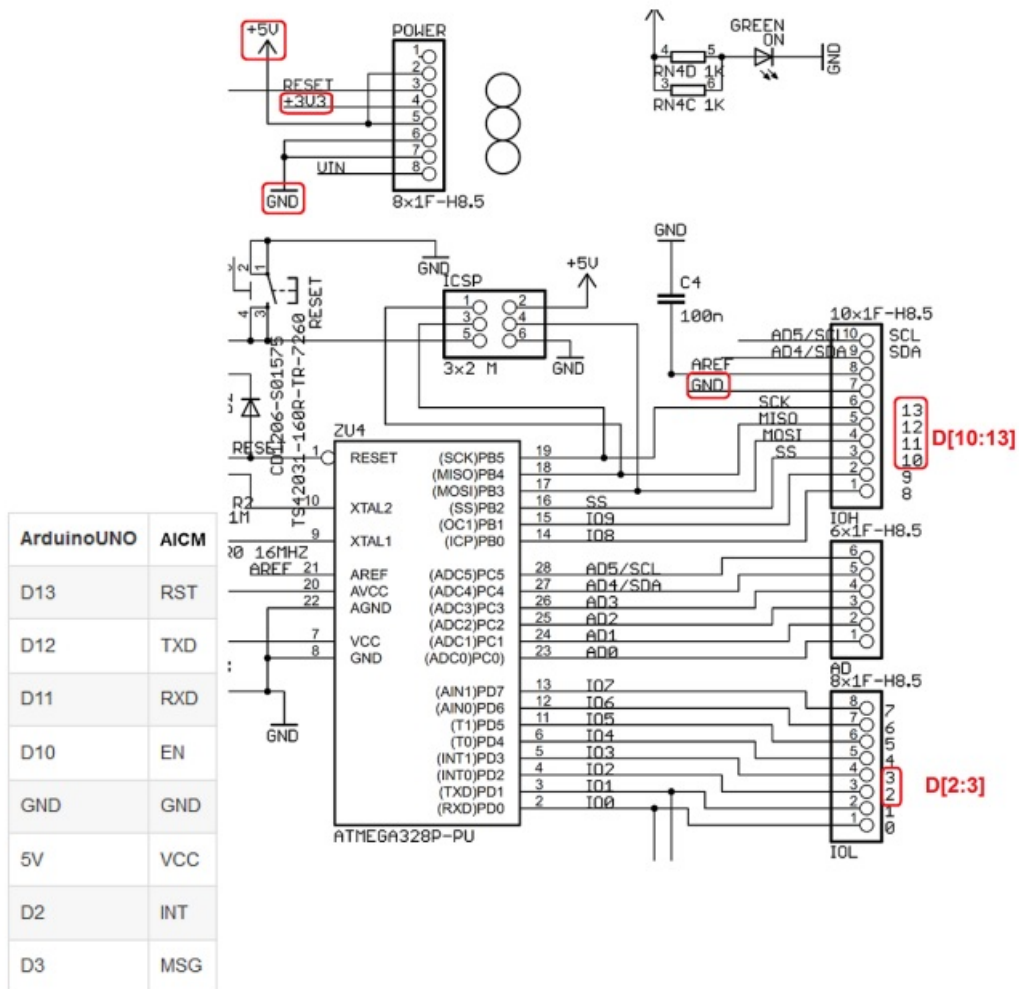

 AW-CU474-UNO Arduino UNO Adaptor for AICM User Guide Rev 0.1 (For Standard)	AzureWave AW-CU474-UNO Arduino UNO Adaptor for AICM [pdf] User Guide AW-CU474-UNO, Arduino UNO Adaptor for AICM
--	---