

AzureWave AW-HM610 MHz Channel Bandwidth User Guide

Home » AzureWave » AzureWave AW-HM610 MHz Channel Bandwidth User Guide 🖺




Contents

- 1 AzureWave AW-HM610 MHz Channel
- **Bandwidth**
- 2 Overview
- 3 Dimensions
- 4 Documents / Resources
 - 4.1 References
- **5 Related Posts**



AzureWave AW-HM610 MHz Channel Bandwidth

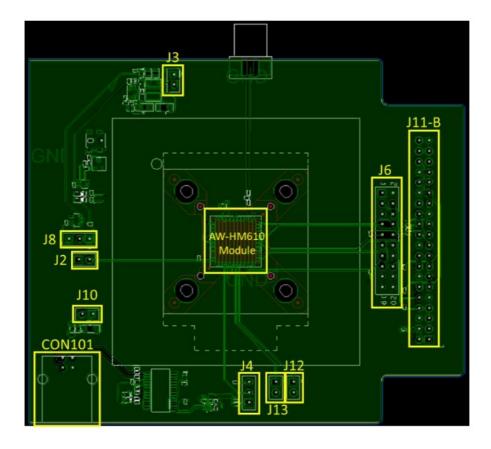

The information contained herein is the exclusive property of AzureWave and shall not be distributed, reproduced, or disclosed in whole or in part without prior written permission of AzureWave.

Revision History

Version	Revision Date	Description	Initials	Approved
01	2023/11/30	Initial Version	Daniel Lee	N.C. Chen


Overview


Device supported

This document is used for AW-HM610.

Reference Design

Please see the below pages.

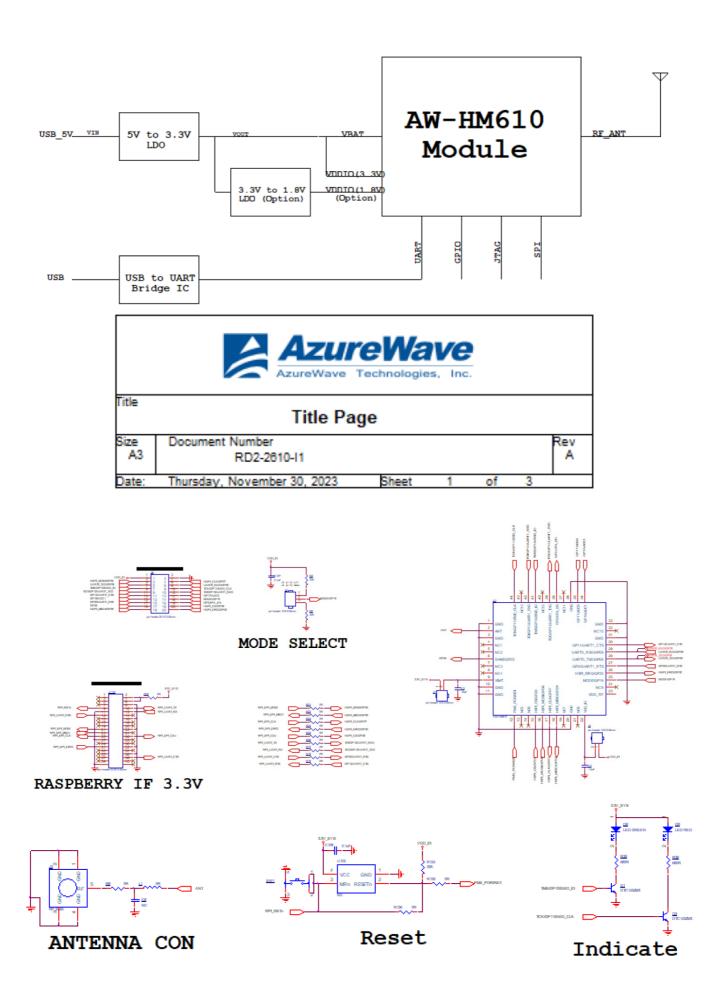

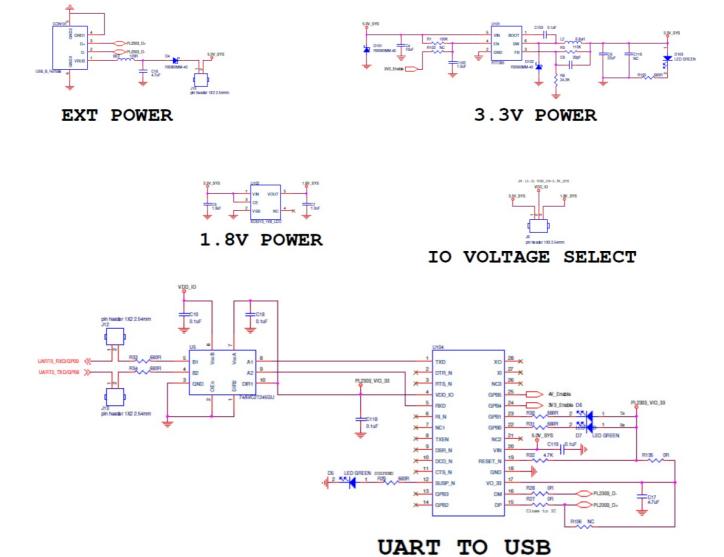

The information contained herein is the exclusive property of AzureWave and shall not be distributed, reproduced, or disclosed in whole or in part without prior written permission of AzureWave.

Documents / Resources



References

User Manual

Manuals+, Privacy Policy

This website is an independent publication and is neither affiliated with nor endorsed by any of the trademark owners. The "Bluetooth®" word mark and logos are registered trademarks owned by Bluetooth SIG, Inc. The "Wi-Fi®" word mark and logos are registered trademarks owned by the Wi-Fi Alliance. Any use of these marks on this website does not imply any affiliation with or endorsement.