



UK B-MIX38-IP Mix  
Input Output  
Module with IP  
Connectivity



## B METERS UK B-MIX38-IP Mix Input Output Module with IP Connectivity Instruction Manual

[Home](#) » [B METERS UK](#) » B METERS UK B-MIX38-IP Mix Input Output Module with IP Connectivity Instruction Manual 

### Contents

- [1 B METERS UK B-MIX38-IP Mix Input Output Module with IP Connectivity](#)
- [2 Product Usage Instructions](#)
- [3 SPECIFICATION](#)
- [4 TOP PANEL](#)
- [5 TERMINALS OF THE DEVICE](#)
- [6 RS485 BIASING RESISTORS](#)
- [7 POWER SUPPLY](#)
- [8 FCC COMPLIANCE NOTE](#)
- [9 WIRING](#)
- [10 INSTALLATION GUIDELINE](#)
- [11 Documents / Resources](#)
  - [11.1 References](#)
- [12 Related Posts](#)



**B METERS UK B-MIX38-IP Mix Input Output Module with IP Connectivity**



## Product Specifications

- Power supply: Universal inputs
- Digital inputs: 12x dry contact input, high-speed pulse counter up to 100 Hz
- Analog outputs: 6x 0-10 V DC output, maximum load up to 20 mA per channel, 60 mA maximum total load
- Digital outputs: 12x relay output
- Interface: RS485, Modbus or BACnet; Ethernet, Modbus TCP/IP or BACnet IP
- Address: Set by switch in range from 0 to 99
- Baudrate: Set by switch in range from 2400 to 115200 bps
- Ingress protection rating: IP40 – for indoor installation
- Temperature: 5 to 95% RH (without condensation)
- Connectors: RS485, Ethernet
- Dimension: 160x110x62 mm (6.30x4.33x2.44 in)
- Mounting: DIN rail mounting (DIN EN 50022 norm)
- Housing material: Plastic, self-extinguishing PC/ABS

## Product Usage Instructions

### Installation Guidelines

Please read the instructions before using or operating the device. For any questions, contact iSMA CONTROLLI Support Team [atsupport@ismacontrolli.com](mailto:atsupport@ismacontrolli.com). Electrical installation must comply with national wiring codes and local regulations.

### Power Supply Considerations

Ensure proper power supply connections as per the specified ratings to avoid any damage to the device.

### Connection Instructions

- **Voltage Measurement:** Connect to universal inputs
- **Current Measurement:** Connect to universal inputs
- **Temperature Measurement:** Connect to universal inputs
- **Dry Contact Inputs:** Connect to digital inputs

- **Digital Outputs:** Connect for connection of resistive and inductive loads
- **Analog Outputs:** Connect for connection of actuators

### **Communication Setup**

Configure the interface address and baudrate as per your requirements for smooth communication.

### **Maintenance Recommendations**

Regularly check for any loose connections or signs of wear and tear. Keep the device clean and free from dust.

### **Frequently Asked Questions (FAQ)**

#### **Q: What should I do if I encounter an error code on the device?**

**A:** Refer to the user manual for error code explanations. If the issue persists, contact iSMA CONTROLLI Support Team for assistance.

#### **Q: Can I use this device outdoors?**

**A:** No, the device is rated for indoor installation only (IP40 protection).


#### **Q: How many devices can be connected on the RS485 bus?**

**A:** Up to 128 devices can be connected on the RS485 bus.

### **SPECIFICATION**

Power supply	DC: 24 V $\pm$ 20%, 7.4 W; AC: 24 V $\pm$ 20%, 11.1 VA		
Universal inputs	8x voltage, current and resistance measurement, dry contact		
Digital inputs	12x dry contact input, high-speed pulse counter up to 100 Hz		
Analog outputs	6x 0-10 V DC output, maximum load up to 20 mA per channel, 60 mA maximum total load for analog outputs		
Digital outputs	12x relay output	Maximum ratings	UL compliant ratings
	Resistive load max.	3 A @ 230 V AC 3 A @ 30 V DC	3 A @ 24 V AC 3 A @ 30 V DC
	Inductive load max.	75 VA @ 230 V AC 30 W @ 30 V DC	8 VA @ 24 V AC 30 W @ 30 V DC
Interface	RS485, Modbus or BACnet, up to 128 devices on the bus Ethernet, Modbus TCP/IP or BACnet IP		
Address	Set by switch in range from 0 to 99		
Baudrate	Set by switch in range from 2400 to 115200 bps		
Ingress protection rating	IP40 – for indoor installation		
Temperature	Operating: -10°C to +50°C (14°F to 122°F) Storage: -40°C to +85°C (-40°F to 185°F)		
Relative humidity	5 to 95% RH (without condensation)		
Connectors	Separable, max 2.5 mm <sup>2</sup> (18 – 12 AWG)		
Dimension	160x110x62 mm (6.30x4.33x2.44 in)		
Mounting	DIN rail mounting (DIN EN 50022 norm)		
Housing material	Plastic, self-extinguishing PC/ABS		

## TOP PANEL

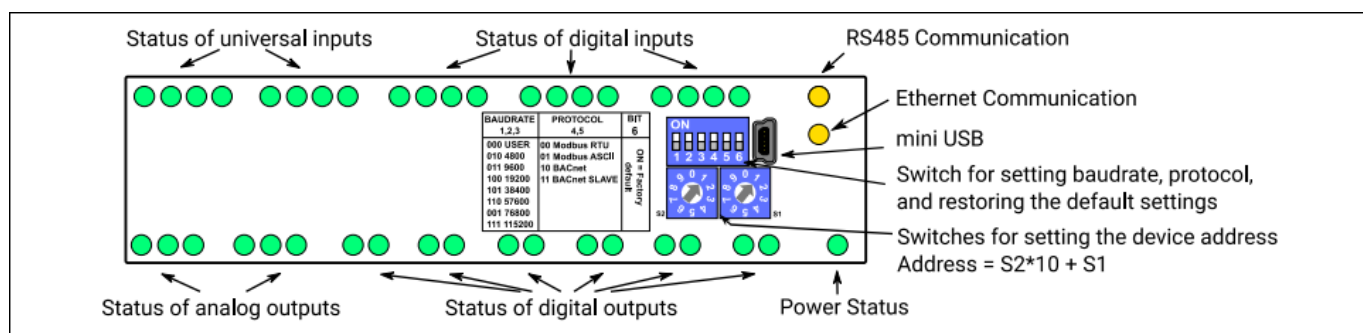


UNIVERSAL INPUTS				DIGITAL INPUTS
<b>Voltage measurement</b> 	<b>Current measurement</b> 	<b>Temperature measurement</b> 	<b>Dry contact</b> 	<b>Dry contact</b> 
DIGITAL OUTPUTS			COMMUNICATION	POWER SUPPLY
<b>Connection of electrovalve</b> 	<b>Connection of resistive load</b> 	<b>Connection of inductive load</b> 		
ANALOG OUTPUTS				
<b>0-10V output</b> 	<b>Connection of relay</b> 	<b>Connection of actuator</b> 		


## WARNING

- Note, an incorrect wiring of this product can damage it and lead to other hazards. Make sure the product has been correctly wired before turning the power ON.
- Before wiring, or removing/mounting the product, be sure to turn the power OFF. Failure to do so might cause electric shock.
- Do not touch electrically charged parts such as the power terminals. Doing so might cause electric shock.
- Do not disassemble the product. Doing so might cause electric shock or faulty operation.
- Use the product within the operating ranges recommended in the specification (temperature, humidity, voltage, shock, mounting direction, atmosphere etc.). Failure to do so might cause fire or faulty operation.
- Firmly tighten the wires to the terminal. Insufficient tightening of the wires to the terminal might cause fire.

## TERMINALS OF THE DEVICE

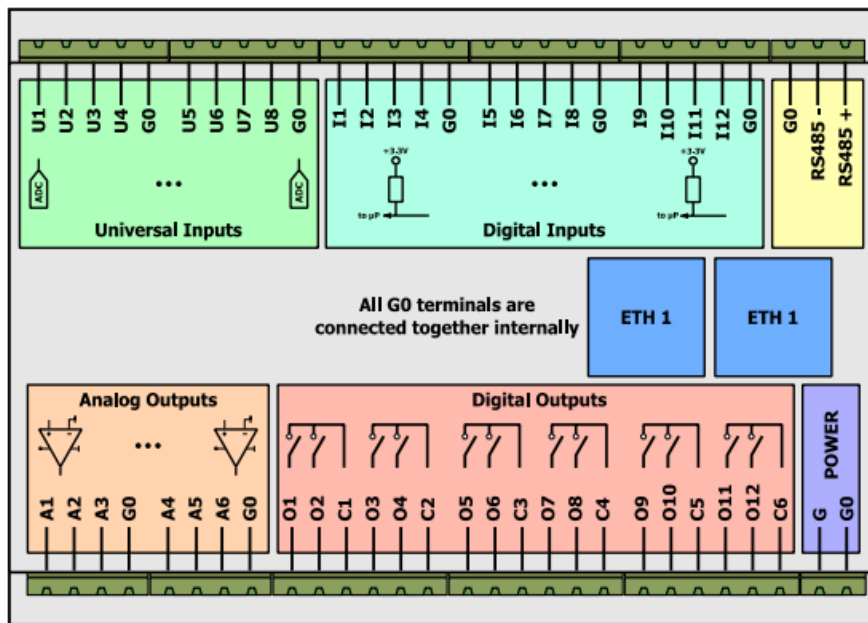

## RS485 BIASING RESISTORS

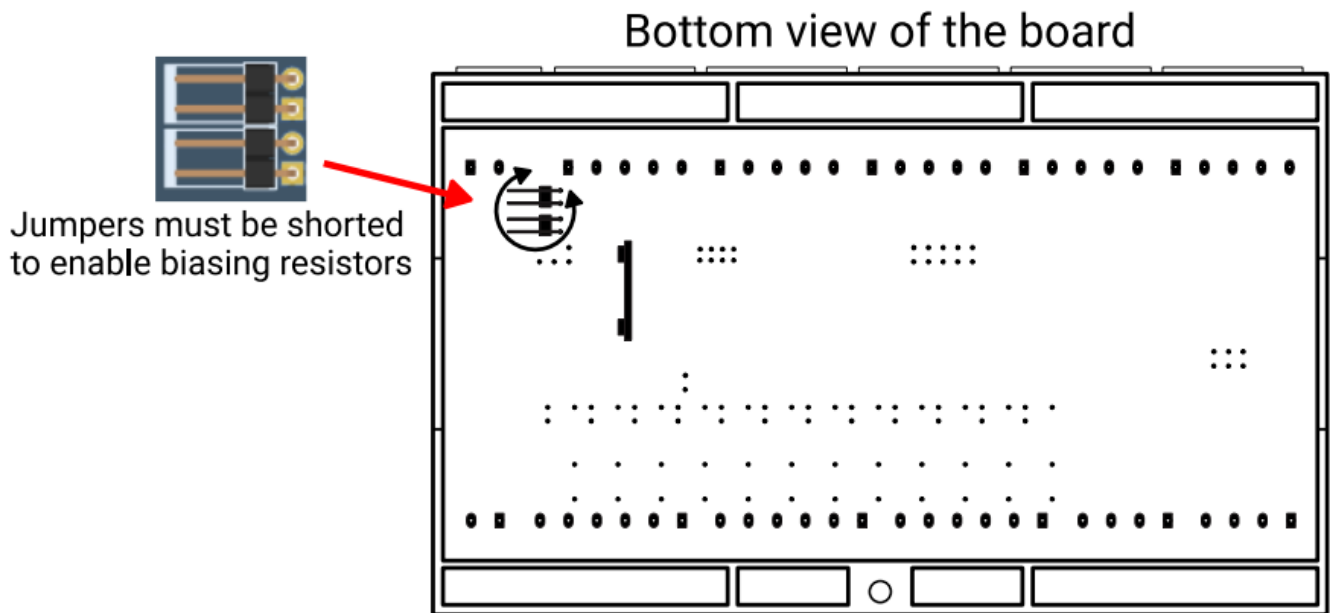

## POWER SUPPLY

### EN 60730-1 POWER SUPPLY CONSIDERATIONS

- Electrical safety in the building automation and control systems is essentially based on the use of extra low voltage which is strictly separated from the mains voltage. This low voltage is either SELV or PELV according to EN 60730-1.
- Protection against electric shock is ensured by the following measures:
  - limitation of voltage (low voltage AC/DC 24V supply, either SELV or PELV)
  - Protective separation of the SELV-system from all circuits other than SELV and PELV
  - simple-separation of the SELV-system from other SELV-systems, from PELV-systems and earth
- Field devices such as sensors, status contacts and actuators connected to the low-voltage inputs and outputs of I/O modules must comply with the requirements for SELV or PELV. The interfaces of field devices and other systems must also satisfy SELV or PELV requirements.

- When the supply of SELV or PELV circuits is obtained from supply mains of higher voltages it shall be provided by safety transformer or a converter designed for continuous operation to supply SELV or PELV circuits.

## FCC COMPLIANCE NOTE

**Note:** This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio/TV technician for help.

## WIRING

- Line power cables must be routed with spatial separation from signal and data transmission cables.
- Analog and digital signal cables should also be separated.
- It is recommended to use shielded cables for analog signals, cable shields should not be interrupted by intermediate terminals.
- The shielding should be earthed directly after the cable enters the cabinet.
- It is recommended to install interference suppressors when switching inductive loads (e.g. coils of contactors, relays, solenoid valves). RC snubbers or varistors are suitable for AC voltage and freewheeling diodes for DC voltage loads. The suppressing elements must be connected as close to the coil as possible.

## INSTALLATION GUIDELINE

Please read the instruction before use or operating the device. In case of any questions after reading this document, please contact the iSMA CONTROLLI Support Team ([support@ismacontrolli.com](mailto:support@ismacontrolli.com)).

- Before wiring or removing/mounting the product, make sure to turn the power off. Failure to do so might cause an electric shock.
- Improper wiring of the product can damage it and lead to other hazards. Make sure that the product has been correctly wired before turning the power on.
- Do not touch electrically charged parts such as power terminals. Doing so might cause an electric shock.
- Do not disassemble the product. Doing so might cause an electric shock or faulty operation.
- Use the product only within the operating ranges recommended in the specification (temperature, humidity, voltage, shock, mounting direction, atmosphere, etc.). Failure to do so might cause a fire or faulty operation.
- Firmly tighten the wires to the terminal. Failure to do so might cause a fire.
- Avoid installing the product in close proximity to high-power electrical devices and cables, inductive loads, and switching devices. Proximity of such objects may cause an uncontrolled interference, resulting in an instable operation of the product.


- Proper arrangement of the power and signal cabling affects the operation of the entire control system. Avoid laying the power and signal wiring in parallel cable trays. It can cause interferences in monitored and control signals.
- It is recommended to power controllers/modules with AC/DC power suppliers. They provide better and more stable insulation for devices compared to AC/AC transformer systems, which transmit disturbances and transient phenomena like surges and bursts to devices. They also isolate products from inductive phenomena from other transformers and loads.
- Power supply systems for the product should be protected by external devices limiting overvoltage and effects of lightning discharges.
- Avoid powering the product and its controlled/monitored devices, especially high power and inductive loads, from a single power source. Powering devices from a single power source causes a risk of introducing disturbances from the loads to the control devices.
- If an AC/AC transformer is used to supply control devices, it is strongly recommended to use a maximum 100 VA Class 2 transformer to avoid unwanted inductive effects, which are dangerous for devices.
- Long monitoring and control lines may cause loops in connection with the shared power supply, causing disturbances in the operation of devices, including external communication. It is recommended to use galvanic separators.
- To protect signal and communication lines against external electromagnetic interferences, use properly grounded shielded cables and ferrite beads.
- Switching the digital output relays of large (exceeding specification) inductive loads can cause interference pulses to the electronics installed inside the product. Therefore, it is recommended to use external relays/contactors, etc. to switch such loads. The use of controllers with triac outputs also limits similar overvoltage phenomena.
- Many cases of disturbances and overvoltage in control systems are generated by switched, inductive loads supplied by alternating mains voltage (AC 120/230 V). If they do not have appropriate built-in noise reduction circuits, it is recommended to use external circuits such as snubbers, varistors, or protection diodes to limit these effects.

Electrical installation of this product must be done in accordance with national wiring codes and conform to local regulations.

Follow us on: [Linked in](#) /[bmetersuk](#)



B METERS UK [www.bmetersuk.com](http://www.bmetersuk.com)

## Documents / Resources

	<p><b><a href="#">B METERS UK B-MIX38-IP Mix Input Output Module with IP Connectivity</a></b> [pdf] Instruction Manual</p> <p>B-MIX38-IP, B-MIX38-IP Mix Input Output Module with IP Connectivity, B-MIX38-IP, Mix Input Output Module with IP Connectivity, Input Output Module with IP Connectivity, Output Module with IP Connectivity, Module with IP Connectivity, with IP Connectivity, IP Connectivity, Connectivity</p>
---	---

## References



-  [BMETERS UK | Next Day Delivery | Birmingham](#)
-  [iSMA CONTROLLI S.p.A.](#)
- [User Manual](#)

[Manuals+](#), [Privacy Policy](#)

This website is an independent publication and is neither affiliated with nor endorsed by any of the trademark owners. The "Bluetooth®" word mark and logos are registered trademarks owned by Bluetooth SIG, Inc. The "Wi-Fi®" word mark and logos are registered trademarks owned by the Wi-Fi Alliance. Any use of these marks on this website does not imply any affiliation with or endorsement.