



 
BaLDR B0359WST4H4PR Wireless Color Weather Station with 3 Remote Sensors User Guide

[Home](#) » [BALDR](#) » BaLDR B0359WST4H4PR Wireless Color Weather Station with 3 Remote Sensors User Guide



BALDR

B0359WST4H4PR Wireless Color Weather Station with 3 Remote Sensors
User Guide

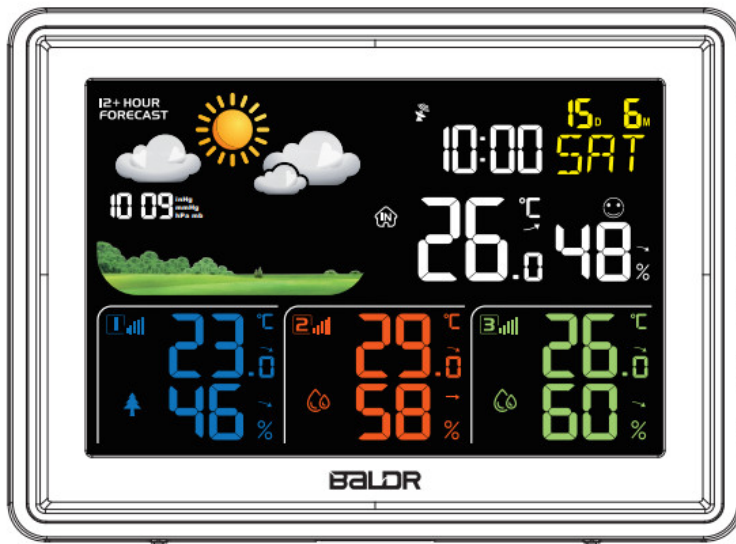


MODEL: B0359WST4H4PR
WIRELESS COLOR WEATHER STATION WITH 3 REMOTE SENSORS

Contents


- [1 POWER ON](#)
- [2 MAIN UNIT SETUP](#)
- [3 No RCC Radio Signal Received](#)
- [4 Manual setup](#)
- [5 SETUP ORDER](#)
- [6 Documents / Resources](#)
 - [6.1 References](#)
- [7 Related Posts](#)

POWER ON


Main Unit Installation

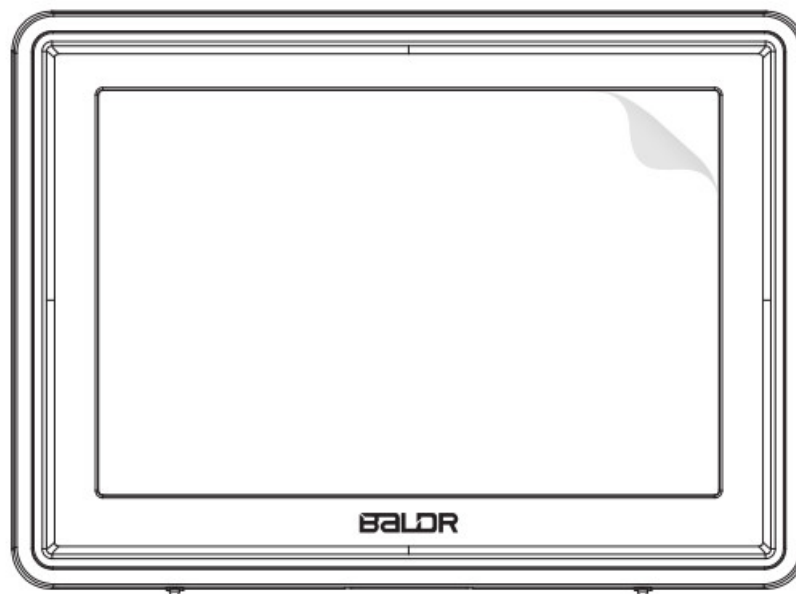

 Step1, Peel off the protecting mask of the main unit.

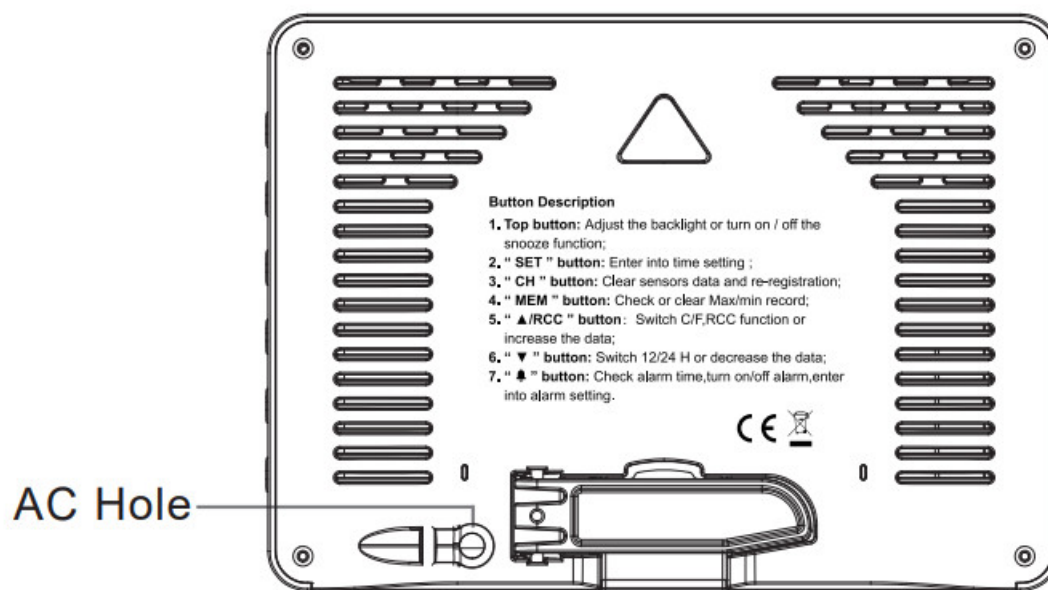


Step 2, Plug the AC Adaptor to a powered outlet.

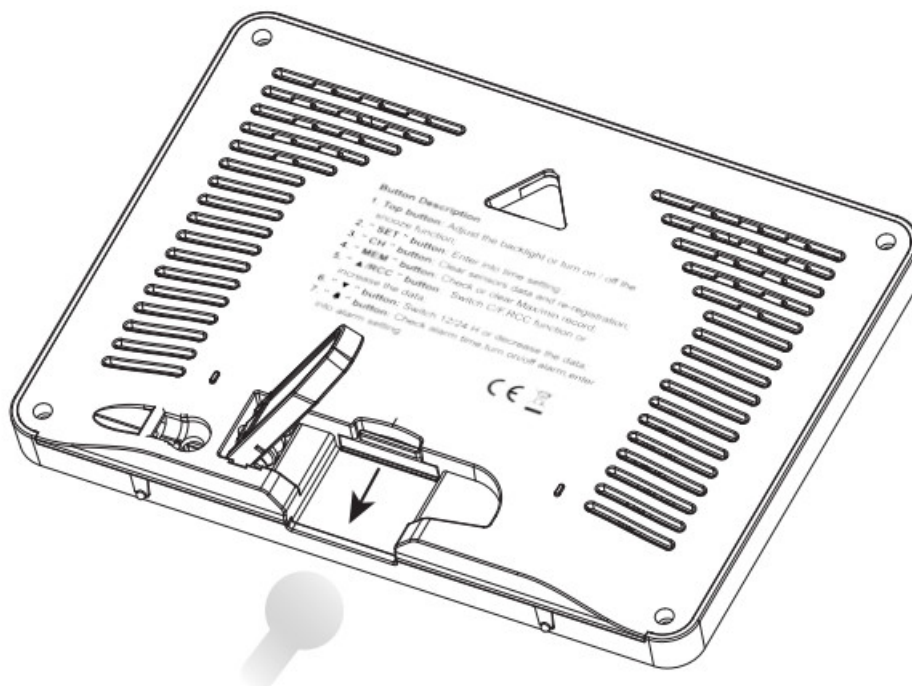


Step 3, Remove the built-in cell battery insulation strip.

Sensor Installation

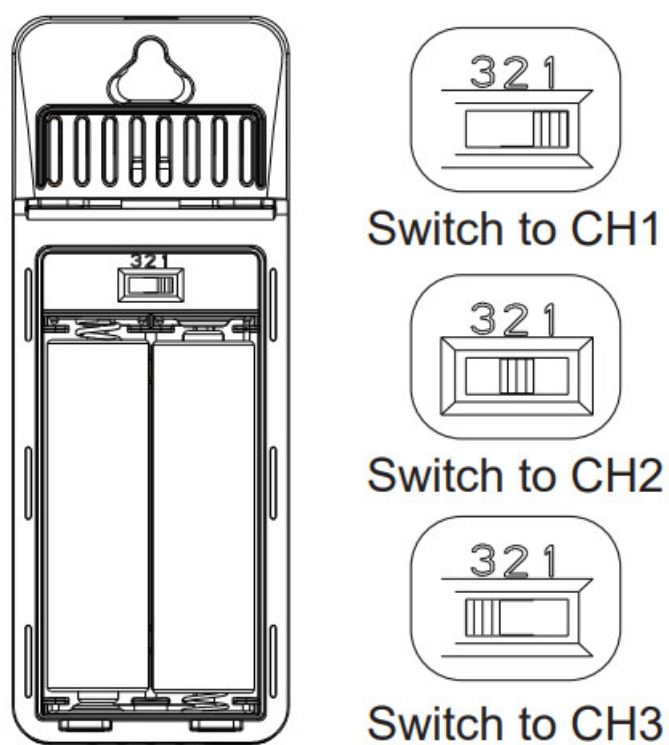


Step 1, Select the channel on each sensor

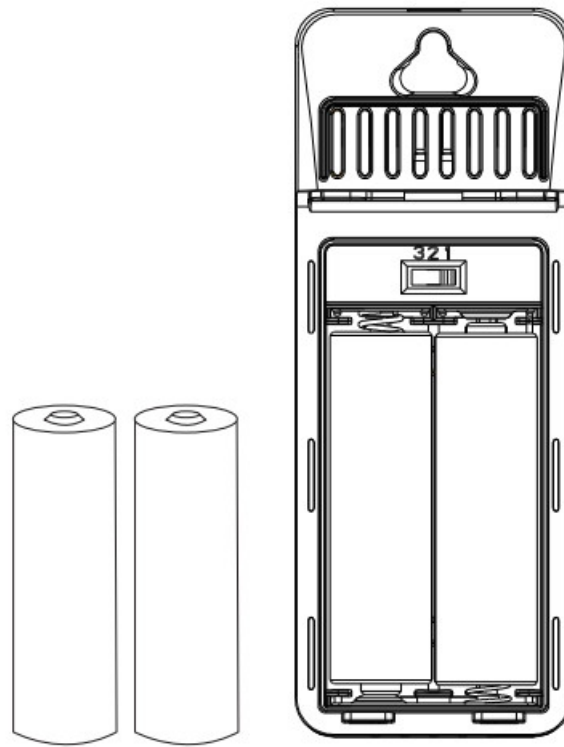

Step 2, Load the 2xAA batteries to each sensor within 3 minutes to ensure the RF signal is received in time.

NOTE:

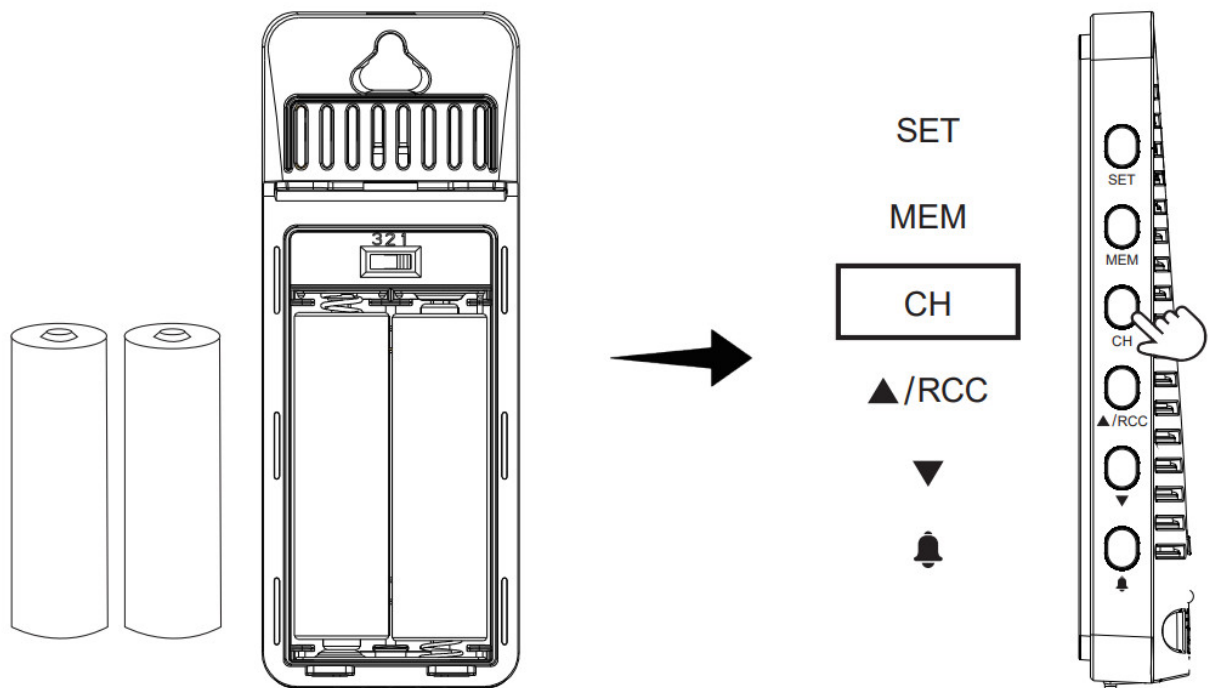


If not powered on within 3 minutes from the main unit powered on.
Press and hold the “CH” button for 3 seconds to search the RF signal again.


MAIN UNIT SETUP

After Power On

LCD will fully display for 3 seconds with a “BI” sound.

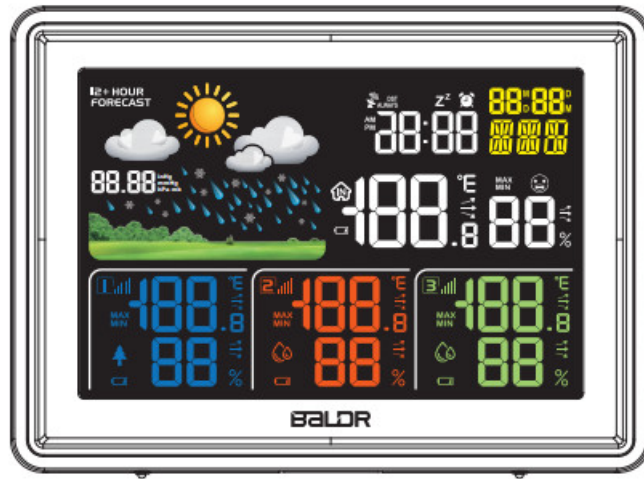


 After 3 seconds, the LCD will display the data below

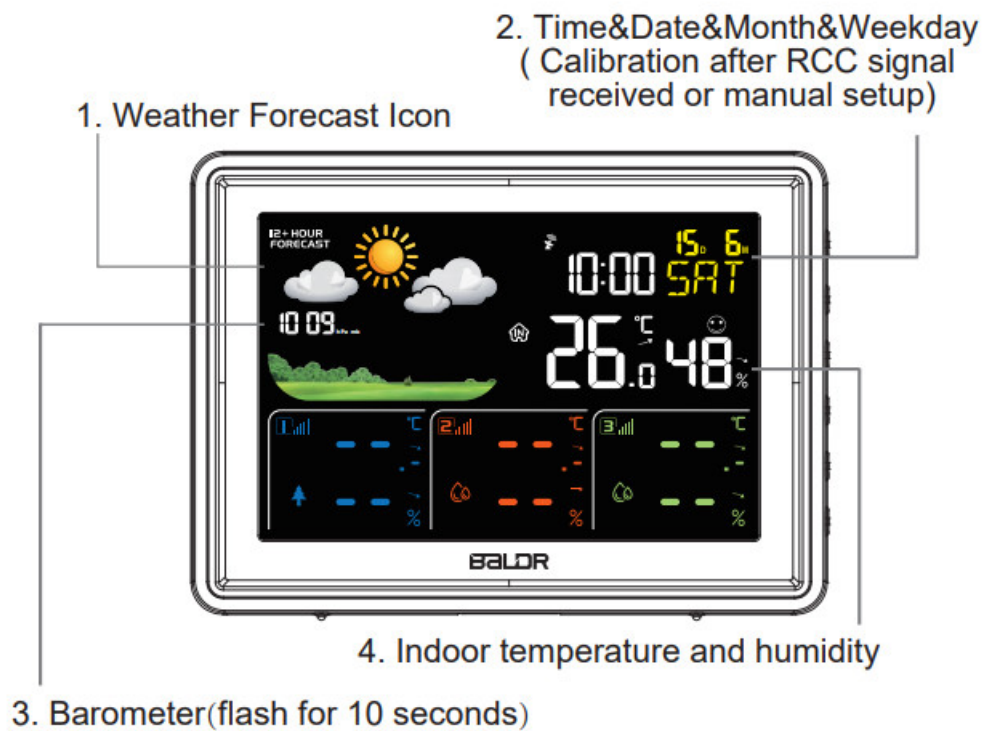

RF Signal Searching

The receiving antenna signal will flash

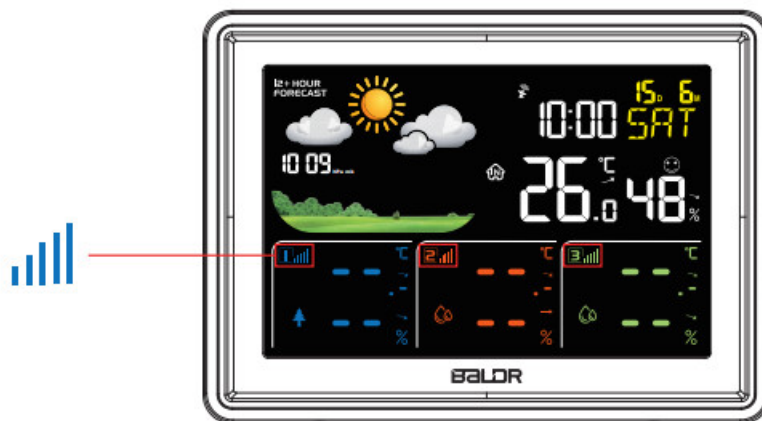

RF Signal Received

Automatically display, and the antenna signal will stop flashing.



 
Outdoor
datas


RCC Radio Signal Receiving Automatically

RCC Radio Signal Searching for 7 Minutes




Antenna Signal

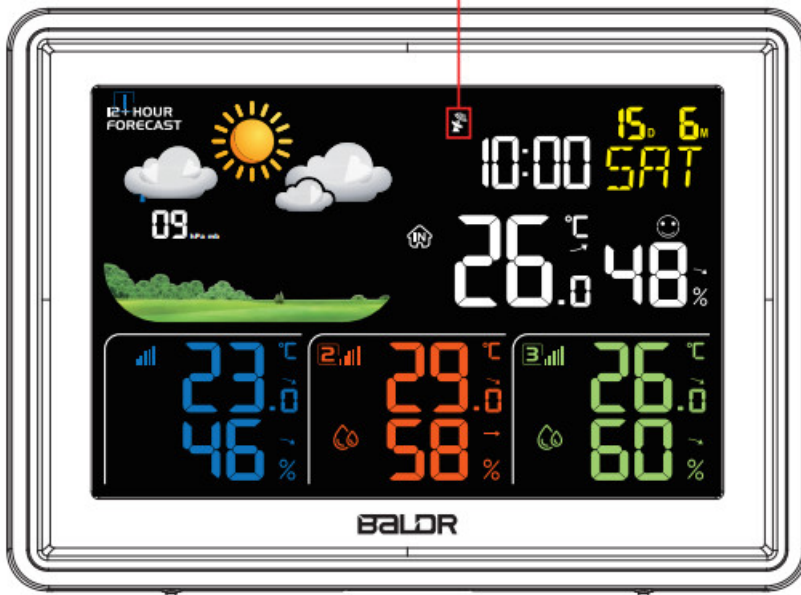


The antenna symbol  is flashing.


The backlight brightness will go dim to 3% and no buttons except ▲/RCC will function.

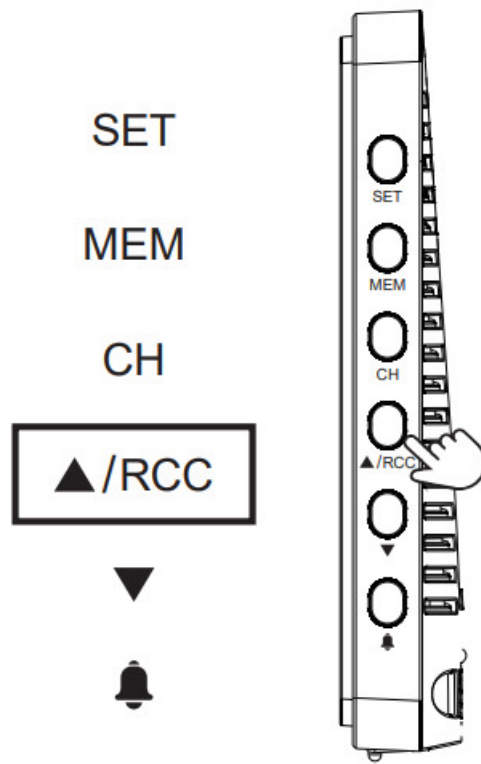


Press & hold the ▲/RCC button will allow exiting the Atomic mode to continue manual setup.

No RCC Radio Signal Received

 
The antenna symbol  will disappear

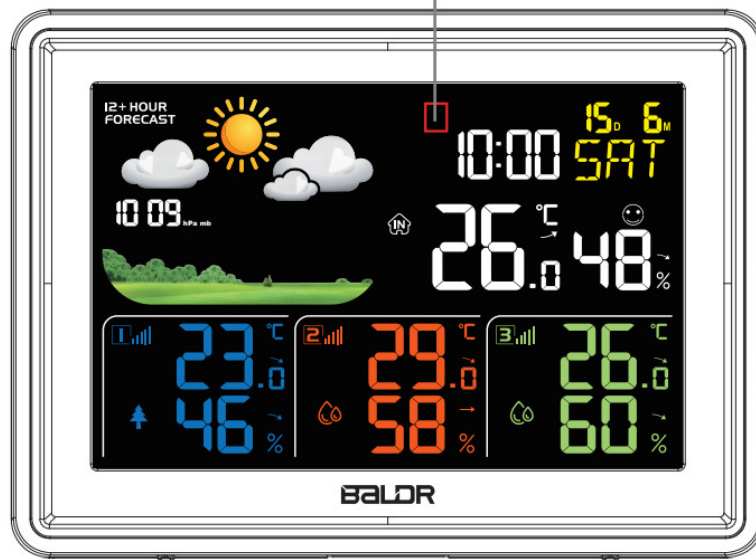

Press and hold “▲/RCC” button for 3 seconds to search RCC radio signal again

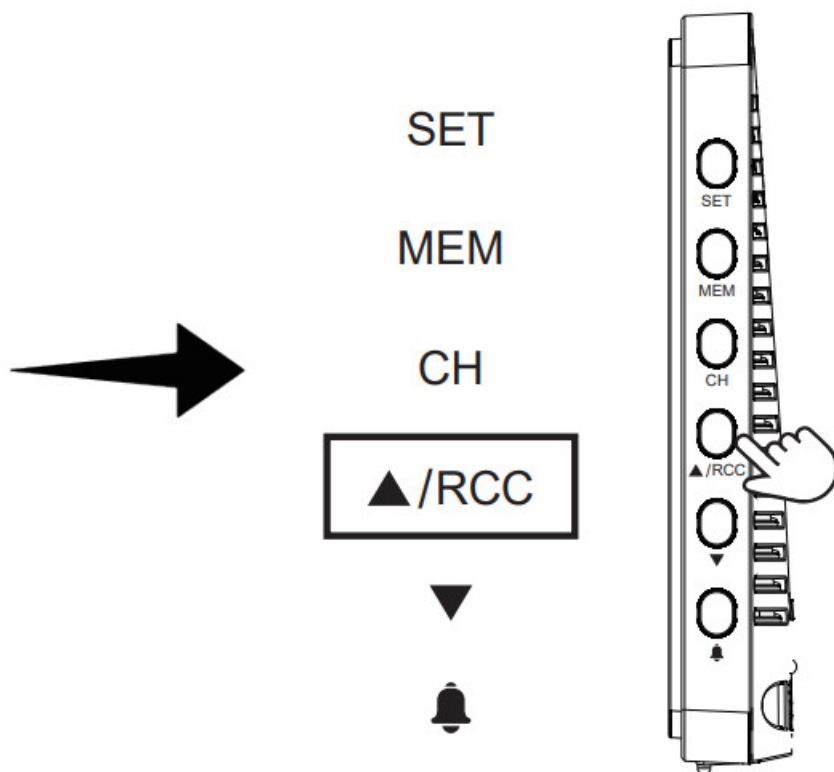


Manual setup

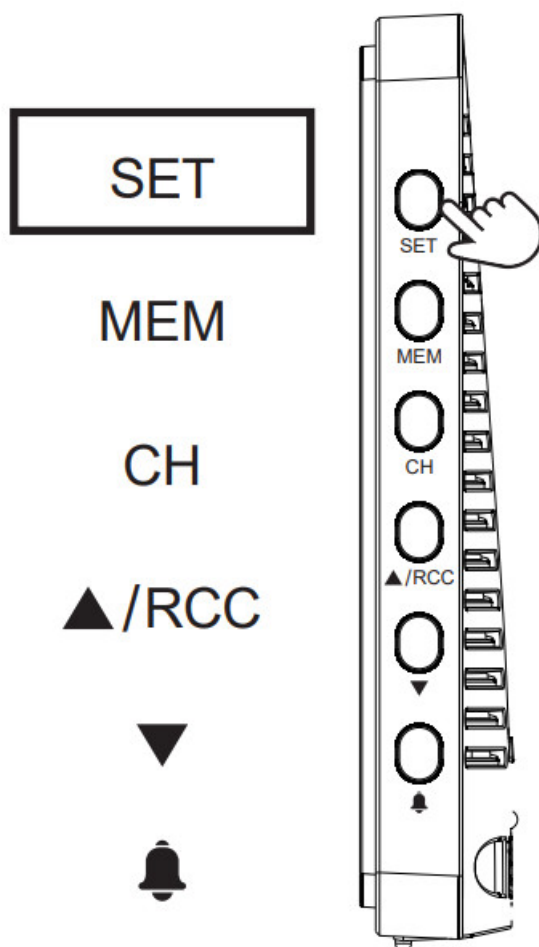

- Press and hold “SET” button to enter into setup (3 seconds).
- Press and release “SET” button to skip setting or go to next setting option(1 second).

SETUP ORDER

<u>1</u> Weekday Language	<u>2</u> Hours	<u>3</u> Minutes
<u>4</u> Year	<u>5</u> Month&Date display format	<u>6</u> Month
<u>7</u> Date	<u>8</u> Barometer Unit	<u>9</u> RCC ON/OFF
<u>10</u> Time Zone	<u>11</u> DST ON/OFF (ONLY FOR US VERSION)	<u>12</u> Weather

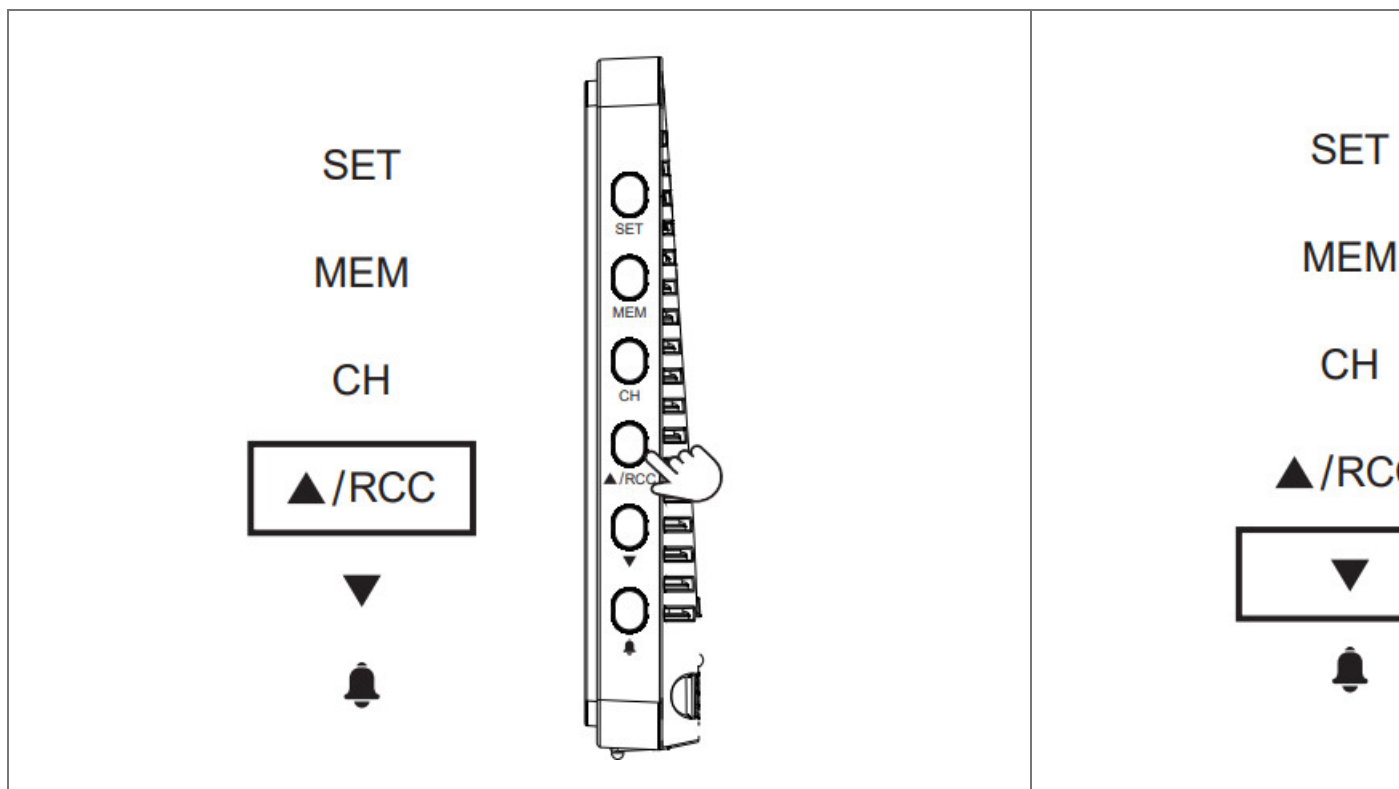

*Tips: press and hold “▲/RCC” or “▼” button will quickly change the value.

This Qucik Start is to help you quickly set up the product. For detailed settings, please refer to the user manual, or scan the QR code below for relevant product information and operation video link. Thank you.

BALDR




<http://www.baldr.com/>
www.baldr.com

✉ baldrservice@baldr.com

☎ 1-833-381-5659

Documents / Resources

	<p>BaLDR B0359WST4H4PR Wireless Color Weather Station with 3 Remote Sensors [pdf] User Guide</p> <p>B0359WST4H4PR Wireless Color Weather Station with 3 Remote Sensors, B0359WST4H4PR, Wireless Color Weather Station with 3 Remote Sensors</p>
--	---

References

- [B Baldr builds smart devices to connect your home!](#)